





FITTING INSTRUCTIONS

HILUX 8th GEN DUAL CAB REARS

Please note: To fit these seat covers you will have to unbolt the seat.

THINGS REQUIRED



Socket wrench

12 mm socket piece

Socket wrench extension (50 mm or more)


Key/buckle or thin metal object




Ideally 2 people to fit, can be done with 1 capable person.

During fitment do not pull excessively on velcros, breaking them will void warranty.


HOW TO UNBOLT THE REAR SEAT

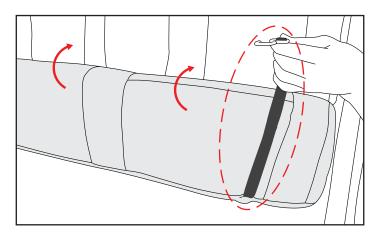

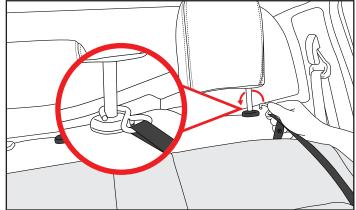


Step 1: Pull the seat release strap at the front of each of the cushions and fold the 60% and 40% cushions upwards. You can use the seat release strap to hold the seat cushions up - wrap them around the headrest poles and hook it to itself. This helps with gaining access to the bolts in the next step.


HOW TO UNBOLT THE REAR SEATS

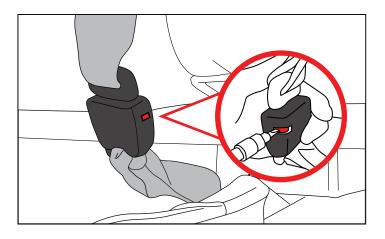


Step 2: Remove centre seat belt from buckle under seat cushion.

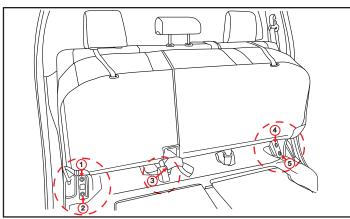

Step 3: Use a socket wrench to undo the 5 bolts underneath the cushion. Put the bolts somewhere accessible as you will need them to bolt the seat back.

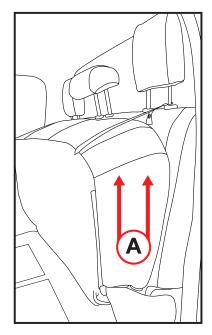

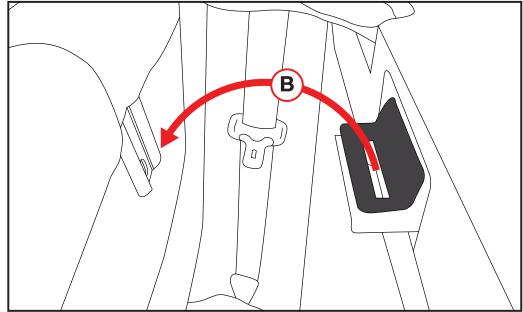


Step 4: Holding the seat by the bar at the bottom, push the seat upwards (A) to remove it from the two hooks from which it's held on the back wall (B).

This can be done with one person kneeling in the cab, but is much easier with two people holding the seat from the outside of either side of the vehicle.

Step 5: Once the seat is released from the hook points, bring it forward so you can reach behind the backrest. It is okay to leave the seat leaned forward in the cab while fitting the seat cover backrest.

We strongly advise leaving the rear seat in the cab. It is possible to fully remove the seat from the vehicle, but you have to be extremely careful to damage the interior OR exterior of the car while doing this.

HOW TO UNBOLT THE REAR SEATS

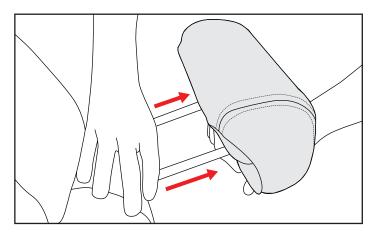


Step 6: Remove the rear seat headrests.


BACKREST COVER INSTALLATION

HEADREST COVER INSTALLATION

Step 1: Fitting the headrest covers: for neoprene covers you will need to turn the cover inside out, align the seams and then roll the cover over the headrest. Canvas covers do not need to be turned inside when fitted.

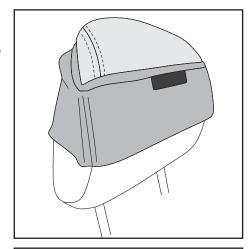

Step 2: Attach the velcros on the underside of the headrest if applicable. Do not put headrests back into the seat, store them somewhere while the rest of the parts are being fitted.

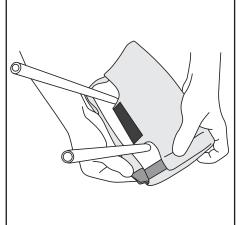


BACKREST COVER INSTALLATION


BACKREST INSTALLATION


Step 3: IMPORTANT: Pass the backrest cover in-between the seat backrest and the seatbelt.

NOTE:

  
If you have followed step 2, the seatbelt may not be in the way at this point.

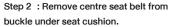

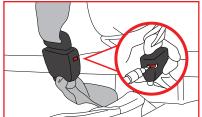


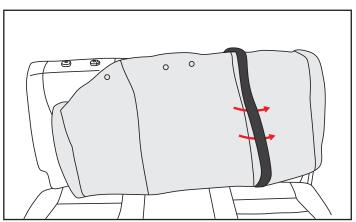


Step 4: Fit the cover over the shoulders of the backrest.

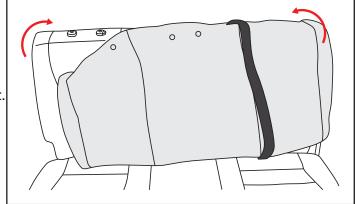

Step 5: Push the cover underneath the headrest hole plastics. This will help line up the backrest cover with the rest of the seat.

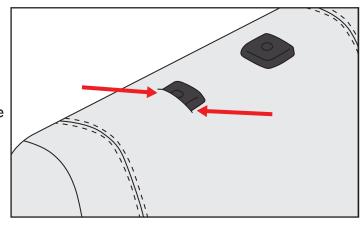


Step 6: There are 6 plastic clips on the original seat trim that need to be unclipped. Replace them with the seat cover clips. It is fine to leave the original trim clips unclipped as everything will be held in place by the cover.

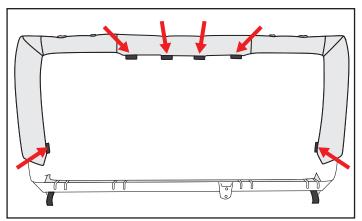

BACKREST COVER INSTALLATION


Step 7: Undo the horizontal velcros on the cover that come pre-connected near the seat buckle areas.

You will not be able to complete the next step if this is not completed.

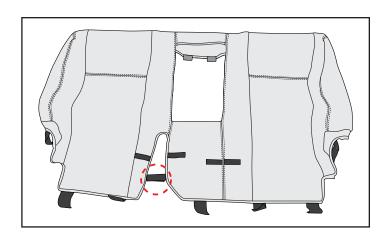


Step 8: There is a metal tube that runs the width of the rear seat in between the gap of the backrest & the seat cushion. When passing the seat cover through this gap, the seat cover must run **ABOVE** the tube.

If the seat cover backrest is fed BELOW the tube, the velcros will not reach the back of the seat and the ISOFIX points will be covered

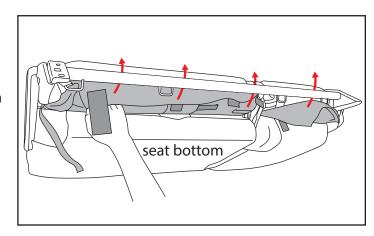


Step 9: Check that the backrest cover is fed above the tube at the back. Remove the velcro protectors and fasten the velcros to the carpet at the back of the rear seat.


Do not pull on velcros

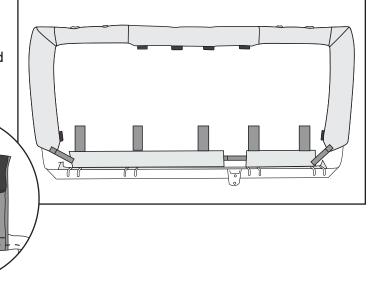

BACKREST COVER INSTALLATION


PUT THE BACKREST BACK

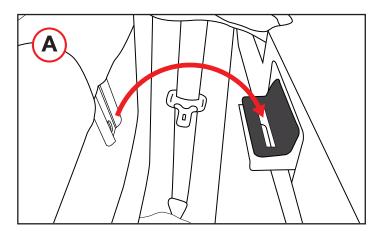

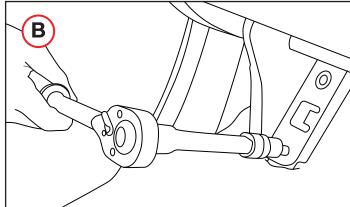


Check that all the attachments on the seat cover are secured correctly to the seat, in the next step we put the backrest back in place and you will not be able to access any of the plastic clips or velcros you have just fastened.

Use a socket wrench to do up the 5 bolts underneath the cushion. Make sure the bolts are done up firmly, but do not over tighten

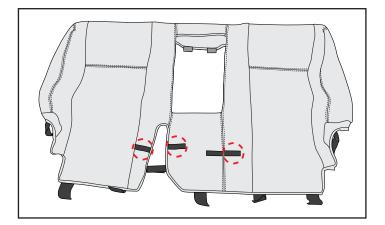

Step 10 : Put the buckles back up between the backrest and cushion, feeding them through the elastic loops as you go.

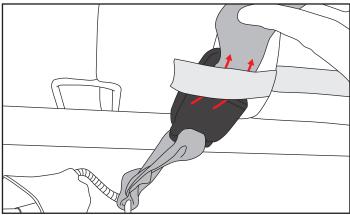


Step 11: Re-attach the middle seat belt through the elasticated holder on the seat cover

CUSHION COVER INSTALLATION


SEAT CUSHION INSTALLATION

Step 1: Fitting the seat cushion. Pull the seat cover over the front of the seat cushion, aligning the seams as you go.

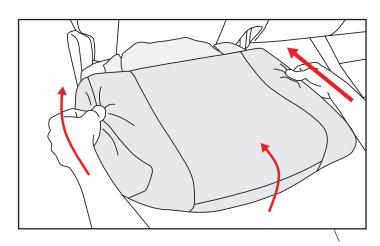

Step 2: Fit the seat cover the sides of the seat cushion and then push the cover through the gap between the seat backrest and cushion.


When doing so, ensure you don't fit the seat cover around the metal tube

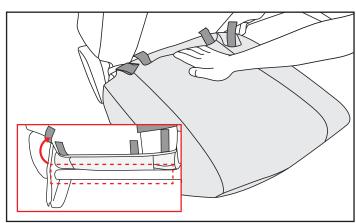

Step 3: Remove the Velcro protectors from the hook part of the Velcro and attach to carpet on the underside of the seat cushion, tensioning the material in the seat cover as you go for better fitment.

Step 4: Repeat steps 1-3 for the other side of the seat cushion

Do not pull on velcros

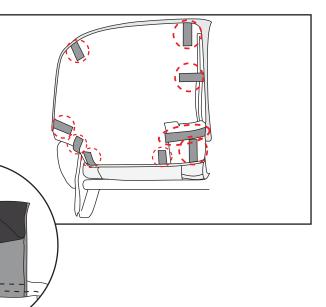


ARMREST COVER INSTALLATION


ARMREST COVER INSTALLATION

Step1: Fold down the armrest.

Step 2: Canvas covers do not need to be turned inside out, if fitting neoprene turn the cover inside out and roll it over the armrest.

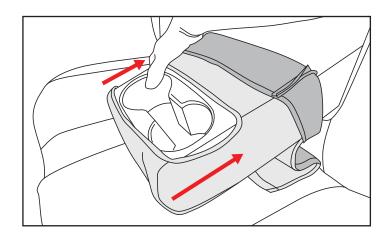

Step 3: Push the armrest cover into the gap at the bottom of the armrest. You can push the cover all the way through this gap so it is visible on the top side.

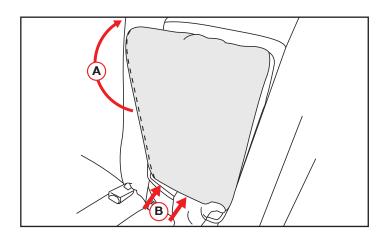

Step 4: Remove the velcro protector and connect the velcros together. Finesse the material to fit as best as possible before folding the armrest back up.

