



FITTING INSTRUCTIONS

TOURER FITTING GUIDE

! WARNING !

"Improper installation of airbag covers may result in serious injury or death. These covers are specifically designed to allow airbags to deploy correctly in the event of an accident. Incorrect fitting can restrict deployment, compromising safety. Failure to follow the installation instructions may also void your warranty."


During fitment do not pull excessively on velcros, breaking them will void warranty.

SEAT PREP COVER INSTALLATION



This fitting can be completed
with 1 person.

SEAT PREP COVER INSTALLATION

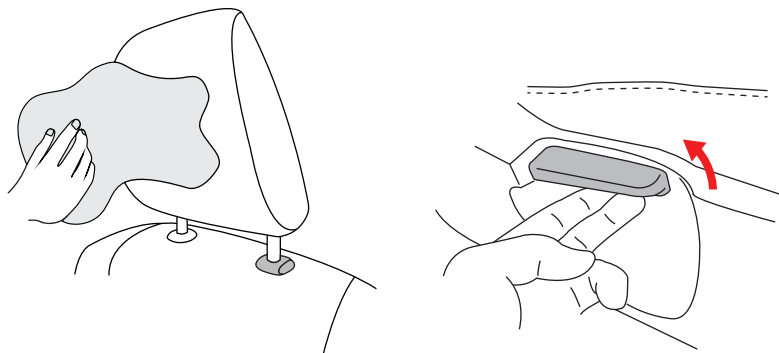


Step 1 : Clean the seats, put the seat in the highest position if possible.


HEADRESTS COVER INSTALLATION

Step 1 : Remove the headrests - press the button/s at the base of the headrest tube while pulling the headrest up.


*Some headrests have a second button to release the headrest. Use a small screwdriver and press in the second button while pulling up on the headrest to release.

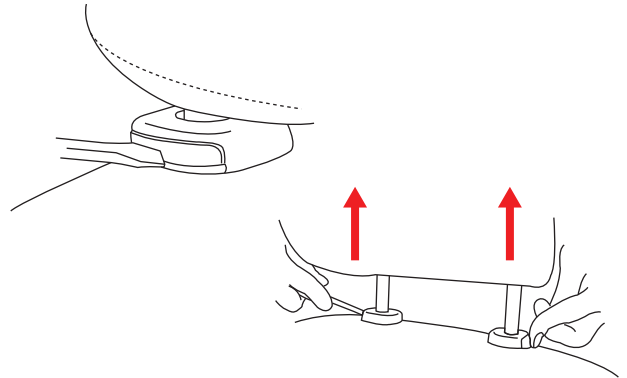

Step 2 : Slide the headrest cover over each headrest. Make sure the cover is not twisted by lining up the seam lines of the headrest with seams lines on the cover. Securely fasten the underside Velcros together.

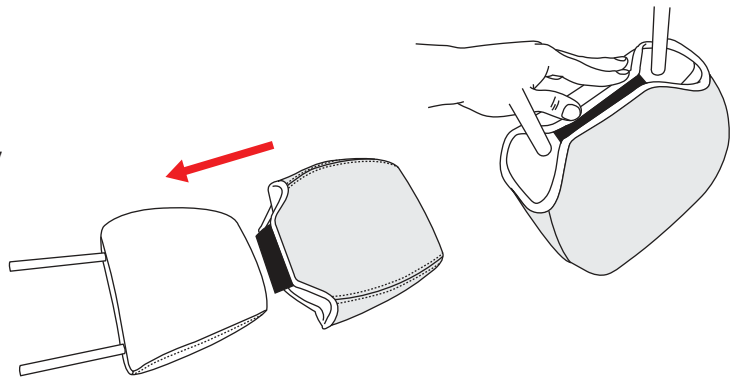


Step 3 : Put the headrest aside and repeat for other headrest.

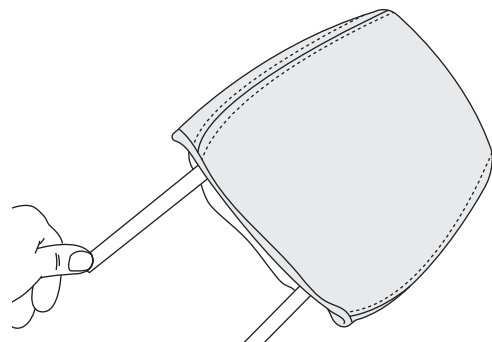


CUSHION COVER ISNTALLATION

Notes : You have to do the cushion first, as the hex discs from the backrest make the cushion hard to fit if they're in position first.


Step 1 : Put the seat cushion in its highest position, this makes it easier to fasten the cinch straps underneath.

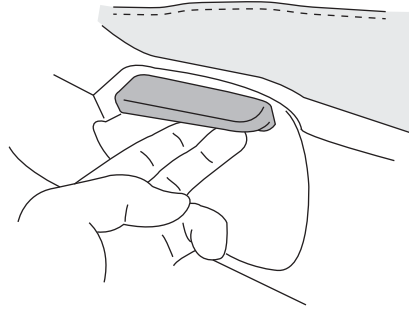


Step 2 : Identify the passenger and driver seat cushion by the white label on the back of each cushion seat cover.

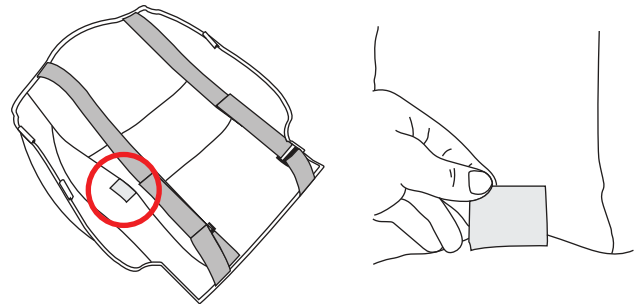

Step 3 : Place the cushion cover of the seat cushion. Push the connecting straps at the rear of the cushion cover in the gap between the backrest and the cushion.

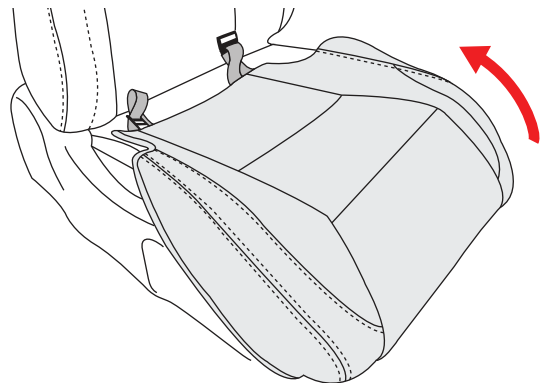


Step 4 : From the rear, hold the loop and pull the cover through the gap.

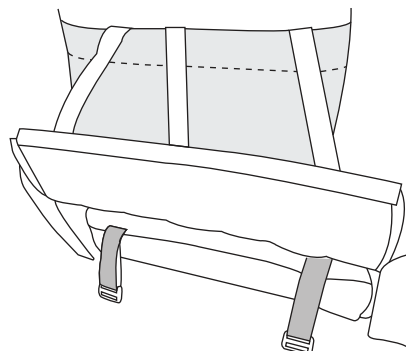


CUSHION COVER INSTALLATION


Step 5 : At the front of the seat, run the cinch straps underneath the cushion towards the buckles at the rear, being careful to avoiding any of the electrics and moving parts.

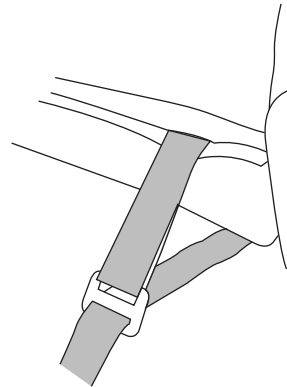


Step 6 : From the rear, fasten the cinch strap at the rear of the seat.

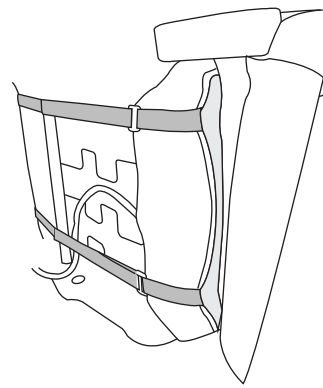

Step 7 : On the outer side of the seat push the plastic j-clips down into the plastic shroud.

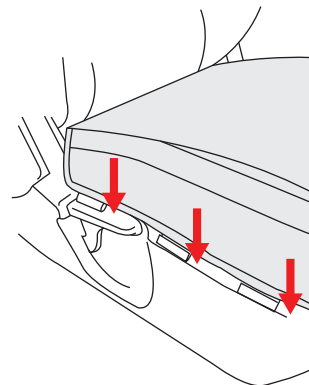


Step 8 : Adjust the cover so that none of the existing seat is showing. This may require undoing the cinch straps and pulling the cover further through the gap for a better fit.

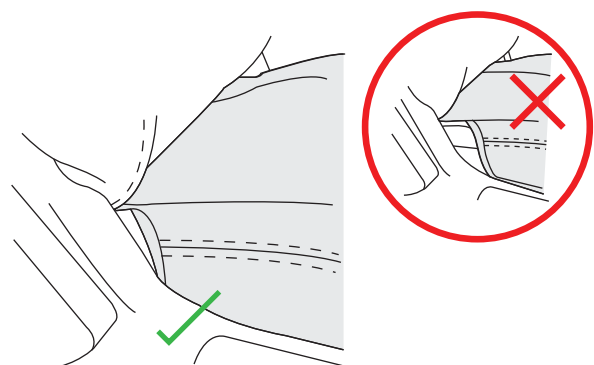


BACKREST COVER INSTALLATION


Step 1 : Rotate each backrest fully forward. Any dials or levers will need to be put in their upright or regular position.

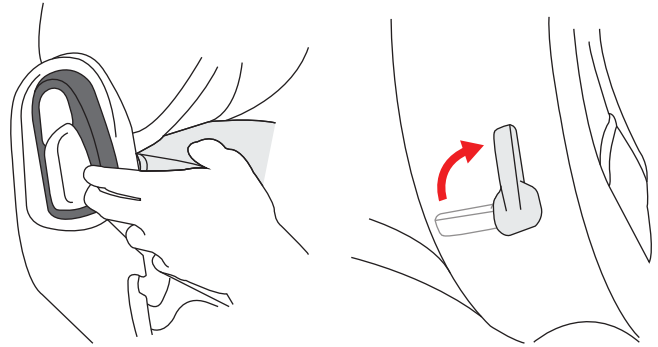


Step 2 : Identify if the cover is for the passenger or driver seat by looking at the white tag on the inside of the cover.

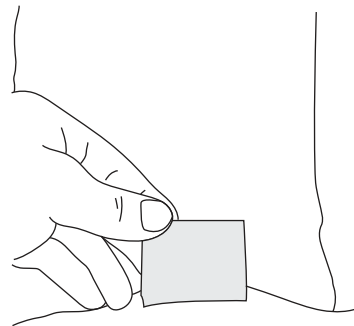


Step 3 : Slide the backrest cover over the backrest.

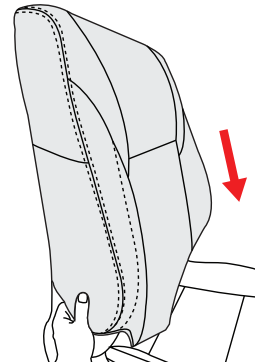


Step 4 : Locate the hex discs and push them through from the front of the seat as shown. Then, from the back of the seat, use two fingers to pull the hex discs fully through

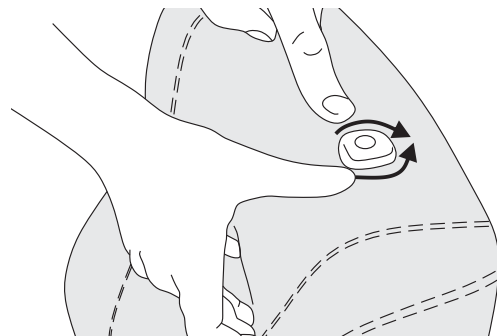

BACKREST COVER INSTALLATION

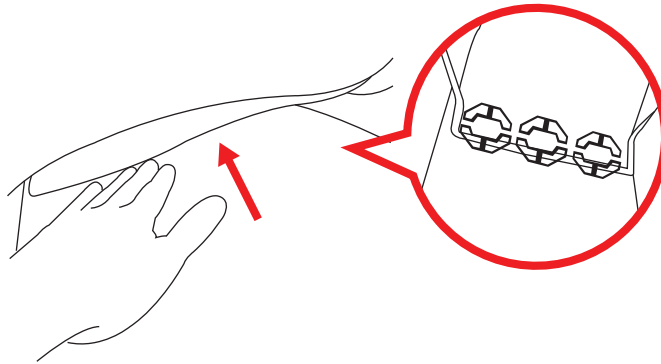

Step 5 : Locate the hex discs and push them through the gap between the backrest and cushion from the front of the seat as shown.

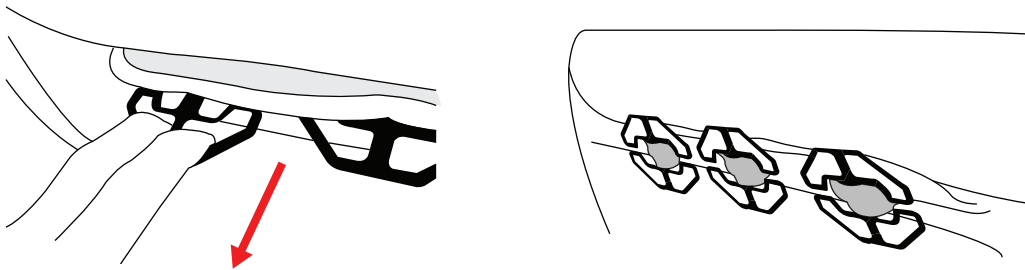

Step 6 : From the back of the seat, use two fingers to pull the hex discs fully through and Place them across the seat backrest and cushion gap, it is important to centre them across the gap as best as possible.