



# FITTING INSTRUCTIONS

## TWILL FITTING GUIDE



Fitting Time 40 Minutes

## SAFETY AND MAINTENANCE

### WARNING

Razorback 4x4 seat covers comply with strict Australian Design Rules (ADR) safety standards.

If car seat covers are not installed exactly as instructed Razorback 4x4 accepts no liability for any injuries or damages that occur as a result of improper fitment.


#### Always :

- Install covers **exactly as instructed** in the manual.
- Fit to the **correct seats and vehicle model**.
- Ensure car seats are **clean and dry** before installation.
- Use **only your hands** — no sharp tools.
- Contact Razorback 4x4 support for installation issues.

#### Never :

- Expose to **naked flames**, extreme heat, or harsh chemicals.
- Machine wash, dry clean, or use bleach/ammonia-based cleaners.


## SEAT PREP

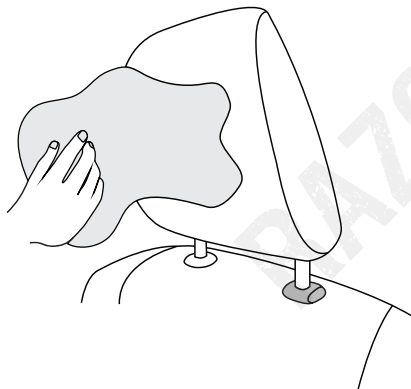


Step 1 : Clean the seats.

# HEADRESTS COVER INSTALLATION


Step 1 : Using a screwdriver, press in the smaller button on the left clip. While the left button is being held in, press the clip in on the right-side post and lift to remove the headrest.

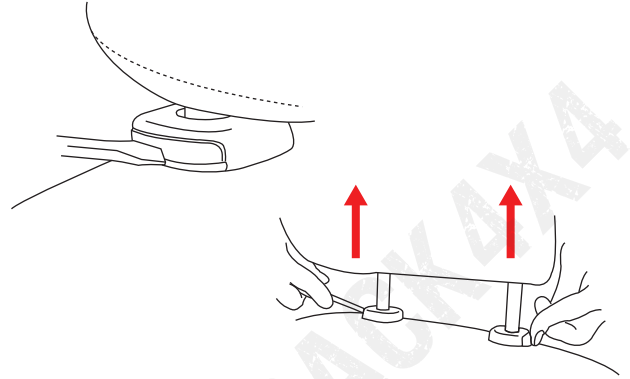

Step 2 : Slide the headrest cover over each headrest. Make sure the cover is not twisted by lining up the seam lines of the headrest with seams lines on the cover.

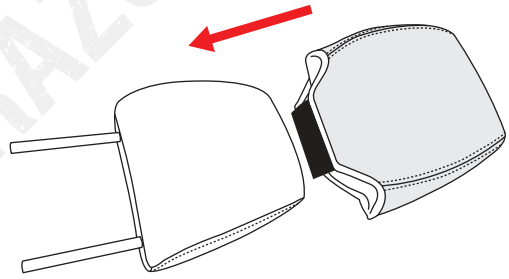


Step 3 : Securely fasten the underside Velcro together and put the headrests aside.

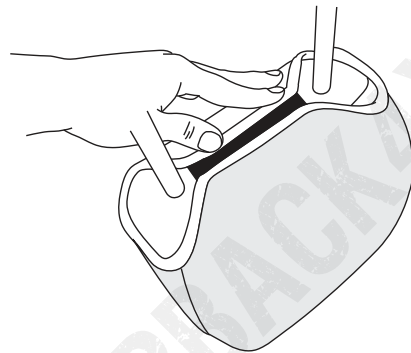

# CUSHION COVER INSTALLATION

**Note: Fit the cushion before the backrests for ease of installation.**


Step 1 : Put the seat cushion in its highest position, this makes it easier to fasten the cinch straps underneath.

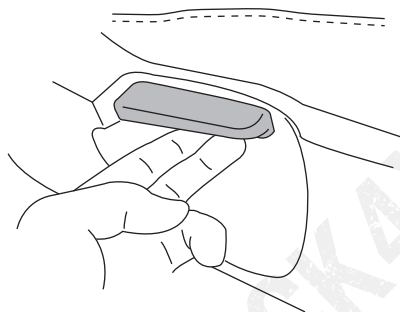


Step 2 : Identify the passenger and driver seat cushion cover by the white label on the back of each cover. Make sure the driver cushion cover is on the driver seat and passenger cushion cover is on the passenger seat – otherwise they won't fit properly!



Step 3 : Place the cushion cover on the seat cushion. Push the tail of the cushion cover in the gap between the backrest and the cushion until you can see the tail and the loops from the rear. From the rear, hold the loops and pull the cover through the gap.

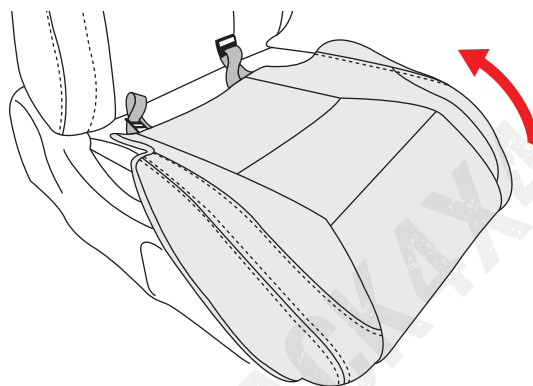


Step 4 : From the rear, hold the loop and pull the cover through the gap.

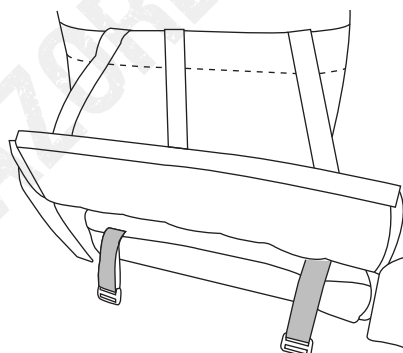


# CUSHION COVER INSTALLATION

Step 5 : From the front – feed the Velcro cinch strap under the seat so you can see from the back.


**WARNING:** Make sure the straps sit above any moving parts of the seat. Incorrectly placed cinch straps may cause your cover to be damaged when adjusting your seat.

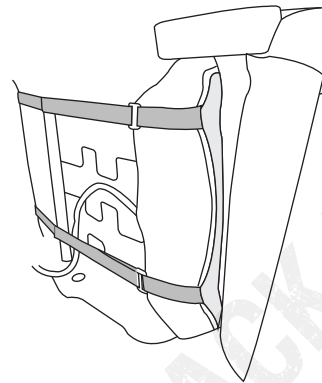


Step 6 : From the rear – Loop the cinch strap through the buckle and securely fasten.

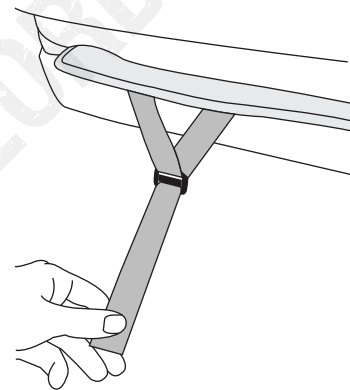

Step 7 : On the side of the seat, push the plastic J-Clips in the gap between the plastic shroud and seat.

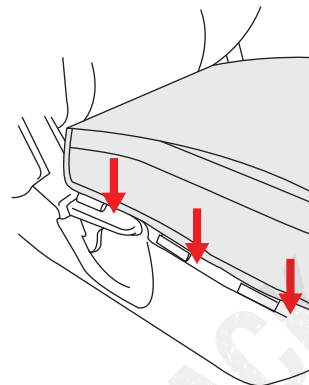

Step 8 : Adjust the cover so that none of the existing seat is showing.

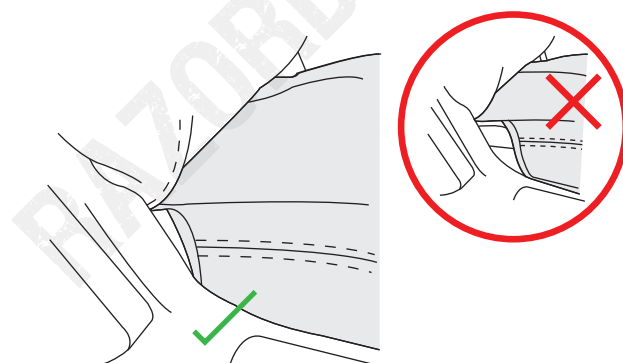


**Repeat steps 3-8 for the other backrest cover.**




# BACKREST COVER INSTALLATION

Step 1 : Rotate the backrest fully forward and locate the Lumbar adjustment lever and put in the upright position.

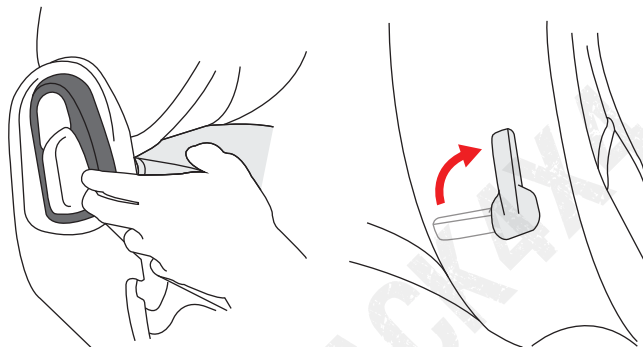


Step 2 : Identify the passenger and driver backrest covers by the white label on the inside of each cover. Make sure the driver cover is on the driver backrest and passenger cover is on the passenger backrest.


**WARNING:** All Razorback 4x4 seat covers come with a certified Airbag seam that must be placed correctly to ensure the safety of everyone in the vehicle.

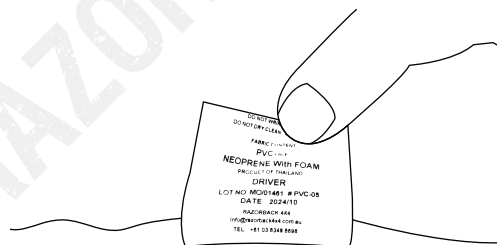

Step 3 : Unzip the zip on the back of the cover and place the cover over the backrest. If the cover doesn't have zip. Slide the cover in and adjust the cover to place the backrest.

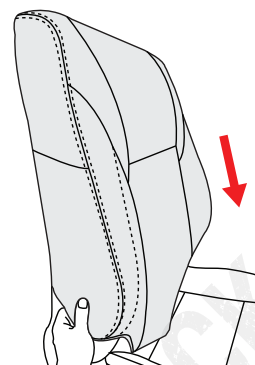


Step 4 : Work the seat cover headrest holes under the plastic clips at the top of the seat.

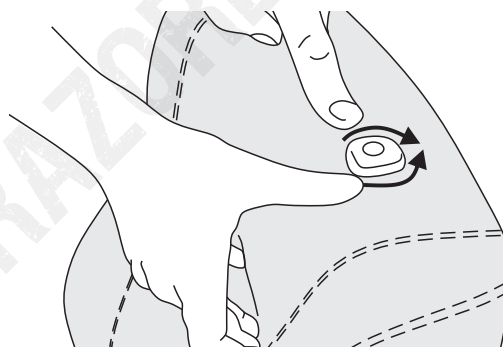


# BACKREST COVER INSTALLATION


Step 5 : Locate the hex discs and push them through from the front of the seat as shown. Then, from the back of the seat, use two fingers to pull the hex discs fully through.

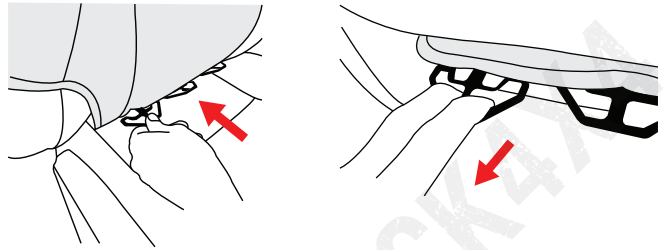


Step 6 : Space the hex discs evenly across the seat backrest and cushion gap. It is important to centre them across the gap as best as possible.

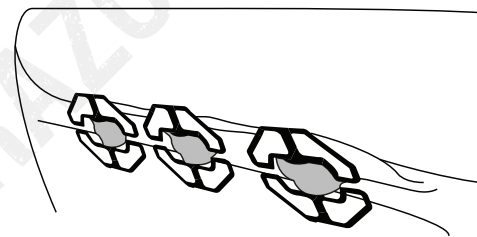

Step 7 : Do the zip up on the side of the seat and adjust the cover so that none of the existing seat is showing. Ignore this step if the cover doesn't have zip.

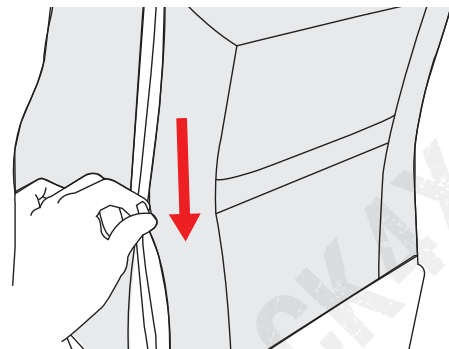


Step 8 : Re-attach the carpet flap at the back of your seat.

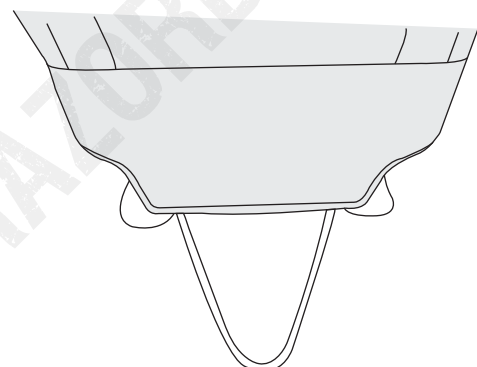

# BACKREST COVER INSTALLATION

Step 9 : Fasten the hook velcro to the carpet on the seat.

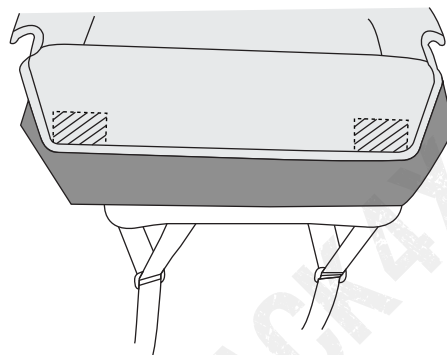

Repeat steps 3-9 for the other backrest cover.

# CARE AND MAINTENANCE

## CLEANING & MAINTENANCE

### Regular Cleaning

- **Frequency:** Clean weekly or as needed to prevent dirt buildup.
- **Method:**
  1. Wipe with a damp microfiber cloth or soft sponge.
  2. For stains, use mild soap (e.g., dish soap) diluted in water.
  3. Rinse with clean water and wipe dry.

### Stain Removal

- **Light Stains:** Gently scrub with mild soap and water using a soft brush.
- **Tough Stains:** Use a PVC-specific cleaner or isopropyl alcohol (50% diluted). Always test on a hidden area first.
- **Avoid:** Abrasive scrubs, bleach, ammonia, or solvents.

### Drying

- Wipe with a dry microfiber cloth to remove moisture.
- Air dry fully away from direct sunlight/heat to prevent warping or cracking.

## PROTECTION & PREVENTION

### UV Protection

- Park in shade or use a windshield sunshade.
- Apply a UV protectant spray designed for PVC to reduce fading.

### Avoid Damage

- Keep sharp objects (keys, tools, pet claws) away to prevent punctures.
- Remove heavy items from seats to avoid permanent indentations.

### Temperature Care

- Avoid prolonged exposure to extreme heat or cold (PVC may warp or brittle).
- In cold weather, let covers warm to room temperature before adjusting.

## STORAGE & LONGEVITY

### Storage Tips

- Clean and dry thoroughly before storage.
- Store in a cool, dry place, rolled or folded loosely to prevent creases.

### Maintenance

- Inspect regularly for wear, tears, or loose seams. Repair promptly.
- Apply a PVC conditioner every 3–6 months to maintain flexibility.

**Contact Razorback 4x4 Support** for assistance or queries.

*Follow these guidelines to ensure safety, durability, and a polished appearance.*