



40% CUSHION COVER INSTALLATION


Step 1 : Fitting the seat **cushion 40%**. Pull the cushion cover over the front of the seat cushion, aligning the seams as it go.

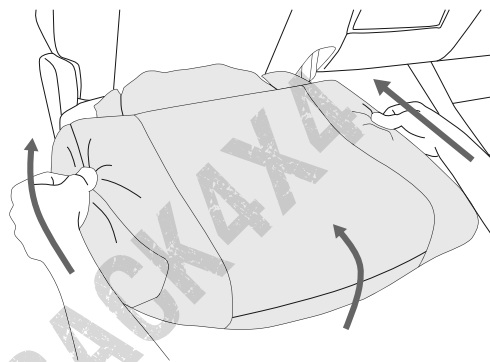

Step 2 : Fit the cushion cover on the sides of the seat and then push the cover through the gap between the backrest and cushion.

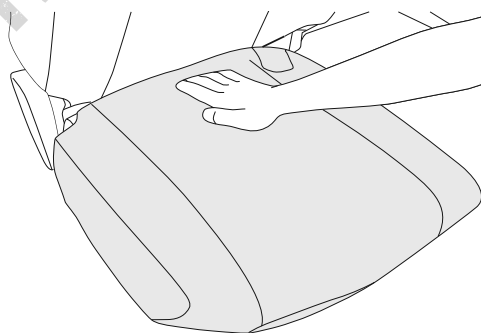


Step 3 : Remove the velcro protectors from the hook part of the velcro and attach to the carpet on the underside of the seat, tensioning the material onto the seat cover as you go for better fitment.


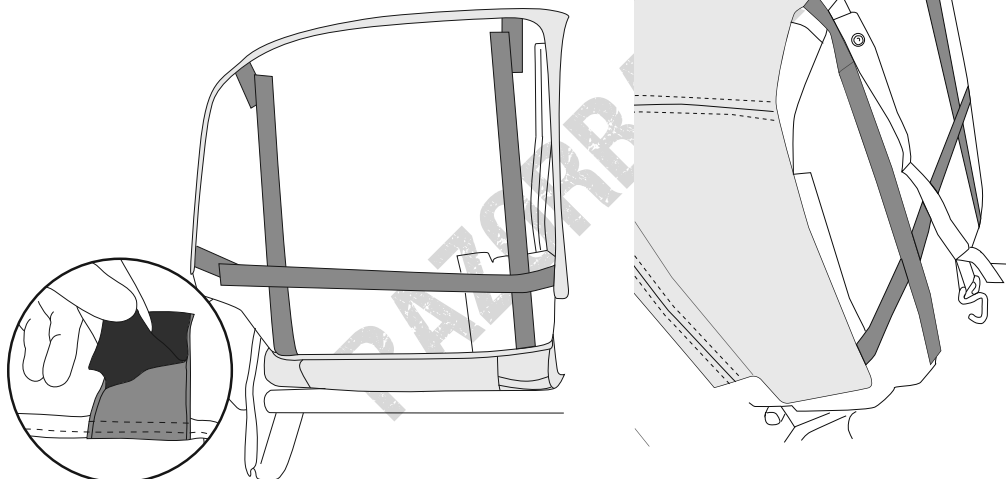


60% CUSHION COVER INSTALLATION

Step 1 : Fitting the seat **cushion 60%**. Pull the cushion cover over the front of the seat cushion, aligning the seams as it go.

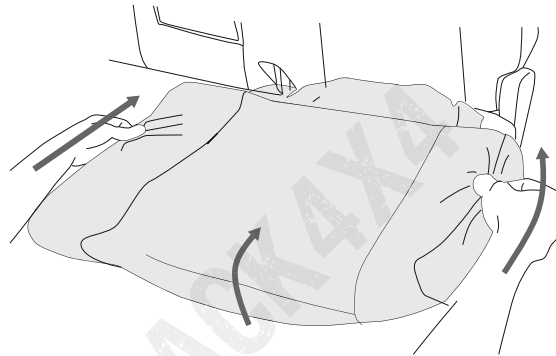


Step 2 : (A) Fit the cushion cover on the sides of the seat,
(B) Then push the tube through the gap between the backrest and cushion ensuring to go below the metal tube.

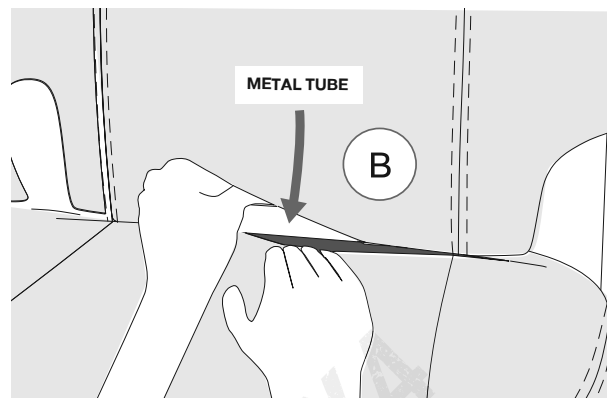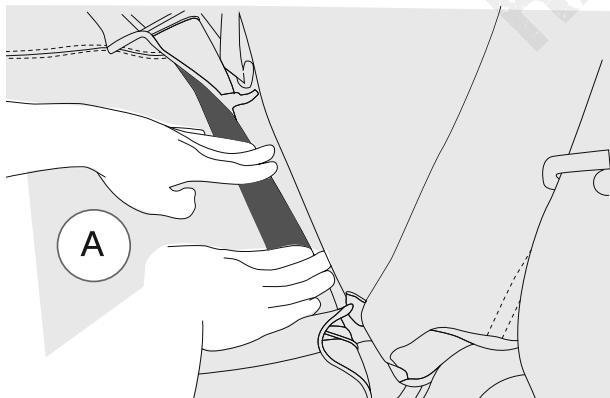


When doing so, ensure the seat cover is fitted below the metal tube at the back of cushion.

Step 3 : Remove the velcro protectors and attach the hooks to the carpet under the seat cushion, pulling the seat cover tight for a better fit.

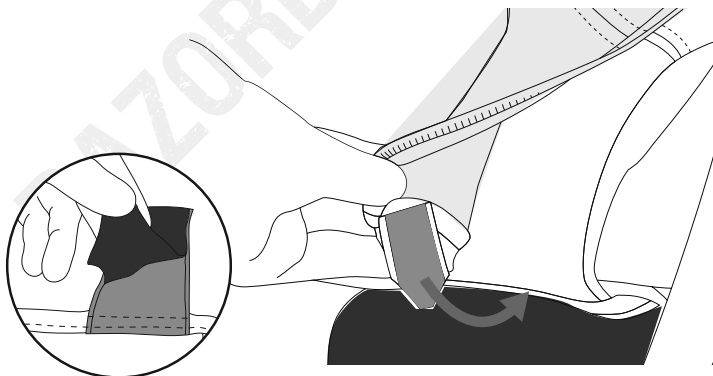

MAINTENANCE AND CLEANING INFORMATION

Step 4 : Reattach the middle seat belt through the elasticated holder on the seat cover.

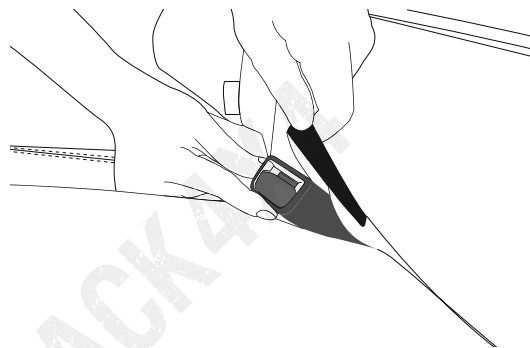

Step 5 : Tuck the cover fully underneath the seat at the bottom.

