

Please note: To fit these seat covers, the seat must be unbolted.

THINGS REQUIRED




- Socket wrench set




Ideally 2 people to fit, can be done with 1 capable person.


Backrest unbolting

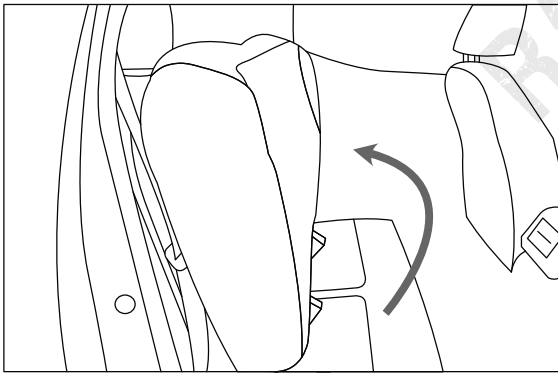


Step 1: Fold the rear cushion up.

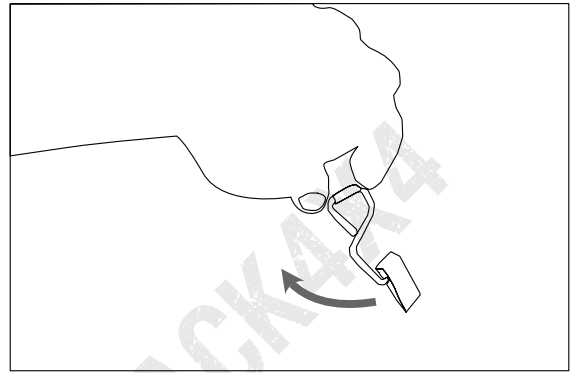

Step 2: Unclip the hook located on the underside of the rear cushion.

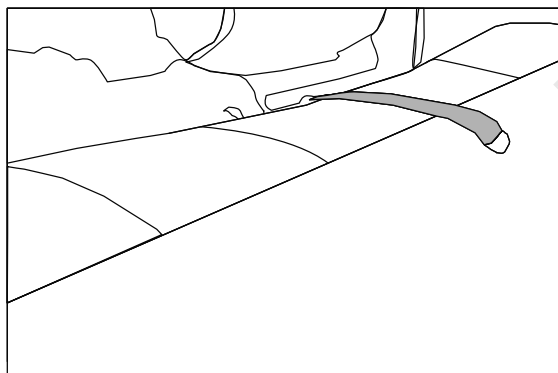


Step 3: Position the strap across the seat backrest.


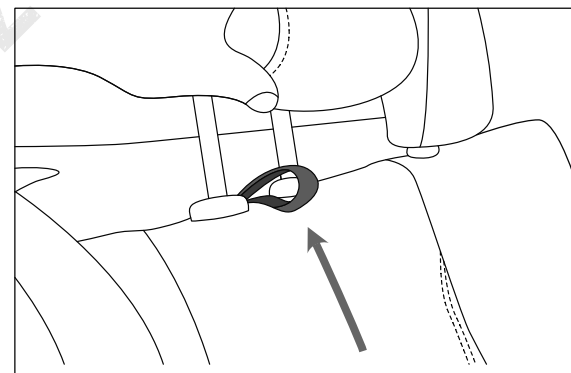


Step 4: Attach the hook to the strap at the top of the backrest.

HOW TO UNBOLT THE REAR SEATS

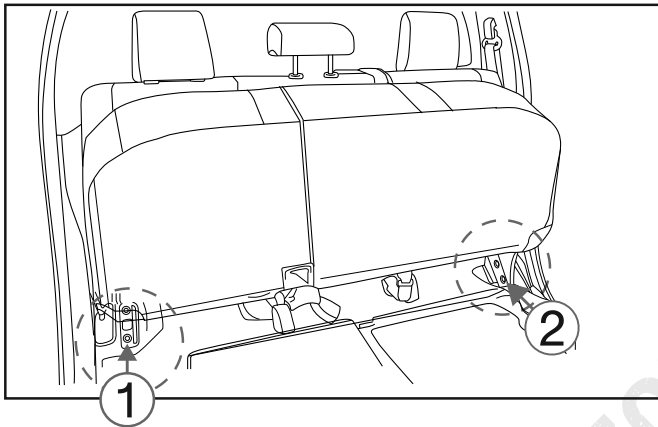

Step 1 : Use a socket wrench to undo the 5 bolts underneath the cushion. Put the bolts somewhere accessible as you will need them to bolt the seat back.

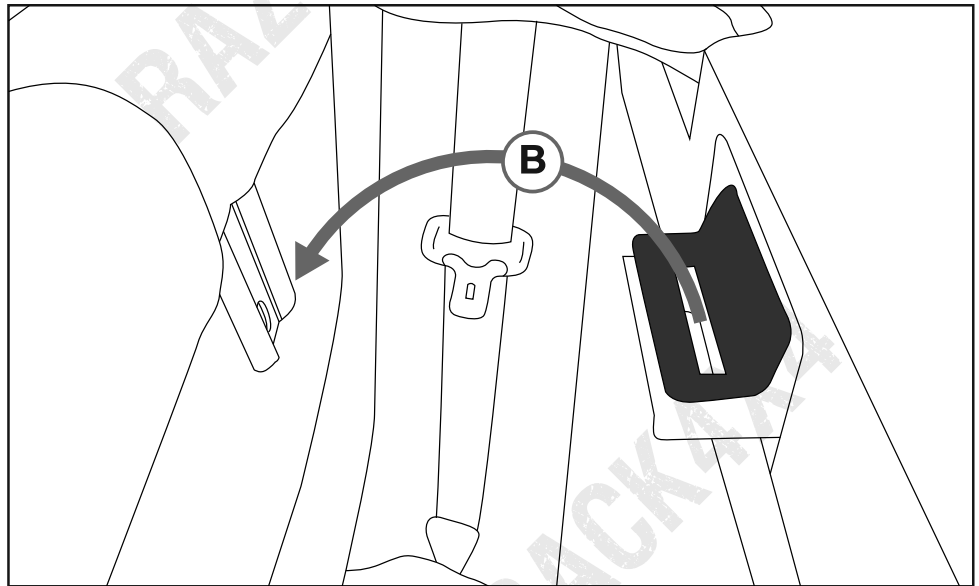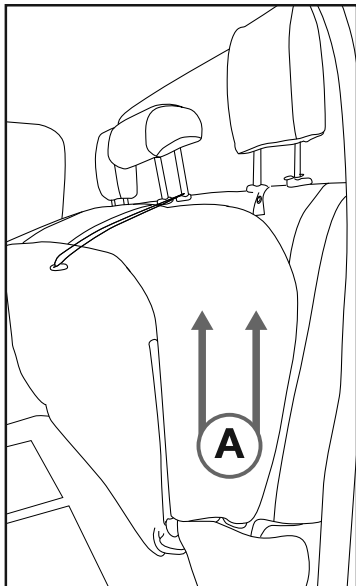

Is used twice: Holding the seat by the bar at the bottom, push the seat upwards (**A**) to remove it from the two hooks from which it's held on the back wall (**B**).

This can be done with one person kneeling in the cab, but is much easier with two people holding the seat from the outside of either side of the vehicle.

Step 6 : Once the seat is released from the hook points, bring it forward so you can reach behind the backrest. It is okay to leave the seat leaned forward in the cab while fitting the seat cover backrest.

We strongly advise leaving the rear seat in the cab.

It is possible to fully remove the seat from the vehicle, but you have to be extremely careful to damage the interior OR exterior of the car while doing this.