



**SINGER®**

| momento

# User Guide

**Mini Press**

Note: Please turn off the power first after use or before cleaning the machine to prevent leakage or other dangers. Please stop using the machine when you find the machine or the power cord is damaged. Please contact SVP after-sales department and do not unload or repair the machine by yourself.

### Product description:



## Let us start now!

Getting the best from your new Heat Press Machine.

### Temperature Setting


This heat press machine features two temperature setting modes:


1. Easy Mode: combines three heating degrees for a quick start.
2. Pro Mode: allows you to set the temperature according to the materials.

#### 1. Easy Mode:

Power to the machine. Press “” once to enter the Easy Mode:

Press the temperature button “” once to set the Heating Degree 1.

Press “” twice to set the Heating Degree 2.

Press “” three times to set the Heating Degree 3.



The machine begins to heat up after 3s of setting the heating degree.


#### Specifications:


- Degree 1: 255°F (125°C) – 295°F (142°C)
- Degree 2: 300°F (150°C) – 355°F (180°C)
- Degree 3: 360°F (185°C) – 400°F (205°C)

#### 2. Pro Mode

Power on the machine. Press “” twice to enter the Pro mode:

Press the temperature button “” once, the default temperature will be “300°F”. Set the temperature by pressing “” (each press increases 50°F/10°C) After hitting its max of 400°F (205°C), the temp cycles back to the mini. of 250°F (120°C). The machine begins to heat up after 3s of setting the temperature.

Under the Pro Mode, long press “” for 3s to change the temperature unit from °F to °C (the default unit is °F).

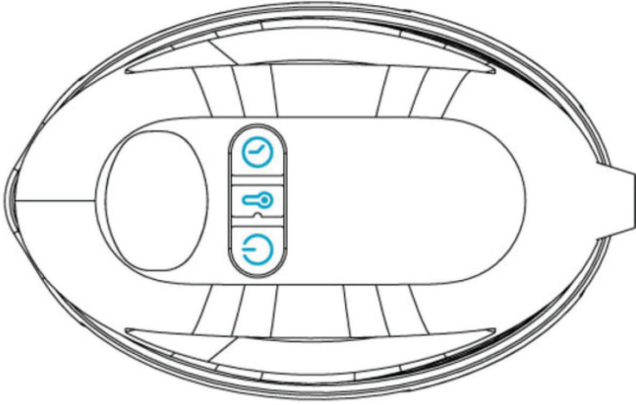

### Time Setting:

Press the time button “🕒” once to set the 15s.

Press the “🕒” twice to set the 30s.

Press “🕒” three times to set the 60s.

Then, cycle starts again.

### Power off:

Long press “🔌” for 3s to turn off the machine.

**Danger: Do not immerse the Mini Heat Press in water. Do not touch high temperature heating parts. Do not let children touch without adult supervision.**

### Product Instructions:

1. Please check the correct supply voltage of 120V before use.
2. Please check the power cord regularly.
3. The sole plate can be extremely hot and may get burns if touched.
4. Please operate this machine with a flat and steady surface and must be placed on its STAND and left on the machine base when not used.
5. The machine is not intended for children and people who lack of this experience, unless it is used under the guidance or help of adults.





**SINGER**<sup>®</sup>

| momento