

Torque-X Shield Removal



Loosen top screw
(counter clockwise)



1.Loosen top screw counter clockwise.

2. Unscrew visor screw (counter clockwise.



3. Lift visor and shield from the pivot as shown. Do the same procedure on both sides.



Removal Complete

New Shield Installation



1. Align shield and visor with the pivot hole as shown, then install the screw. Do the same procedure on both sides.



2. Adjust the visor to the desired angle and tighten all three screws (clockwise).