

# How to set GPS Time Zone Setting for your ROVE Dash Cam?

## GPS TIME ZONE SETTING

There are two ways to set the date and time on your dash cam: manually or using the GPS time zone setting. With GPS time, the camera automatically adjusts the date and time based on the received GPS signal and your chosen UTC/GMT offset

Go to System Settings >> GPS Time Zone Setting >> Chose Your GMT Value



## USA Time Zones - GMT (Greenwich Mean Time) Values

Time Zones	When DayLight Savings Ends ▶ Nov - March	When DayLight Savings Begins ▶ March - Nov
Hawaii	GMT (-10:00)	
Alaska	GMT (-9:00)	GMT (-8:00)
Pacific Time Zone	GMT (-8:00)	GMT (-7:00)
Mountain Time Zone	GMT (-7:00)	GMT (-6:00)
Central Time Zone	GMT (-6:00)	GMT (-5:00)
Eastern Time Zone	GMT (-5:00)	GMT (-4:00)

Go to <http://www.greenwichmeantime.com/time-zone/usa> to find out your Correct GMT (Greenwich Mean Time) value based on your location in the USA

### *i* NOTE


The GPS time zone setting will not change time automatically when driving through different time zones. It will only set the accurate date and time based on the selected GMT time zone.

We hope this clarifies the issue. Please feel free to reach out to us if you have any further questions or concerns.

### CUSTOMER SERVICE:

Hours: Mon - Fri 9am-5pm PST

EMAIL US



Response in just 6 hours  
help@rovedashcam.com

TEXT US



For faster response text us  
1-844-ROVE-CAM  
1-844-768-3226