





NEW FOREST HEATED GARMENTS QUICK START GUIDE

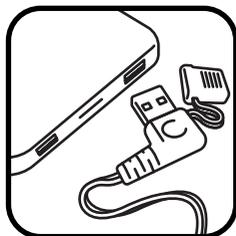

Plug the USB cable from the inside pocket into a charged powerbank



Press and hold power button for approximately 2 seconds until it lights up

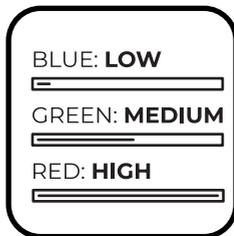

Press the power button to switch between the different heat settings



To turn off press and hold the power button until the light goes out

IMPORTANT NOTES

Take care when extracting the power lead from the pocket, it is not designed to be greatly extended and will cause damage to the lining of the pocket or the cable itself if pulled too far.

If the jacket turns off unexpectedly, check the connection and charge the powerbank.

Always charge your powerbank until it is fully charged. Avoid overcharging your power bank as this can cause the battery life to decrease, shortening the amount of time the powerbank will power your product.

Disconnect and remove the powerbank before storing for long periods (eg. over the summer months). Recharge it at least once per month to maintain optimal performance.

SAFETY INFORMATION

Only use 5V 2A output batteries from a trusted source.

Only compatible with 5V 2A or above output USB port.

Don't expose the charger or battery to rain or wet conditions, water will increase the risk of electric shock.

Do not use if the power button doesn't turn the product on and off.

Disconnect the powerbank from the item before storing.

Store out of reach of children and don't allow persons unfamiliar with these instructions to operate it.

Do not use this item with an infant, child or anyone insensitive to heat, such as a person with poor blood circulation.

Never use if inner liner is wet.

Heating elements are not recommended to touch bare skin.

Shut off power immediately if discomfort occurs.

If improper operation of this item is observed, discontinue its use immediately and contact support@newforestclothing.co.uk

Disconnect and remove powerbank from battery holder pocket before washing. Ensure that the cover is put on the USB connector.

Please keep hold of these instructions for future reference.

CLEANING INFORMATION

1. Remove the powerbank and put the cap on the usb connector.

2. Place the item in the laundry bag supplied.

3. Machine wash at 30 degrees on a gentle cycle. Do not use bleach or softener. Do not tumble dry or iron, do not wring.