


How to Disassemble The Glider and The Glider Plus

To disassemble your glider, remove the back from the chair by following the steps below:


Step 1: Lift the fabric on the back. You should see two black clips on each side of the chair where the back clips to the bottom (refer to sketch below). Please be sure to also disconnect the wires (one wire for The Glider, two wires for The Glider Plus).

Back

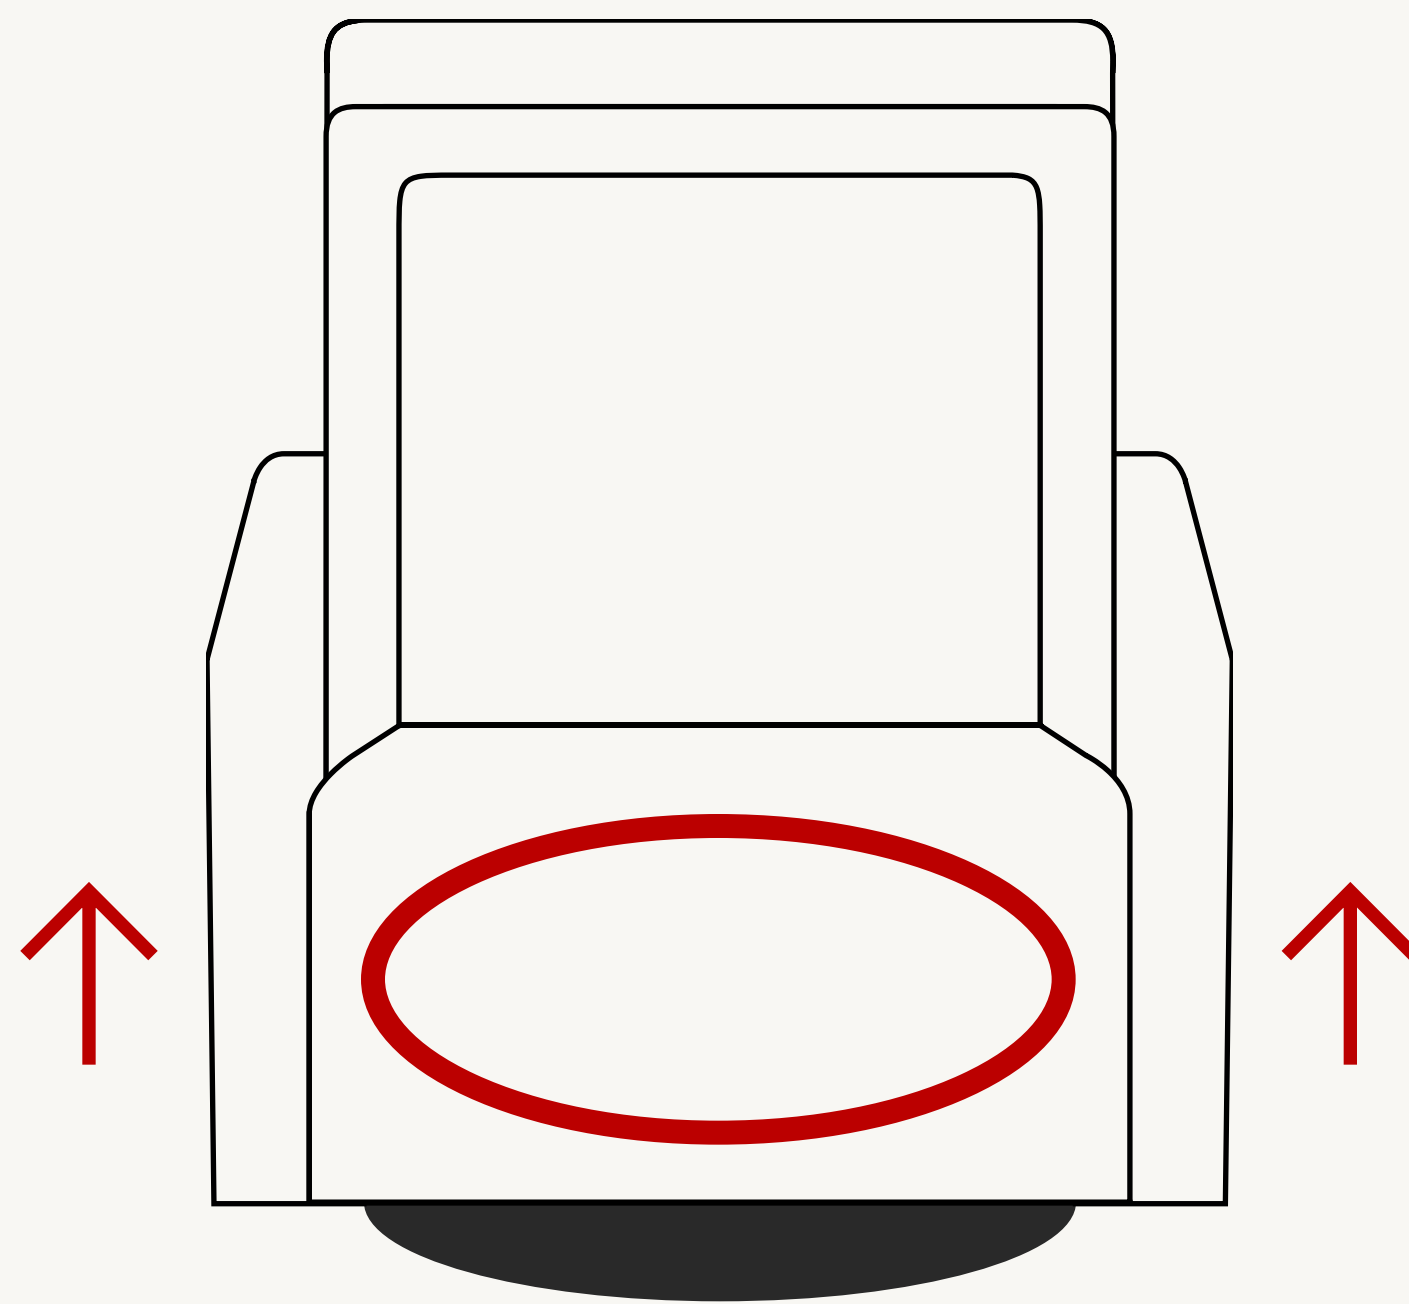

Step 2: Pull each clip outwards one side at a time, and then pull the back up. Please be sure to also disconnect the wires.

Back

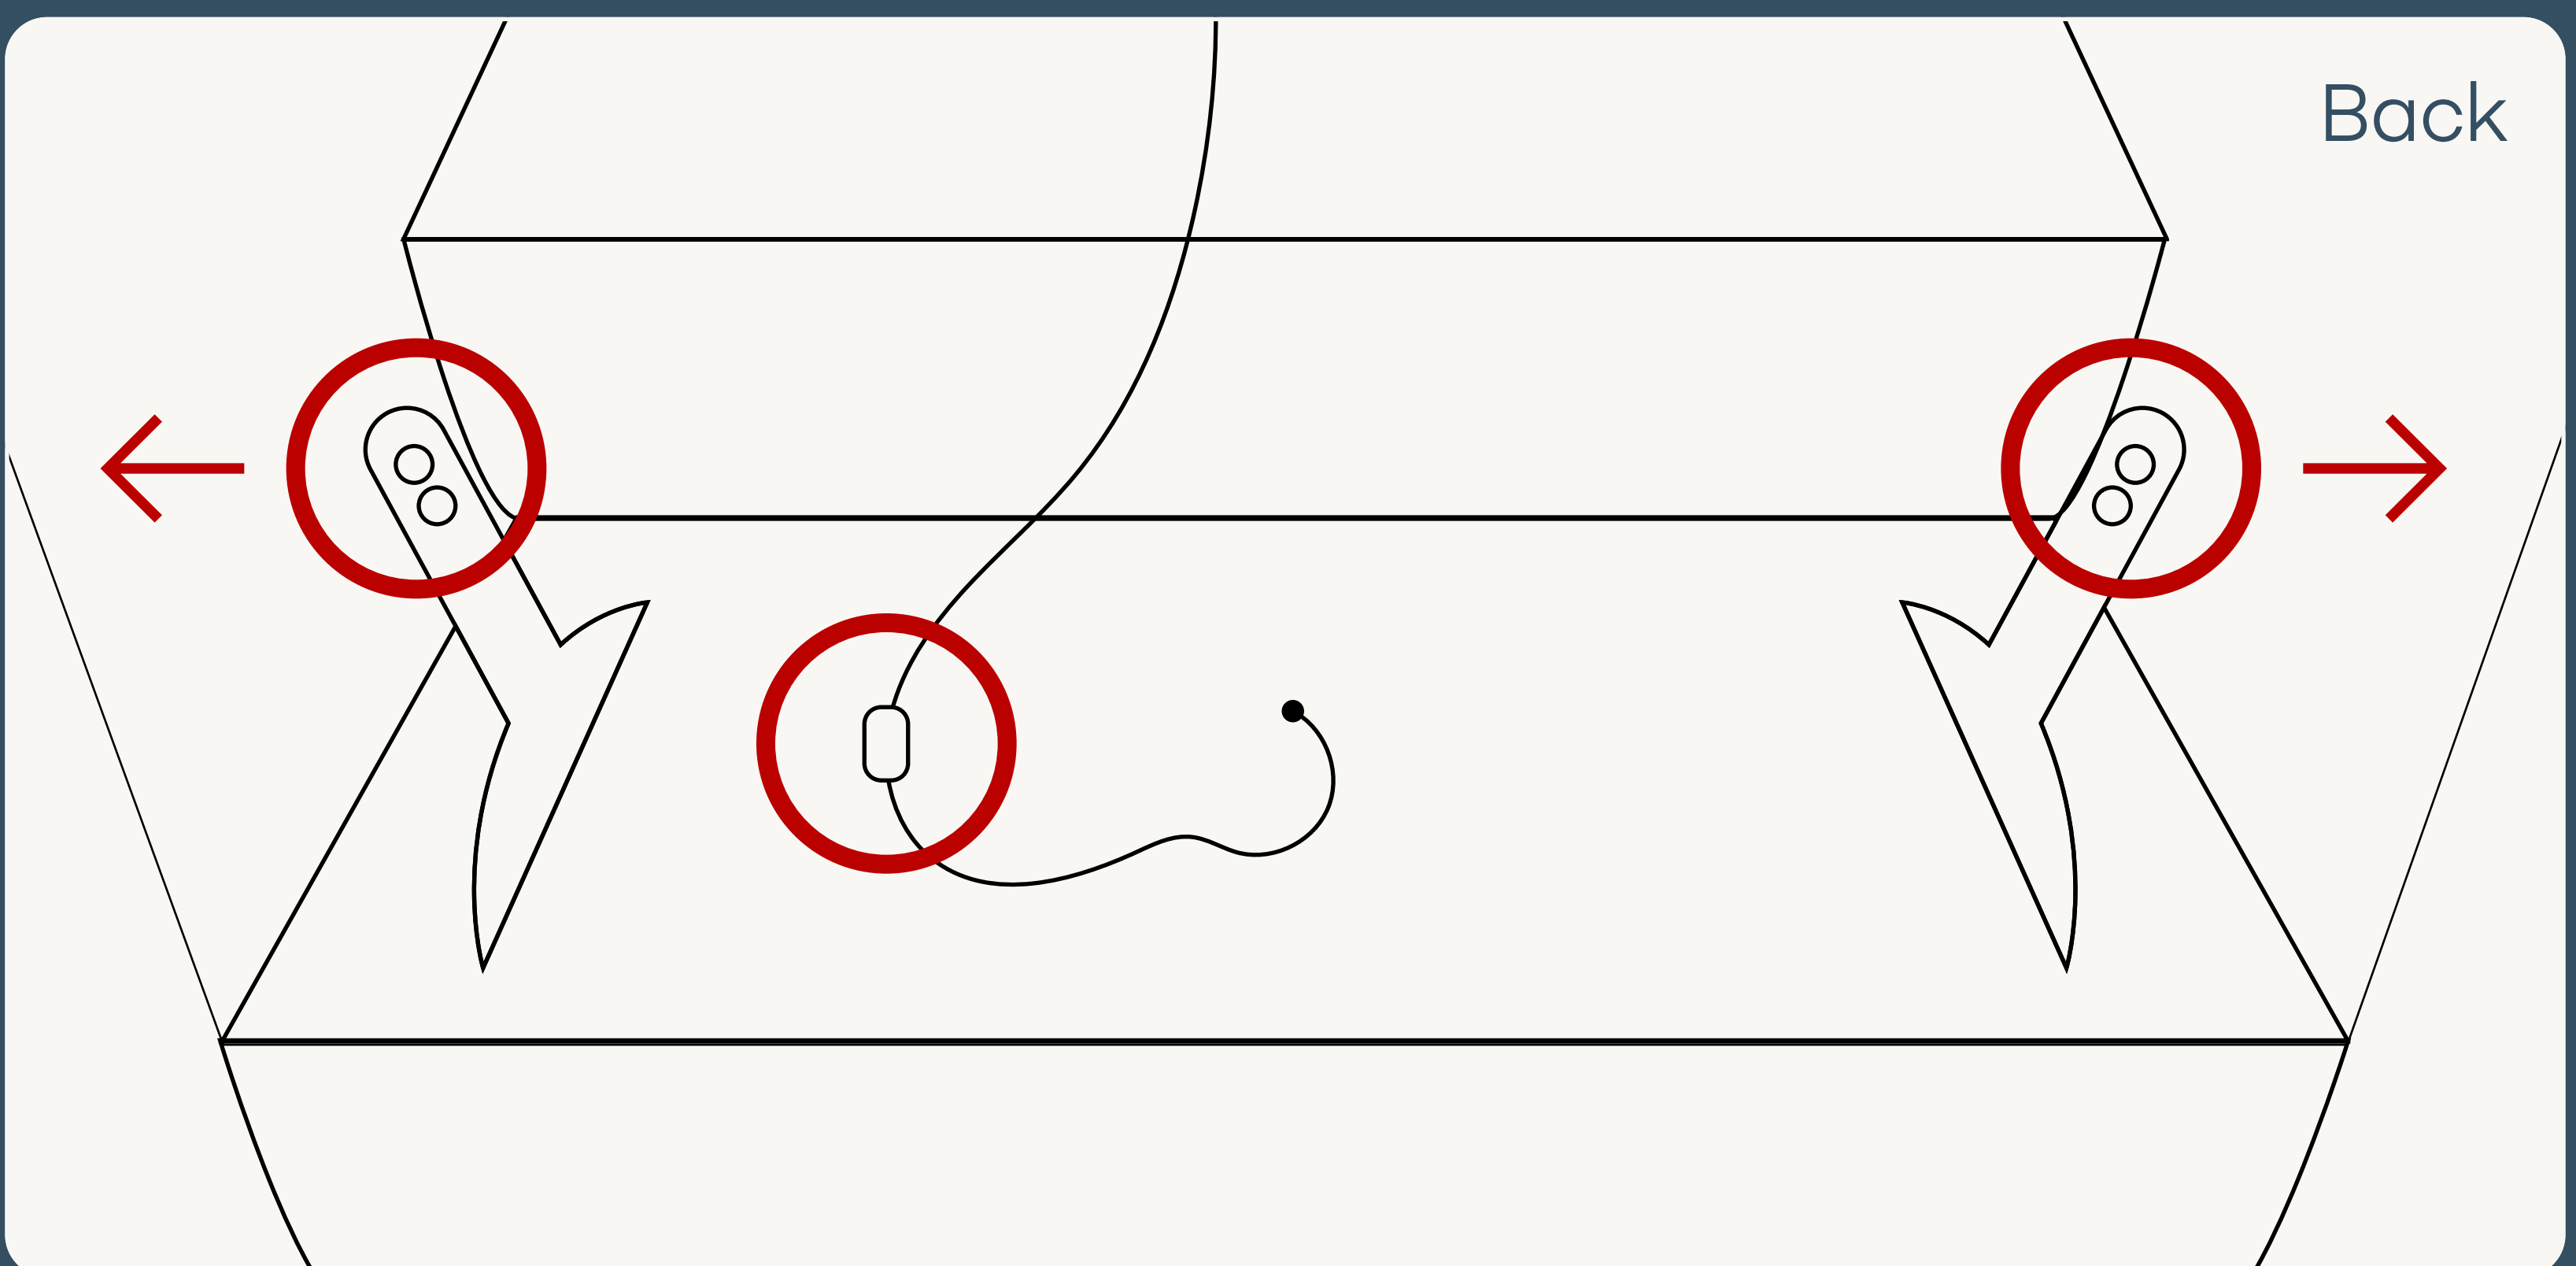

After following these steps, your glider should be successfully disassembled into the two pieces that it arrived in. If you need additional assistance, please do not hesitate to reach out to us at info@nurtureand.com.