

# Grillbot Fliptray™

From prep to plate, Grillbot Fliptray™ keeps your cooking safe, clean, and effortless.

REGISTER



Unique Flip Action



4 Stainless Steel BBQ Tools Built-In to Tray



Quick-Release Drain Separates Gravy & Drains Grease



Prevents Bacterial Cross-Contamination



BPA Free

 


© GRILLBOT LLC  
www.grillbots.com  
customerservice@grillbots.com


## User Manual

# Parts & Features

## Base

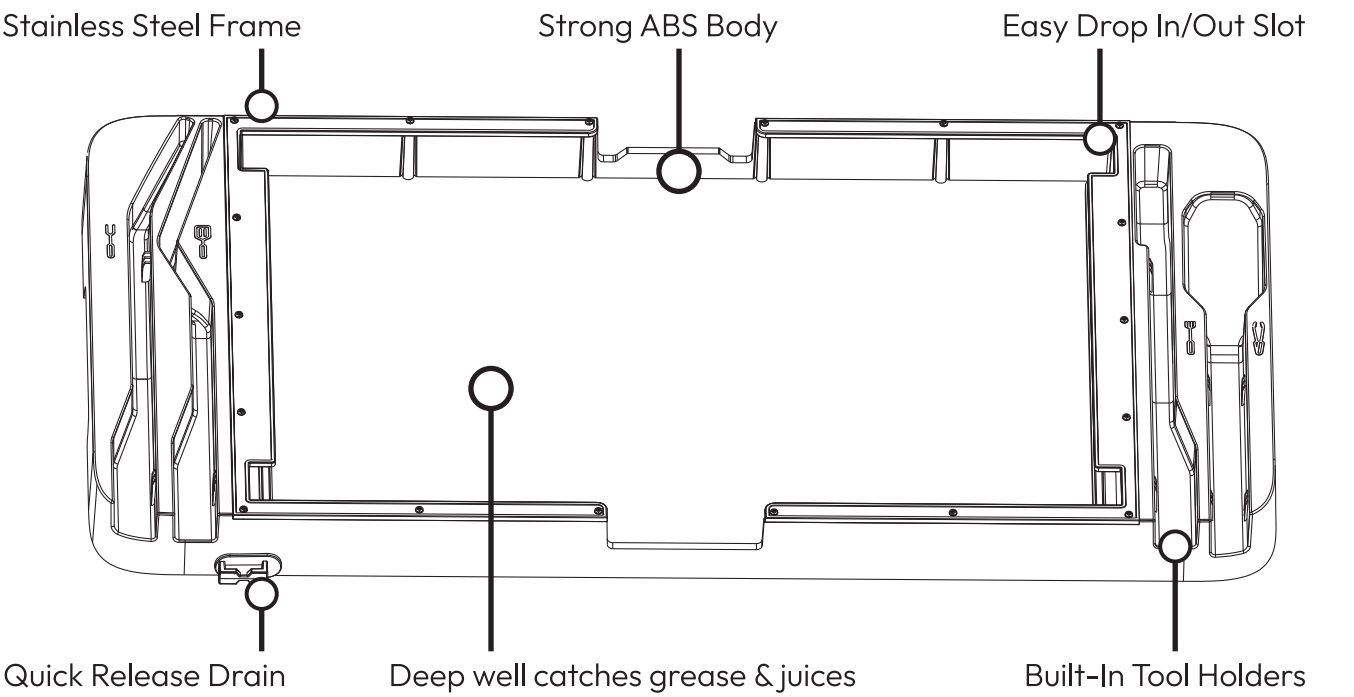

## Fliptray™

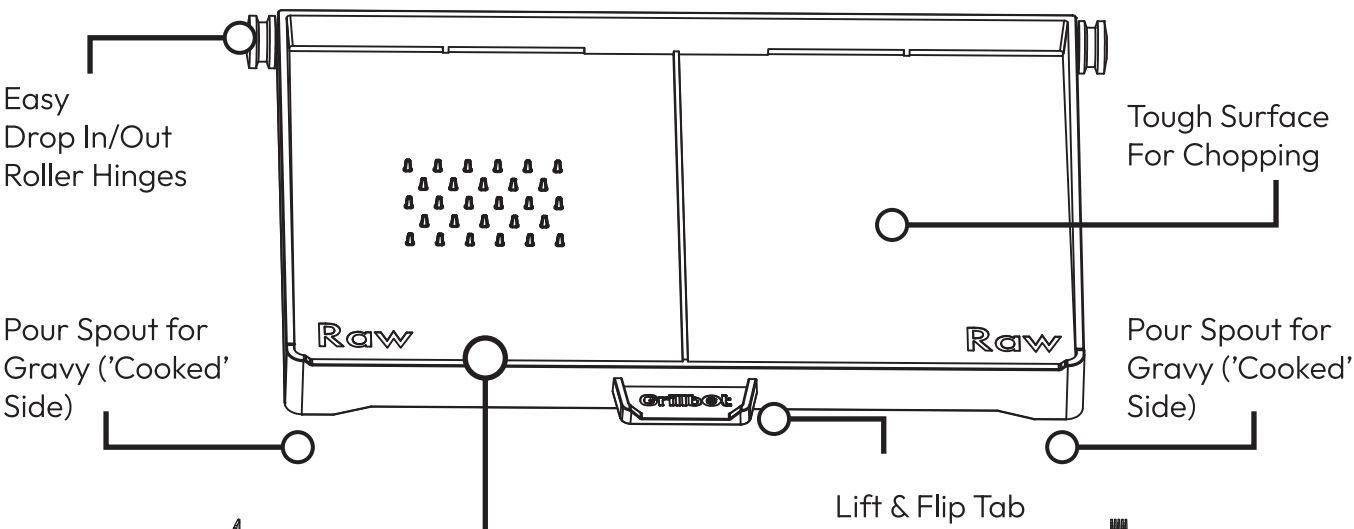 

### Unique 2-Sided Fliptray™

Clearly marked 'RAW' Side.  
Clearly marked 'COOKED' Side, on reverse.  
(Both can be used for chopping & carving).

## BBQ Tools

4 Premium Stainless Steel Tools





# Getting Started

## Insert the Fliptray™

Turn the 'RAW' or 'COOKED' side to face up, as needed.

Simply drop the tray's roller hinges into the slots either side of the base.

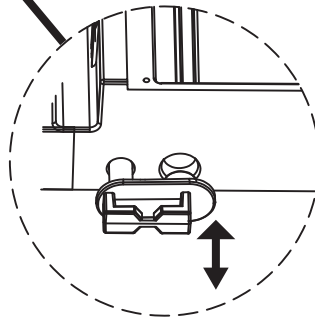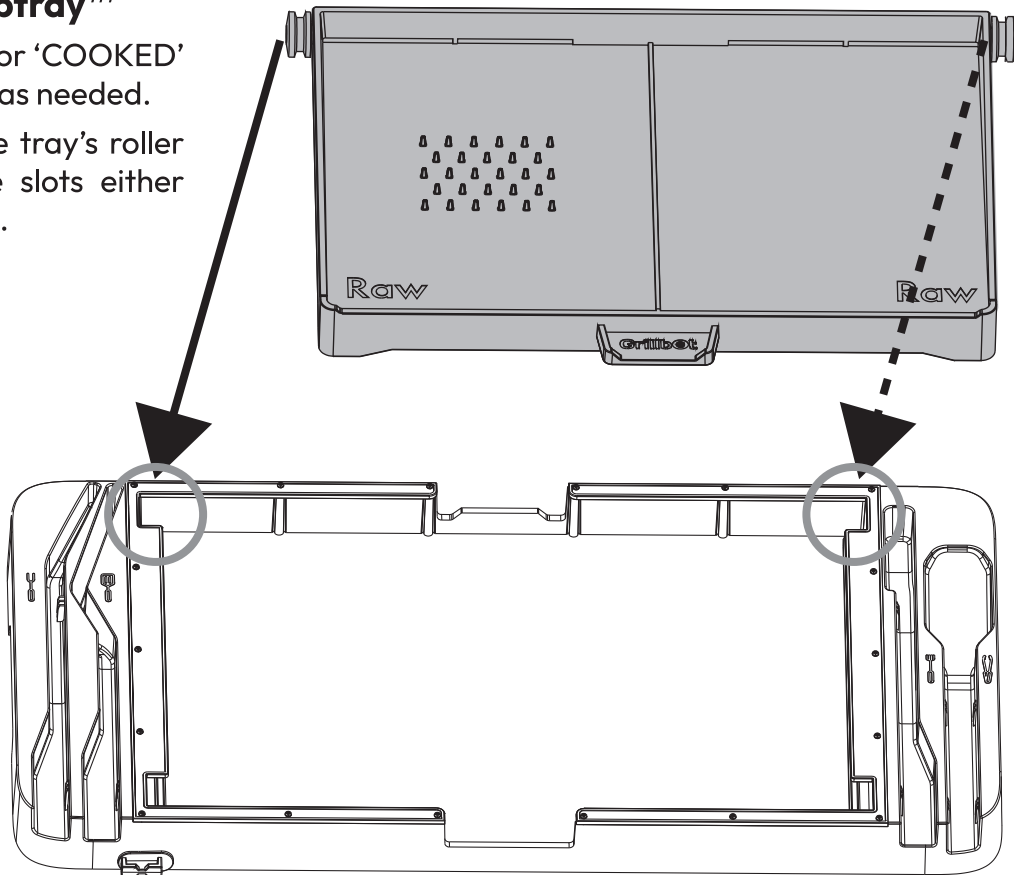

## Close the Quick-Release Drain


Simply twist and push the silicone drain plug into the hole in the base.

## To open the drain

Pull and twist the drain plug gently from the drain hole when you want to release juices or grease from preparation.

**The plug is designed to stay attached to the base, so it can't be lost.**

**You're all set up!**

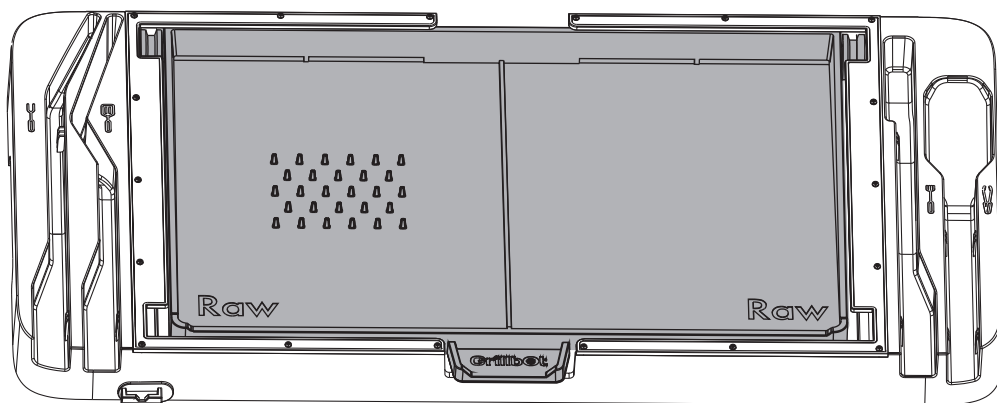

# Using your new Fliptray™

1.



## Prepare ON the Fliptray™

Prepare and cut meat, poultry and vegetables etc. directly on the 'RAW' side of the Fliptray™.


- The tough surface can be used as a cutting board.
- Raw juices conveniently drain into the large well in the base below!

Then simply take the whole tray with its built-in tools straight to the BBQ!

## Get cooking!

Take your freshly prepared food from the tray and start cooking on your pre-lit BBQ.

2.

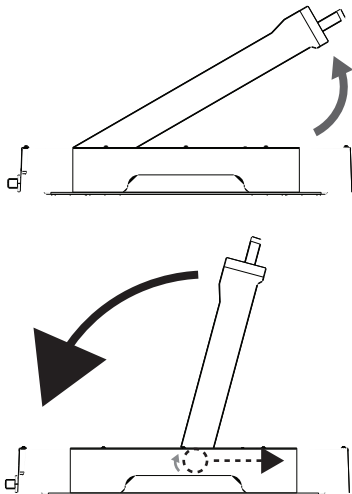

## Flip the tray!

Lift the front of the (now empty) tray using the Lift & Flip Tab in the centre.

Slide the tray on its rollers in the Base and flip-over, so the 'COOKED' side is facing up.

3.



## Serve it up!

Use the built-in stainless steel BBQ tools to cook up your feast.

Serve cooked food directly onto the 'COOKED' side of the Fliptray™.

- Gravy & cooked juices are collected and can be poured from spouts in the top tray.
- Carve your steaks and cut your veggies directly on the tray!


And, when you're done, simply clean the Fliptray, base and tools in the dishwasher! The base can also be hand washed if too big for your machine!

# Cleaning and Care

## Simply place the Fliptray™ and utensils in the dishwasher!

The Fliptray™, Base, and BBQ Tools are ALL dishwasher safe.  
(Handwash the base, if too large for your machine).

- Drain juices from the Base, by opening the silicone drain plug over a sink.
- Then simply place all the parts in the dishwasher to clean.
- Placing the Base upside-down will help prevent water resting inside, when drying.

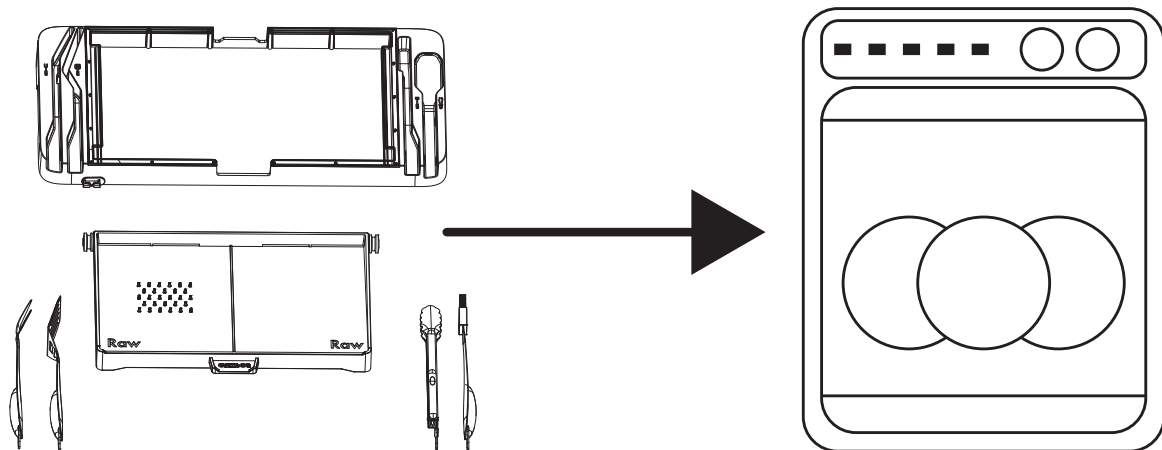

## Care & Advice

Your Grillbot Fliptray™ is designed to last many years, following these simple rules:

- To handwash, use hot soapy water and a non-scratch sponge or brush. Air-dry or dry thoroughly with a soft dry cloth.
- Do not use harsh chemicals or solvents to clean.
- Do not place the Fliptray or base directly onto heat or flame - it is designed as a preparation and serving tray, not as a cooking surface.
- The Fliptray is made of tough, food-safe polypropylene that you can prepare and cut food on. Please note the use of knives will scratch the surface over time.
- Do not use excessive force when using blades, doing so may cause deep scratches. Do not use heavy cleavers or high-chopping action.
- Do not cut or chop on any part of the Base.
- The Fliptray and Base are pre-assembled, please do not remove fixed parts and screws, as this may damage them.
- Do not completely remove the silicone drain plug, it is designed to stay attached.
- Store assembled, in a dry place.



# Safety

Please observe the following, for safer enjoyment of your Fliptray™.

- Do not place the tray or base directly onto or over heat or a flame - they are designed for preparation and serving, not as cooking surfaces - and will melt over excessive heat, which may cause injury.
- The stainless steel parts of the included BBQ tools are designed for use over a flame, but please take care not to touch the hot ends of tools, to prevent burns. Do not place the plastic parts of tools directly onto heat.
- Some BBQ tools are designed with sharp or serrated edges, be careful using sharp edges and other blades, to prevent cuts or other injuries.
- If you suffer a serious cut or burn, please seek immediate medical advice.
- This product is NOT A TOY, please KEEP AWAY FROM CHILDREN.
- Ensure children remain supervised when using this product.
- If this product becomes damaged for any reason and particles of plastic enter food, do not consume.

## Specifications



BPA Free

| Item       | Size (mm)      | Size (inches)     | Material                    |
|------------|----------------|-------------------|-----------------------------|
| Base       | 630 x 315 x 47 | 24.8 x 12.4 x 1.9 | ABS                         |
| Fliptray™  | 437 x 313 x 40 | 17.2 x 12.3 x 1.6 | Polypropylene               |
| Drain Plug | 12 x 7         | 0.5 x 0.3         | Silicone                    |
| Tongs      | 328 x 38       | 12.9 x 1.5        | Stainless Steel             |
| Spatula    | 354 x 70       | 13.9 x 2.8        | Stainless Steel             |
| Fork       | 351 x 30       | 13.8 x 1.2        | Stainless Steel             |
| Brush      | 339 x 44       | 13.3 x 1.7        | SS Handle<br>Silicone Brush |

# Warranty

Grillbot believes in and stands behind all of our products. That's why all Grillbot Fliptrays purchased from our online store come with a 30-day, money-back satisfaction guarantee.

Upon receipt, please inspect your purchase and notify us of any damage; we will arrange for a prompt replacement.

Within 30 days, you may return most items for a refund of the merchandise value. An original receipt or gift receipt is required for all returns and exchanges. Returns with a gift receipt will be refunded in the form of a Credit for the amount indicated on the gift receipt. Returns with original receipt will be refunded in the original form of payment. Please note that returned items must be in new condition and in original box packaging.

The limited warranty is valid only on products bought through our website or on Amazon.com. Buying through an unauthorized reseller or using a product outside of North America automatically voids the 30-day, money-back guarantee and limited warranty. Proof of purchase will be required prior to receiving limited warranty service.

Your Grillbot Fliptray must be registered to receive limited warranty service. The Grillbot Fliptray limited warranty is not transferable. Once you register your Fliptray, you are the only one who can request limited warranty service for the length of the limited warranty.

## What is covered?

We cannot accept returns on items damaged through normal wear and tear. Final sale items ending cannot be returned. We also cannot accept returns of any food related prep products, which are considered final sale items.

The Grillbot Fliptray limited warranty covers manufacturing defects in materials and workmanship that might occur during normal use of your Grillbot Fliptray. Consumable components like brushes are not covered. Defects resulting from improper maintenance, DROPS or FALLS OFF THE COUNTER OR GRILL, EXPOSURE TO FIRE, EXCESSIVE HEAT OR unauthorized repairs or failure to follow operational instructions are just a few of the items not covered. Damage caused by the use of accessories and parts, that were not manufactured by Grillbot voids the limited warranty.

Both the 30-day, money-back guarantee and limited warranty are void if product is used outside North America.

## If something that is covered does break, how do I get it fixed?

Contact us to determine your problem and next steps. Replacement parts and products assume the remaining original limited warranty, or thirty (30) days, whichever is longer. All replaced parts and products become the property of Grillbot Corporation and must be returned to Grillbot. To obtain limited warranty service please register your new Grillbot [HERE](#). For support or other information, please email us at: [customerservice@grillbots.com](mailto:customerservice@grillbots.com).

## REGISTER



# Other Great BBQ Products from Grillbot™

## Grillbot™ & Grillbot Pro™



 
Robot BBQ Grill Cleaner - automatically deep cleans even the toughest dirt from all types of BBQ grills. Simply turn on and let it do all the work for you! Pro version can be remote controlled by a smartphone!

## Spare brushes for Grillbot™ & Grillbot Pro™



Spare brushes for Grillbot & Grillbot Pro. In packs and bundles of Stainless Steel, Nylon and Brass brushes for different surfaces. Tough and long lasting!

## Grillbot™ Silicone Heat Shields

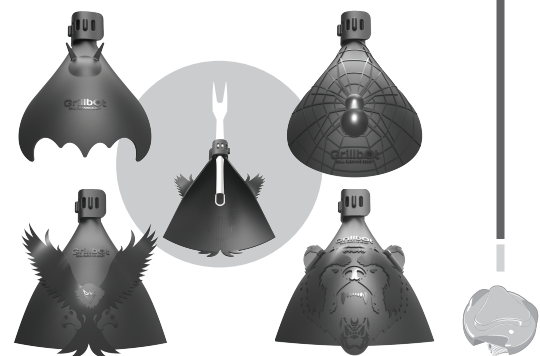

Silicone heat shields that easily attach to all grill tools - in a variety of fun designs! Heat shields protect your hands from heat, splatter and flare-ups and allow more time to flip food. Dishwasher safe!

## REGISTER



### Copyright

Copyright © 2025 GRILLBOT LLC.

This guide is protected under international copyright laws.

No part of this guide may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system.

### Trademarks

Grillbot™, Grillbot Pro™, Grillbot Fliptray™, Fliptray™ and all Grillbot logos are trademarks of GRILLBOT LLC.

All other trademarks and copyrights mentioned here are the property of their respective owners.



© **GRILLBOT LLC**

[www.grillbots.com](http://www.grillbots.com)

[customerservice@grillbots.com](mailto:customerservice@grillbots.com)

Patent Pending

