

Grillbot Smart Apron™

Quick Start Guide

Welcome to smarter grilling.

Your Grillbot Smart Apron includes:


- Machine-washable multi pocket BBQ apron.
- Removeable Command Center.
- Bluetooth® Speaker (Music & Phone Calls).
- Bluetooth® Meat Thermometer.
- LED Motion Sensor Lightbar.
- Built-in stand & Apron Dock.
- USB-C charging.

1.

CHARGE BEFORE FIRST USE!

1. Open USB-C Cover.
2. Plug into **5V/1A charger** only.
3. Red Light: Charging (About 2 Hrs).
4. Light Off: Fully charged.
5. Meat Thermometer charges when clipped on. Remove shipping tab from clip, before first charge.


Apple® style chargers can be used.

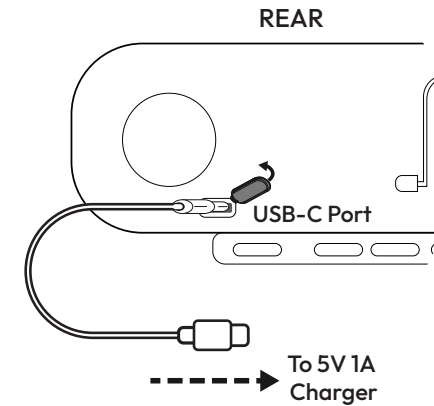

2.

Fix Command Center onto Smart Apron


1. Slide rear of Command Center into top of dock on apron.
2. Slide down until it clicks.
3. To remove, pull straight up.

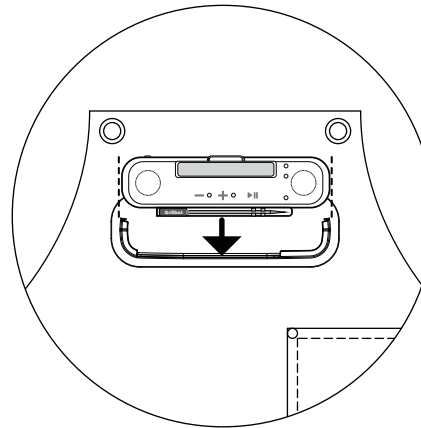

3.

Connect Bluetooth® to Speaker



1. Turn ON Bluetooth® on your phone.
2. Hold PLAY button on Command Center for 3 seconds.
3. Pair with GBA101 on phone list.
4. Blue light stops flashing = connected.

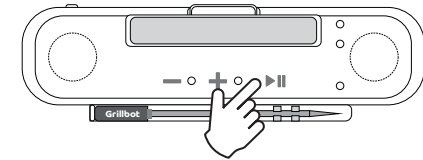

4.

Connect Meat Thermometer

1. Download the Grillbot App.
2. Turn ON Bluetooth® on your phone.
3. Remove Thermometer from clip on Command Center.
4. Open Grillbot App.
5. Thermometer connects automatically.

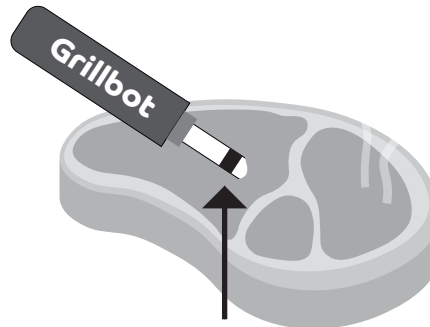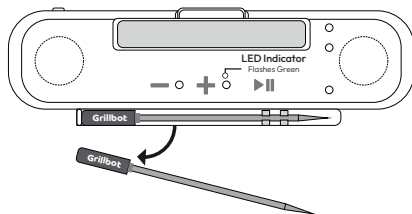

The Thermometer has a **safety notch** near the handle. Insert into food **up to this notch** to protect the thermometer and give correct readings.

5.

Using the Meat Thermometer

1. Insert into food up to **Safety Notch**.
2. Open Grillbot App.
3. Choose a 'Recipe' for chosen food.
4. App shows temperature and notifies when done!

Max internal temperature: **212°F (100°C)**
Handle safe up to **572°C (300°C)**



REGISTER



GET THE APP
Apple® iOS



GET THE APP
Android®



 
Grillbot Smart Apron™

Quick Start Guide

6. Using the LED Lightbar

1. Press light button once.
2. Wave hand over sensor:
 - WAVE 1: Bright
 - WAVE 2: Dim
 - WAVE 3: OFF
3. Angle light as desired.

Light does NOT operate in bright daylight
(battery saving feature)

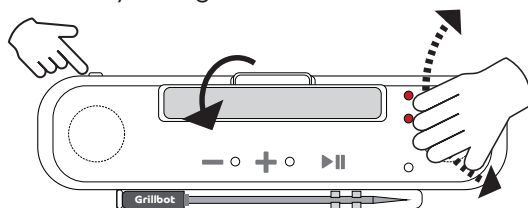

7. Enjoy Music

- ▶|| Short-press to Play or Pause music.
- Short-press: Previous track.
Long-press: Volume down
- + Short-press: Next track.
Long-press: Volume up.

8. Enjoy Phone Calls

- ▶|| Short-press to Answer or End Call.
- Long-press: Volume down
- + Long-press: Volume up.

Note: Dial on your phone, the speaker does not support voice dialling.

C Cleaning & Care

REMOVE COMMAND CENTER BEFORE WASHING APRON!

Apron:

Machine wash warm. (Max 140°F/ 60°C)

Command Center:

Wipe only.

Thermometer:


Wipe clean, sanitize before use.

Empty apron pockets before washing.

Never submerge Command Center.

Do not use harsh chemicals or abrasives.

Do not place onto flames or heat.

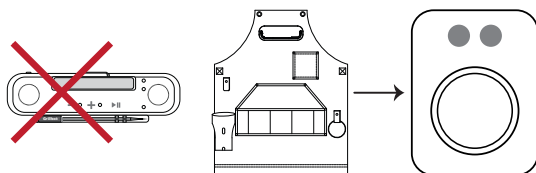

! IMPORTANT: Battery Storage

IF STORING MORE THAN 3 MONTHS:

Do not store with empty battery.
Store at around 50% battery level.
Recharge every 3-6 months.

H Help & Support

Register your Smart Apron on www.Grillbots.com

For more info and guides:

- See the full manual (included) for further instructions.
- Go to Grillbots.com for usage videos.

Safety and warranty information in the detailed Instruction Manual.

customerservice@grillbots.com



REGISTER



GET THE APP
Apple® iOS



GET THE APP
Android®

