 


BANKSIA TODDLER HIGH CHAIR

ASSEMBLY INSTRUCTION

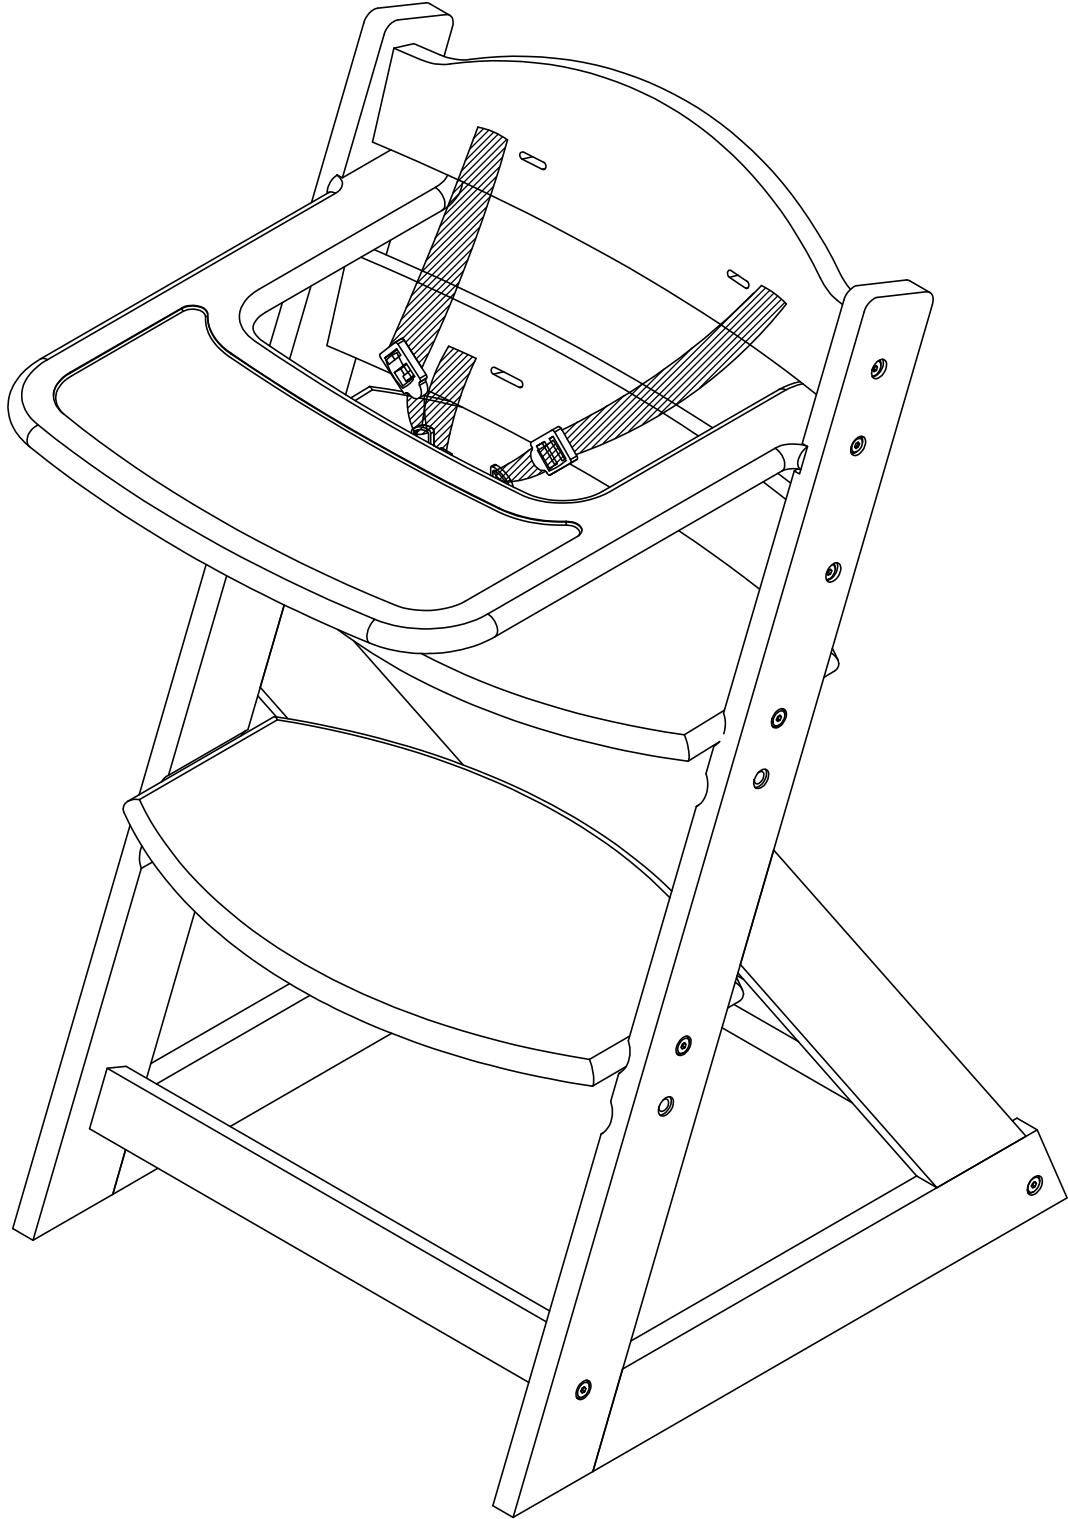

- The manufacturer's assembly instructions must be followed in detail to ensure the safety features to the baby chair are not compromise
- To clean surface use only water on a damp cloth. Do not use window cleaners or cleaning abrasives as it will scratch the surface and could damage the protective coating.



WARNING!

 
PLEASE READ ALL INSTRUCTIONS BEFORE YOU ASSEMBLE AND USE THE CHAIR. KEEP THE MANUAL FOR FUTURE REFERENCE.

It's been carefully designed and constructed to offer quality, safety and reliability for you and your baby. Your child's safety is your responsibility.


- Keep children clear during assembly as the fittings pack contains small parts which may present a choking hazard.
- Do not leave the child unattended.
- Always use the restraint system.
- Falling Hazard: Prevent your child from climbing on the product.
- Do not use the product unless all components are correctly fitted and adjusted.
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.
- Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
- Make sure all screws are well tightened.
- Do not use the product until the child can sit up unaided.
- The product is intended for children able to sit up unaided and up to 3 years or maximum weight of 15kg.
- Do not use the product if any part is broken, torn or missing.
- If relevant, a statement to keep children away when unfolding or folding the product to avoid injury.
- Lay out the parts on a soft level surface and compare to the parts checklist. Don't throw away any packaging until you're sure that you have all the parts.
- Use the high chair on a flat, even and horizontal floor and not elevate the high chair on any structure or table.
- Follow the manufacturer's instructions.
- The harness must always be used and correctly fitted - most injuries from high chairs are caused by falls.
- Position the high chair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.
- Banksia high chair produced and designed to comply with AS4684-2009.
- Ensure the high chair is flat on the floor and the wheel is lifted off the floor when not moving the chair.
- To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords and position the high chair away from furniture when the chair is not being used at a table with tray removed.
- Do not use high chair if it is not working correctly, seek for repair immediately.
- Follow the manufacturer's instructions.
- The harness must always be used and correctly fitted - most injuries from high chairs are caused by falls.
- Do not leave children unattended.
- Distribute by: B2C Furniture
Address: 32-40 Tarnard Drive, Braeside VIC 3195.

HOW TO USE & ADJUST SAFETY BELT


LOCK

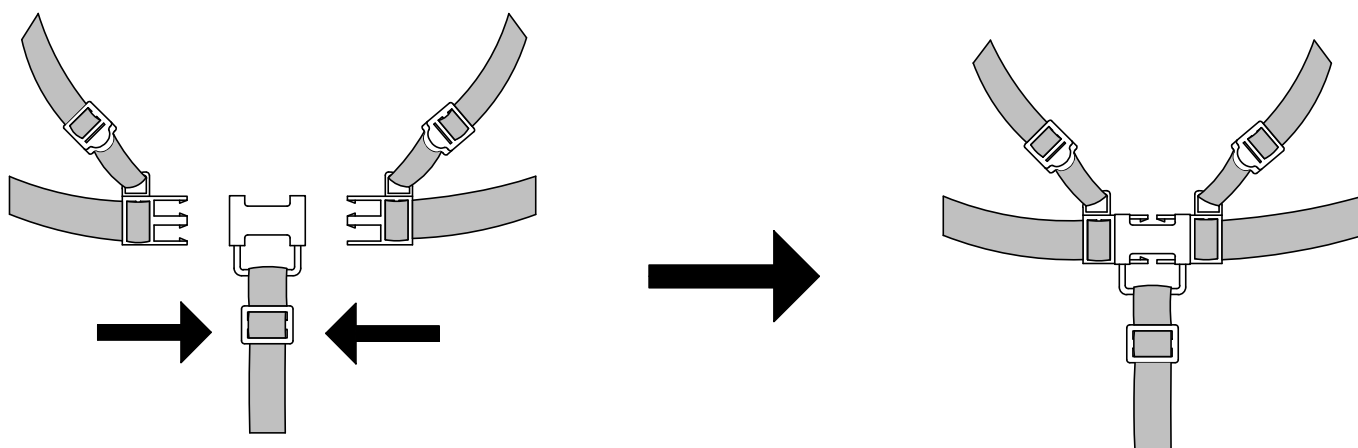

UNLOCK

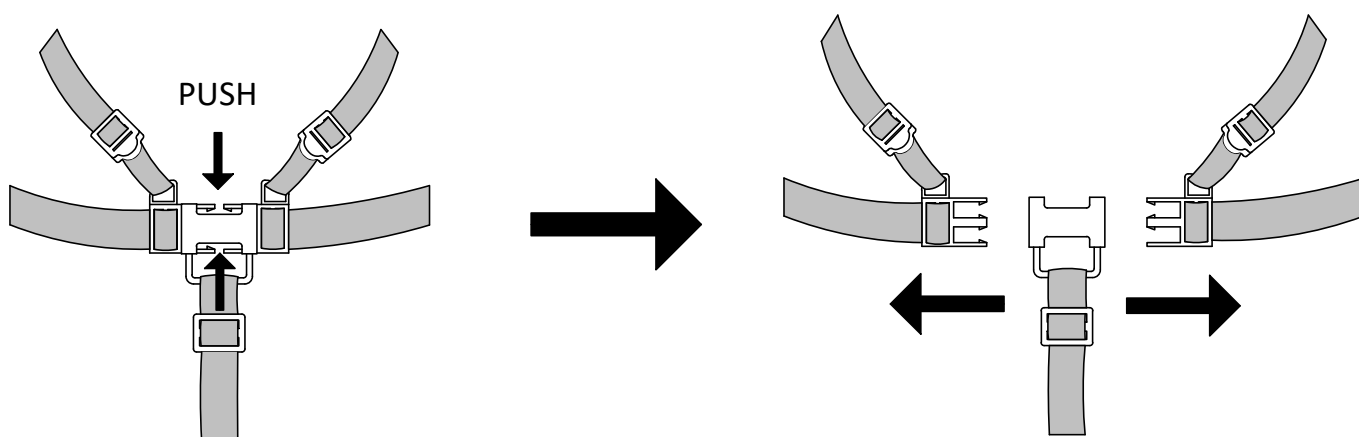 

ADJUST

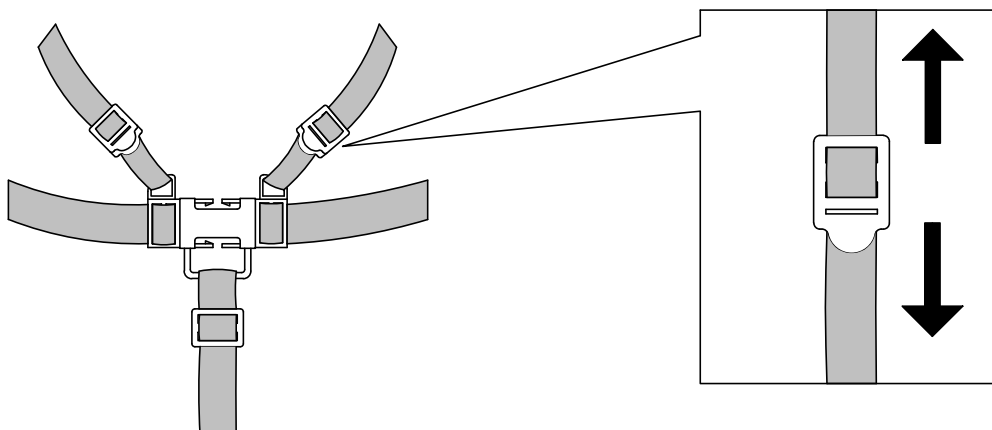 

HARDWARE INVENTORY



A. ALLEN HEAD BOLT
- M6 x 45MM
(12 PCS)



B. ALLEN HEAD BOLT
- M6 x 30MM
(2 PCS)



 
C. WOOD DOWEL
- Ø8 x 30MM
(12 PCS)



D. BARREL NUT
- M6 x 13MM
(12 PCS)




E. ADJUSTABLE BUCKLE
(1 PC)




F. ALLEN WRENCH
- M4 x 50MM
(1 PC)

 PARTS LIST

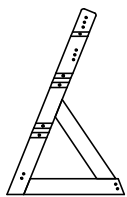

 
1.LEG LEFT
(1 PC)

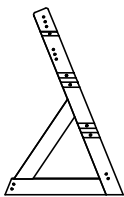


2.LEG RIGHT
(1 PC)



 
3.BACK REST BOARD A
(1 PC)



 
4.BACK REST BOARD B
(1 PC)

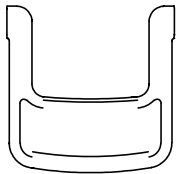

 
5.TABLE BOARD
(1 PC)

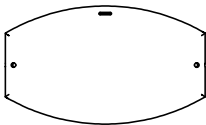

 6.SEAT BOARD
(1 PC)

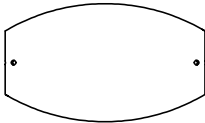


 7.FOOT BAR
(1 PC)




8.CHAIR SUPPORT
(2 PCS)

 
STEP 1

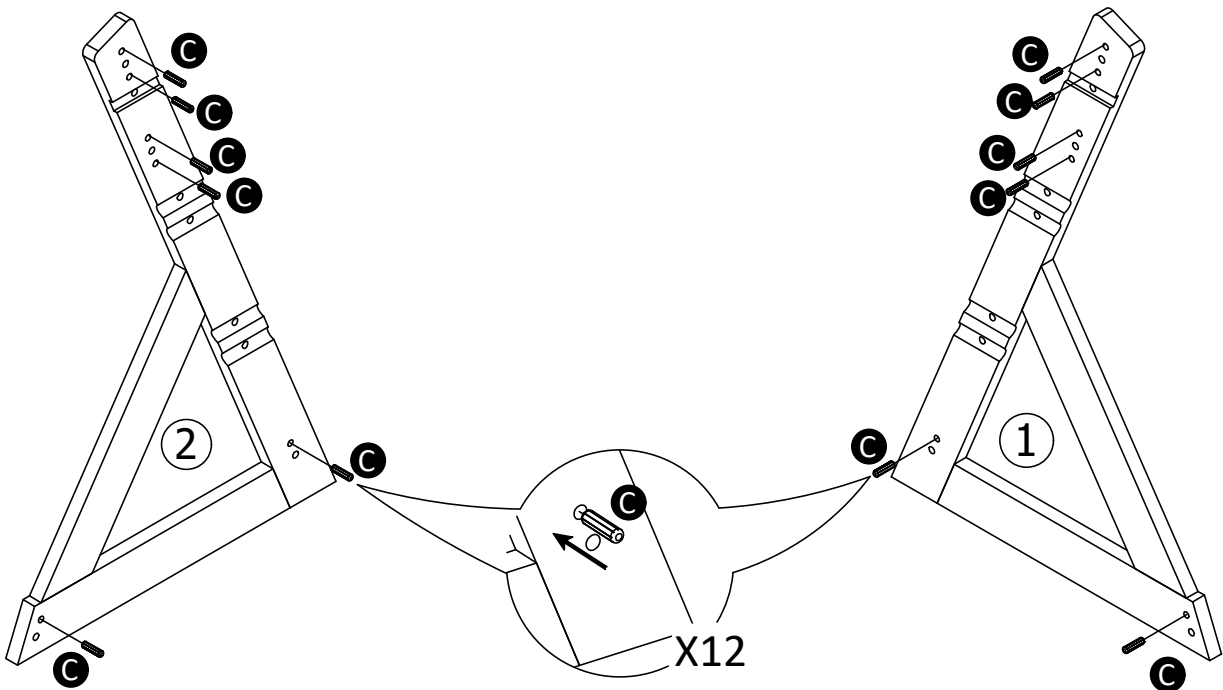

 
STEP 2

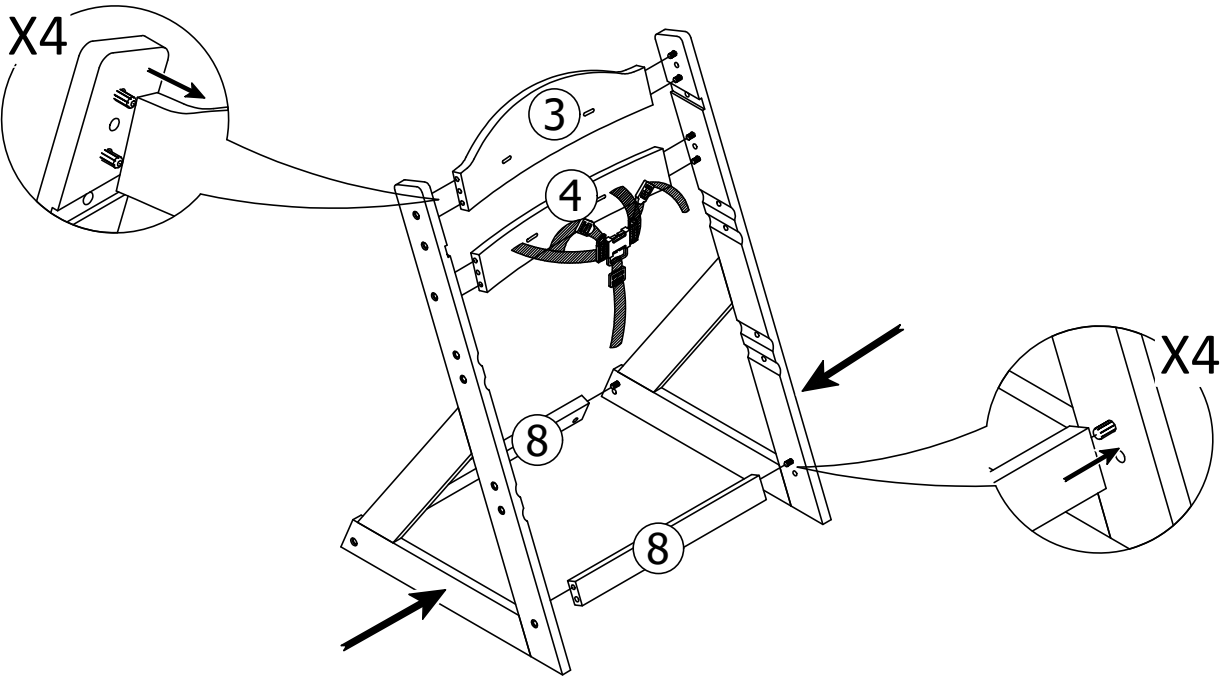

 
STEP 3

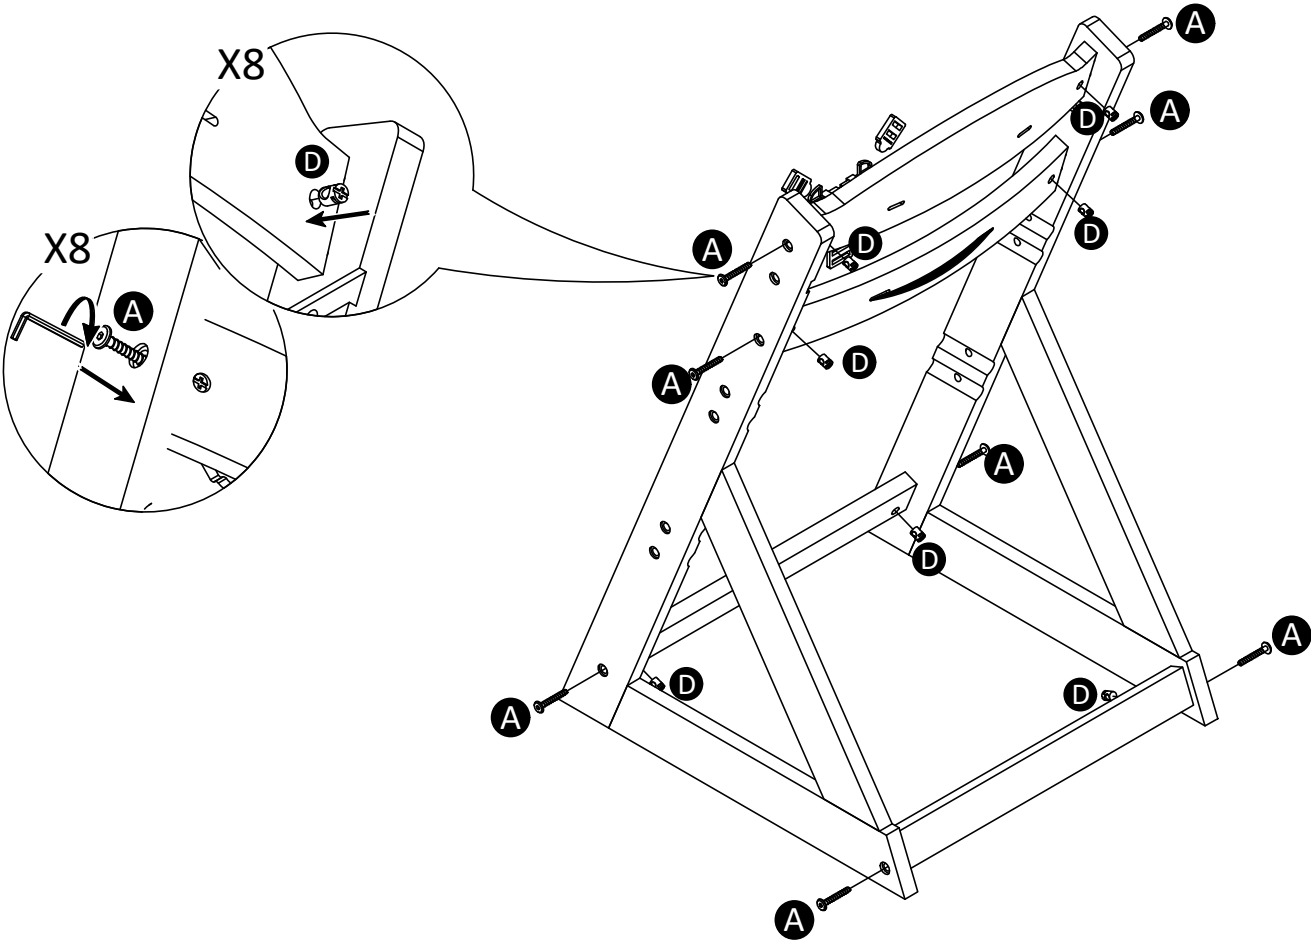

 
STEP 4

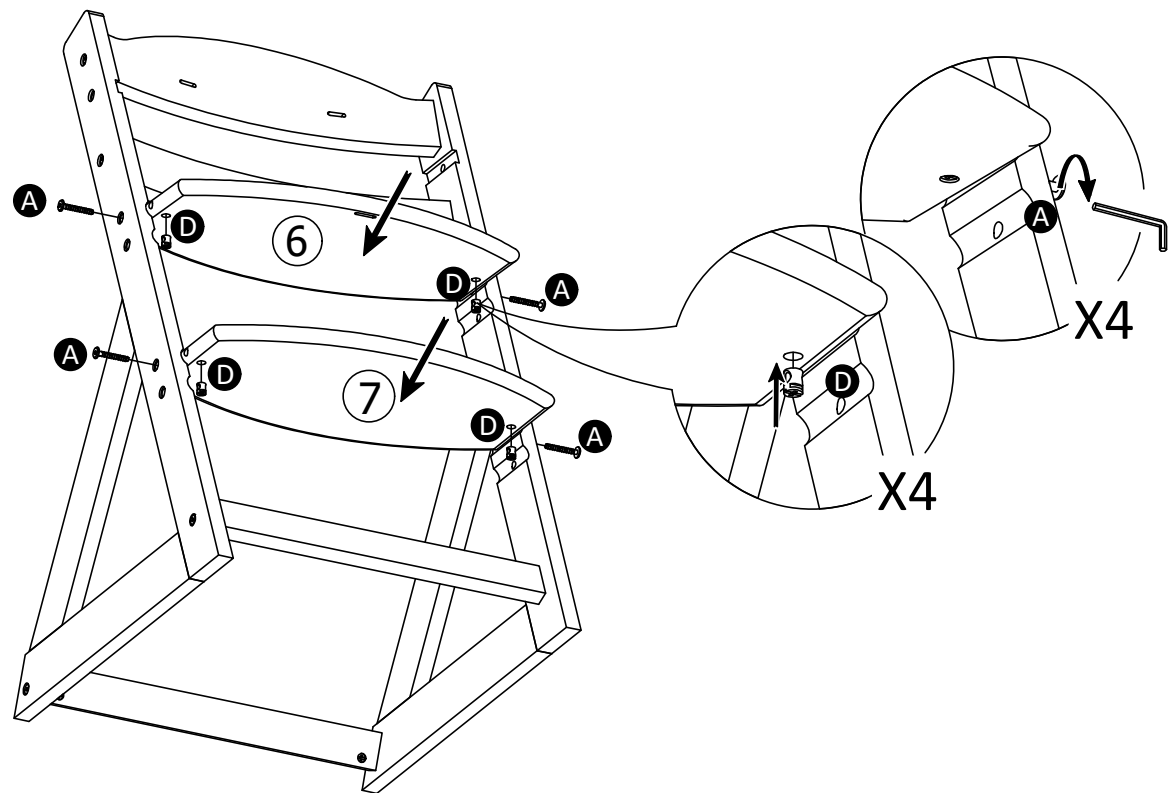

 STEP 5

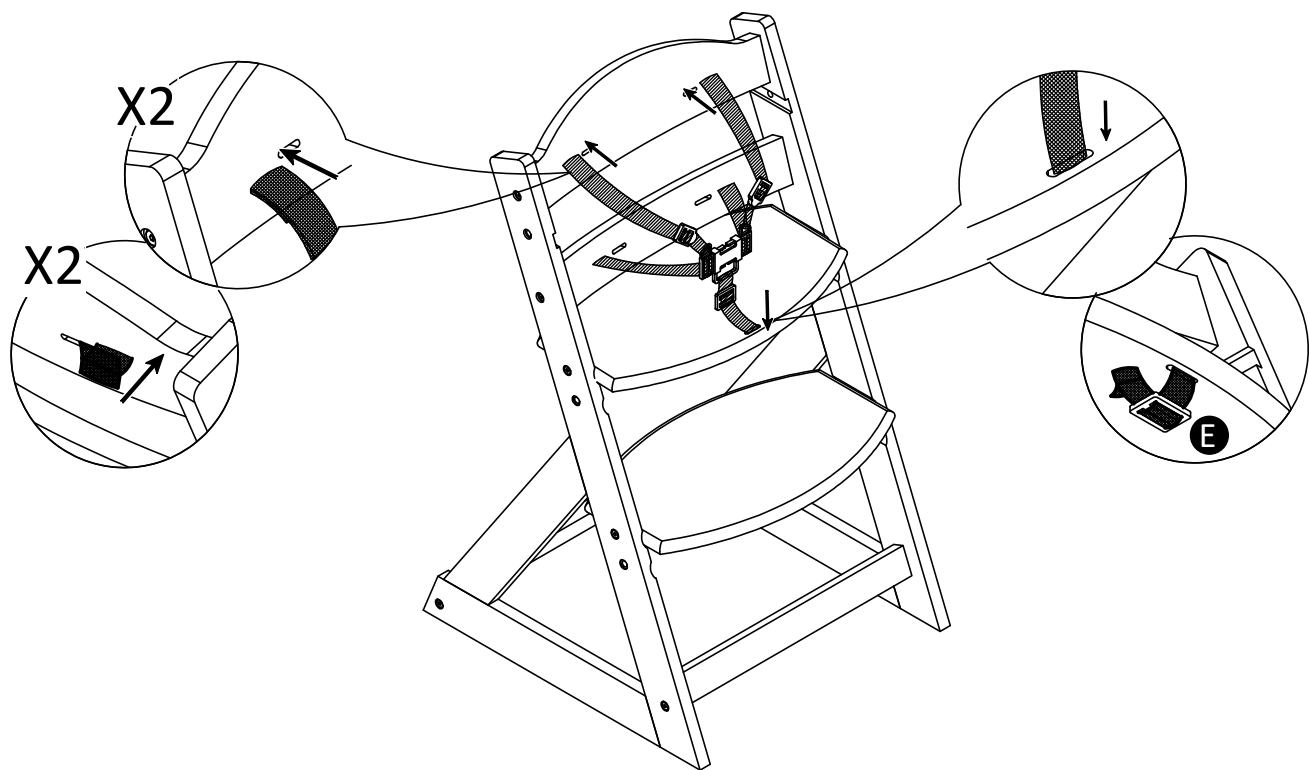


 STEP 5

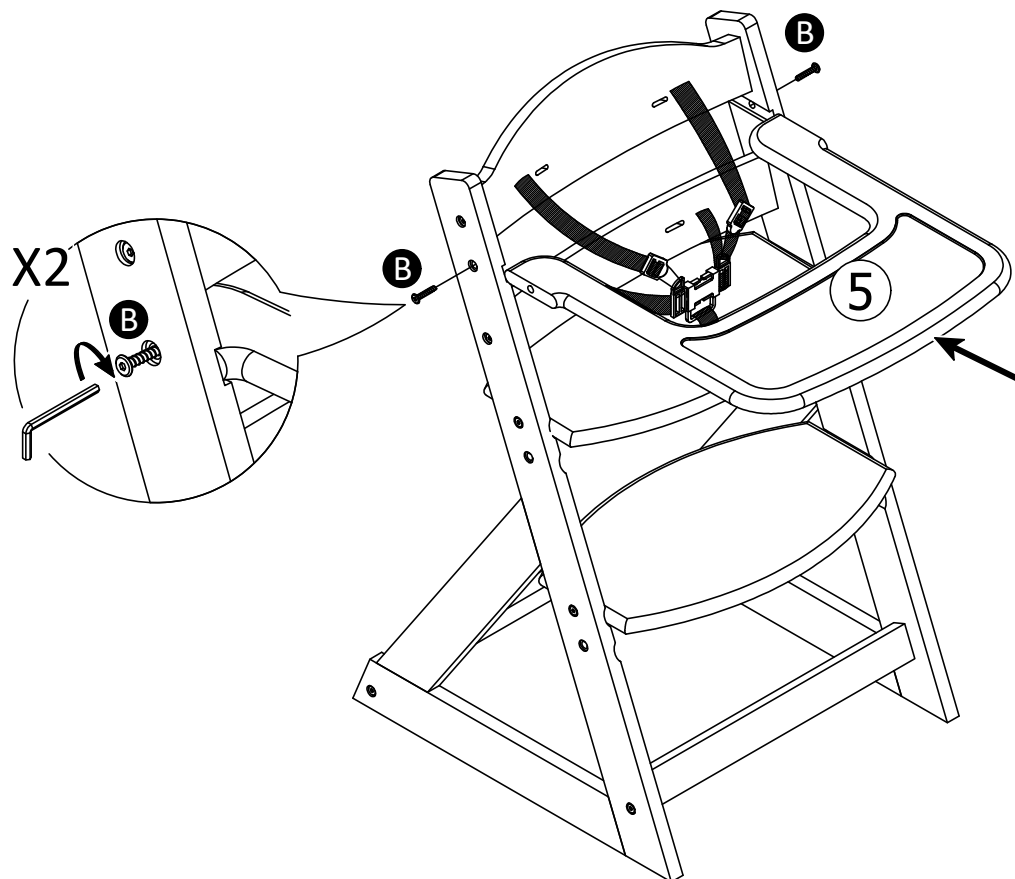


STEP CHANGE LEVEL

 
STEP 1

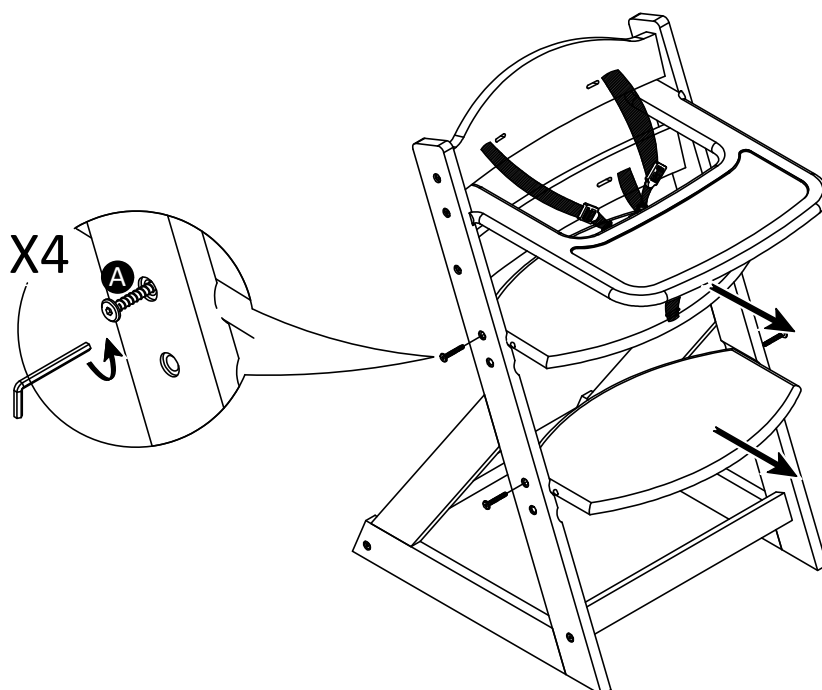

 
STEP 2

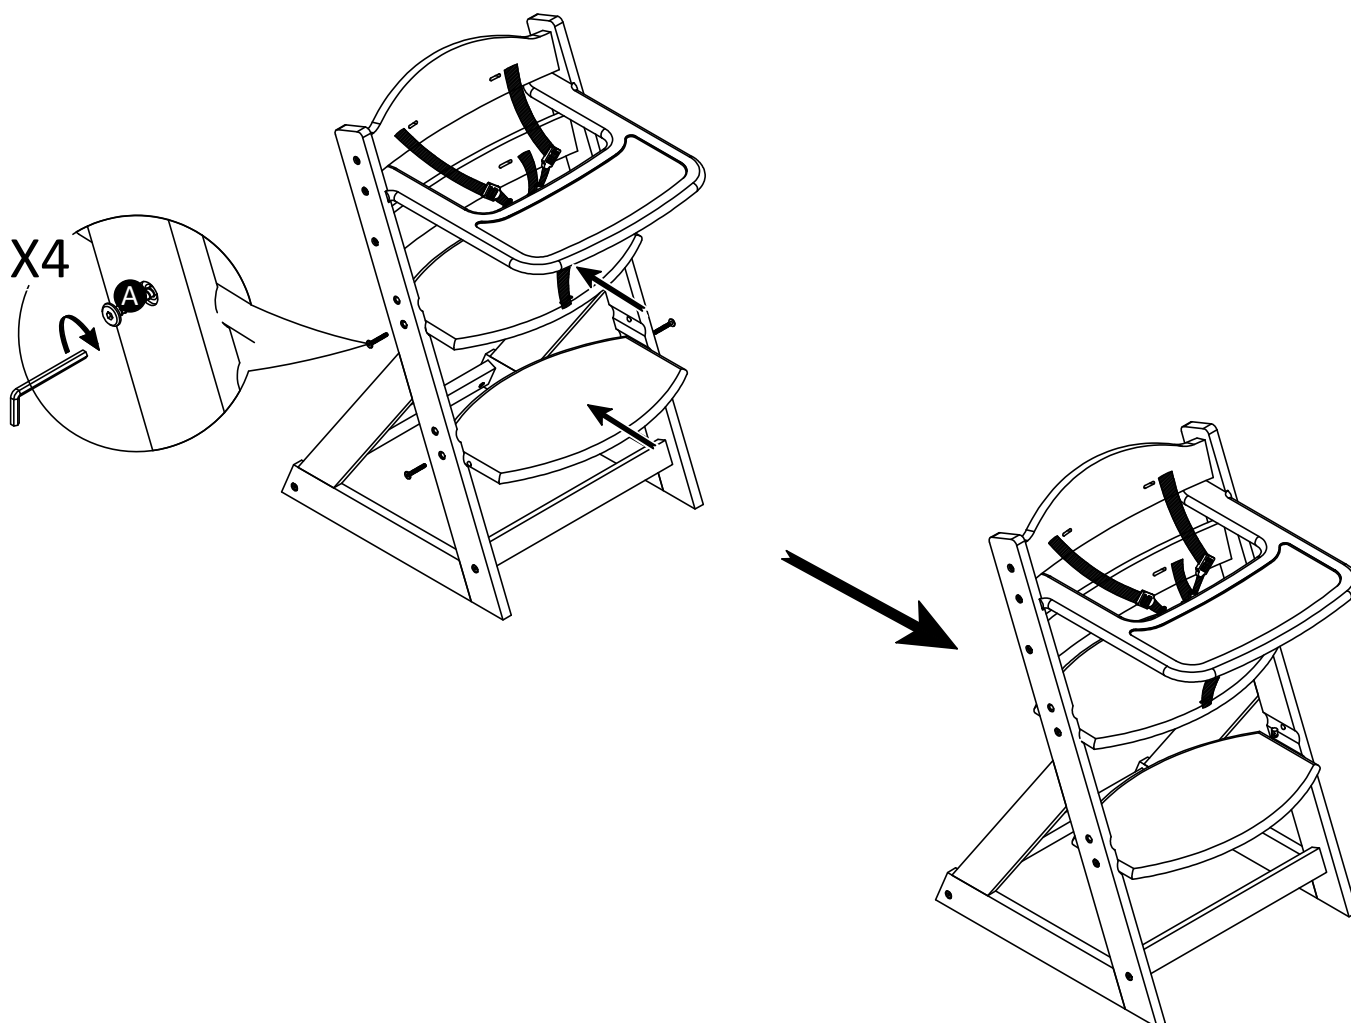

2 Level Adjustable Seat Level

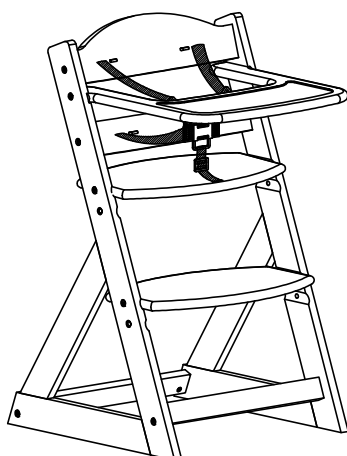 

UPPER LEVEL

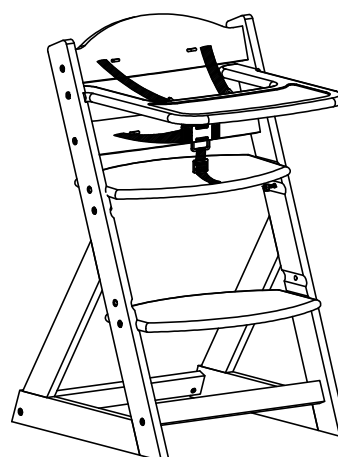 

LOWER LEVEL