



To set up the Eco-Jug for dispensing:

1. Remove the Cap by first prying off the security ring. It helps to use a towel to grip the cap to remove it or use a jar opener.
2. Remove the center of the cap with a hole saw, drill, screwdriver, scissors or knife.



If you do not have a hole saw, make a series of small holes with your tool of choice. This allows the center of the cap to be pulled out easily. Be careful not to damage the threads in the cap.



3. After removing the center, tighten the cap onto the jug then screw in the spigot for dispensing.

4. To allow the product to flow, remove the small cap and puncture or remove the heat seal or pressure seal, then replace the cap. Leaving the cap loose will allow air to enter for the product to flow quicker through the dispensing spout.

5. Prevent leaks by always ensuring that the nozzle is turned to the off position when not in use. Our All-In-One Spout also turns 360° to allow you to turn it to an upward position. You can also turn the Eco-Jug to an upright position for safe storage.



Scan for the How-To Video

