



FRANCESCA



TRIMMER

FOR CLOSE **GROOMING**
AND **PRE-WAX** PREPARATION.

TRIMMER BREAKDOWN





Razor

Push to remove
or change razor

Power button


Charging port

WHAT'S IN THE BOX

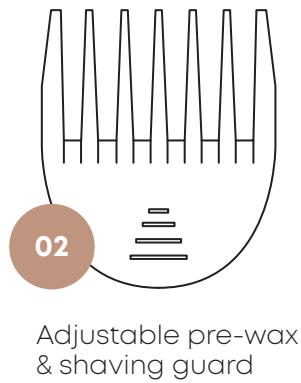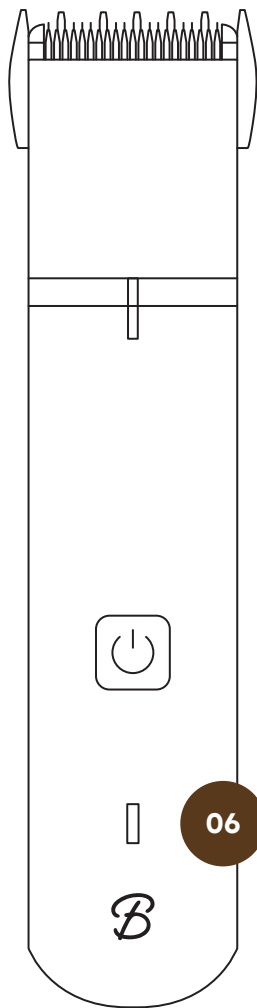


02

Adjustable pre-wax & shaving guard

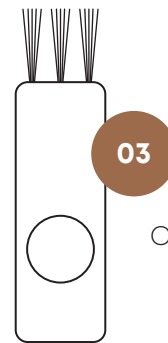

03

Cleaning brush

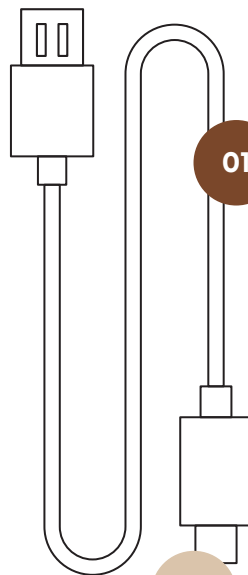


01

Charger

04

USB charging cable

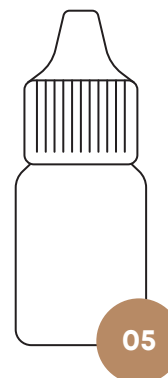

05

Blade lubricant

06

LED indicator

HOW TO USE OUR TRIMMER

01

DETERMINE THE DESIRED **LENGTH** FOR YOUR BODY HAIR.


- The trimmer can be adjusted to 2 lengths: 3mm or 6mm.
- The trimmer comes with the 6mm guard already on. This guard can be easily removed to reveal the 3mm guard.



02

PRESS **POWER BUTTON**.



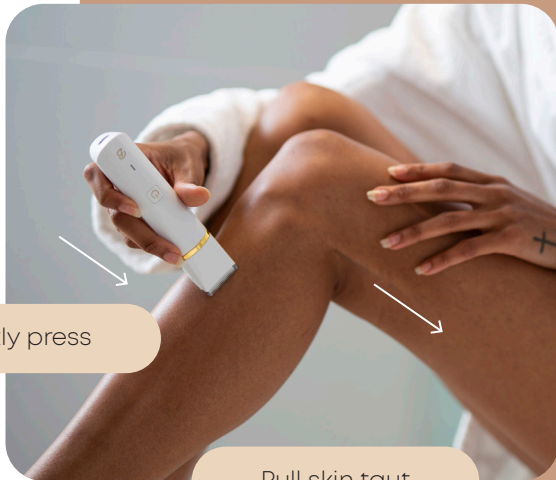

Lightly press

Pull skin taut

03

WITH ONE HAND, PULL THE **SKIN TAUT** AND WITH THE OTHER **LIGHTLY PRESS** THE BUZZING RAZOR HEAD ONTO THE SKIN.

04

TRIM AGAINST THE DIRECTION OF HAIR GROWTH.



05

USE **SHORT AND GENTLE STROKES** AS YOU TRIM THE HAIR.

06

PRESS POWER BUTTON
TO **TURN OFF**.



07

**REMOVE AND CLEAN
THE BLADE.**

08

LUBRICATE BLADE.

- Our lubricant ensures that the blade stays sharp for as long as possible.





09

POP THE BLADE BACK
ONTO THE TRIMMER
AND STORE IT FOR
LATER USE.



Use cleaning brush

10

HOW TO **SWITCH BLADES.**





BUSHBALM.COM

