

 
KaCtus + Kutter

WELCOME


Safety Precautions

- **Keep the grinder out of reach of children.** The grinder has sharp grinding blades that can be dangerous if not used properly. Children should not be allowed to handle the grinder or be in close proximity to it.
- **Do not use the grinder if the power cord or plug is damaged.** If the cord is damaged, do not attempt to repair it yourself. Contact a qualified technician for repair. Using a damaged grinder can be hazardous and cause electric shocks or fires.
- **Do not immerse the grinder in water or any other liquids.** Doing so may damage the motor and other components of the grinder, and also create the risk of electric shock. If you need to clean the grinder, use a dry cloth to wipe it down.
- **Always turn off the grinder after use.** Leaving the grinder on may cause the battery to drain and reduce the lifespan of the battery. It can also increase the risk of accidents if the grinder is left unattended.
- **Do not use the grinder near flammable materials.** The grinder generates heat during use, and this can be dangerous if it comes into contact with flammable materials. Keep the grinder away from flammable liquids, gases, or other substances that can ignite easily.
- **Do not use the grinder if it is damaged or malfunctioning.** If you notice any unusual noise, vibrations, or other signs of malfunction, stop using the grinder immediately and contact the manufacturer or a qualified technician for assistance. Continuing to use a damaged or malfunctioning grinder can cause injury or damage to the product.



PRODUCT OVERVIEW

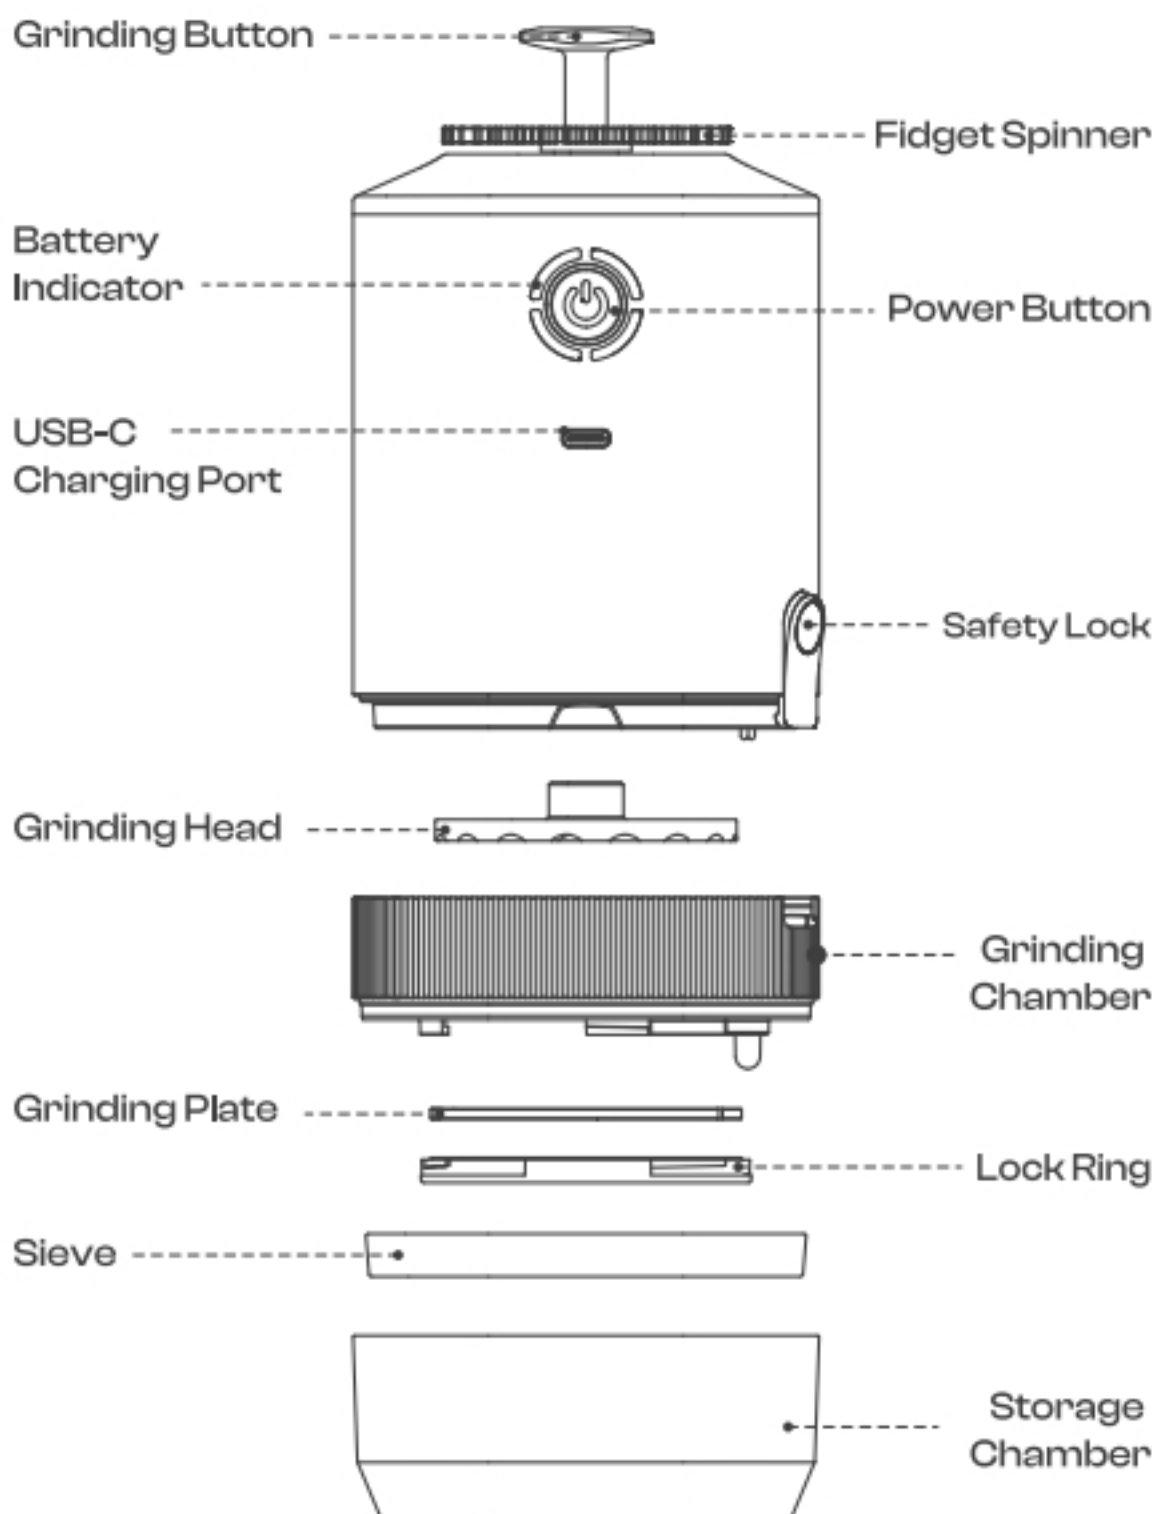

IN THE BOX

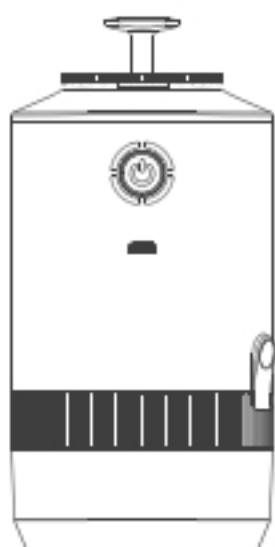 

KatusKutter
K5 Grinder

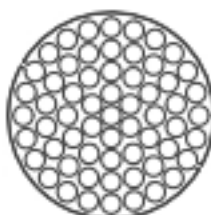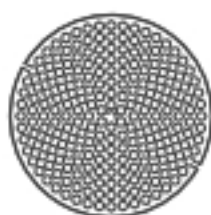  

2 Grinding Plates



Sieve



Cleaning
Brush



 
Charging
Cable



Half Funnel




K5 User
Manual

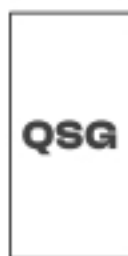


Quick Start
Guide

 HOW TO USE

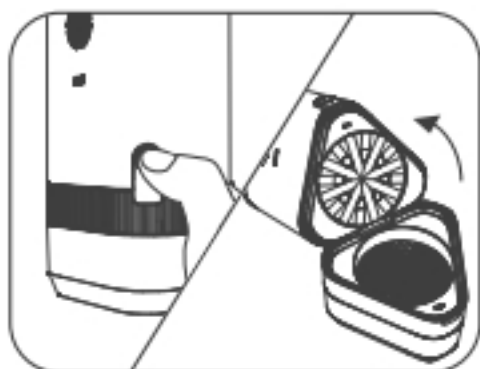

1. Open the Grinder:

 To open the grinder, simply press the "Push-to-Open" button. This will easily separate the parts, allowing you to access the grinding chamber.

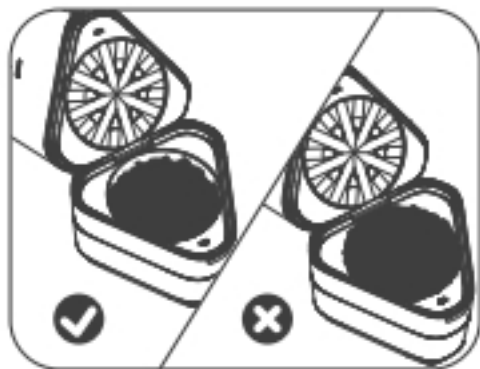


2. Load the Herbs:

Place the material you wish to grind into the grinding chamber. Be careful not to overfill - you can always grind in batches if needed.




3. Lock the Grinder:

To lock the grinder, just snap the parts back together. You will hear a 'click' sound, indicating that it is securely locked.

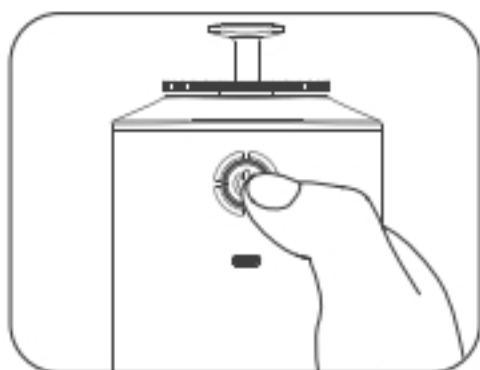


4. Power On:

Press the power button to turn on the grinder. You will notice both the indicator light and the storage light illuminate. This signifies that the grinder is ready for use. If there is no further operation, it will turn off automatically.

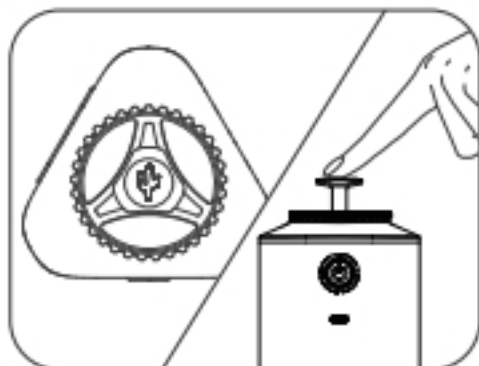

5. Push to Start Grinding:

Simply push the grinding button on top to activate the grinder. You can observe the process through the storage chamber to determine when the grinding is complete. This usually takes about 6-7 seconds. Release the button once done.

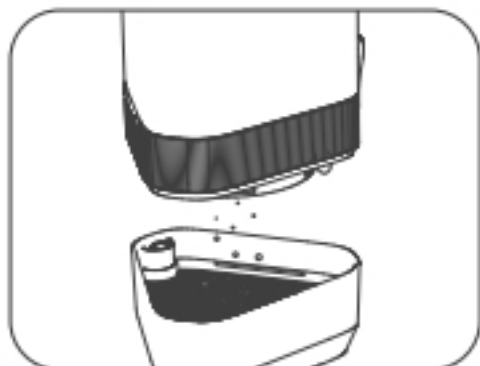


6. Enjoy:

Your material is now finely ground and ready for use. Enjoy the freshly ground product!


OTHER FEATURES

1.Adjustable Grinding Plate:


We provide three different sizes of high-quality 304 stainless steel grinding plate, allowing you to adjust the coarseness of your grind.

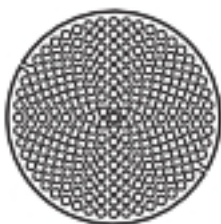

Fine

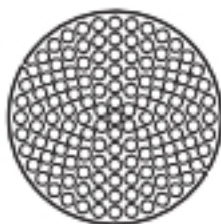

Medium

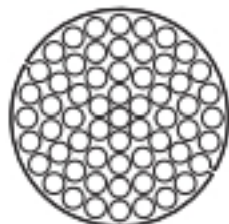

Coarse


How to Change the Grinding Plate:

a.Ensure Safety:

First, make sure the grinder is turned off, locked, and empty of any material.

b.Accessing the Plate:


Invert the grinder and open the storage chamber. You will see an orange lock ring

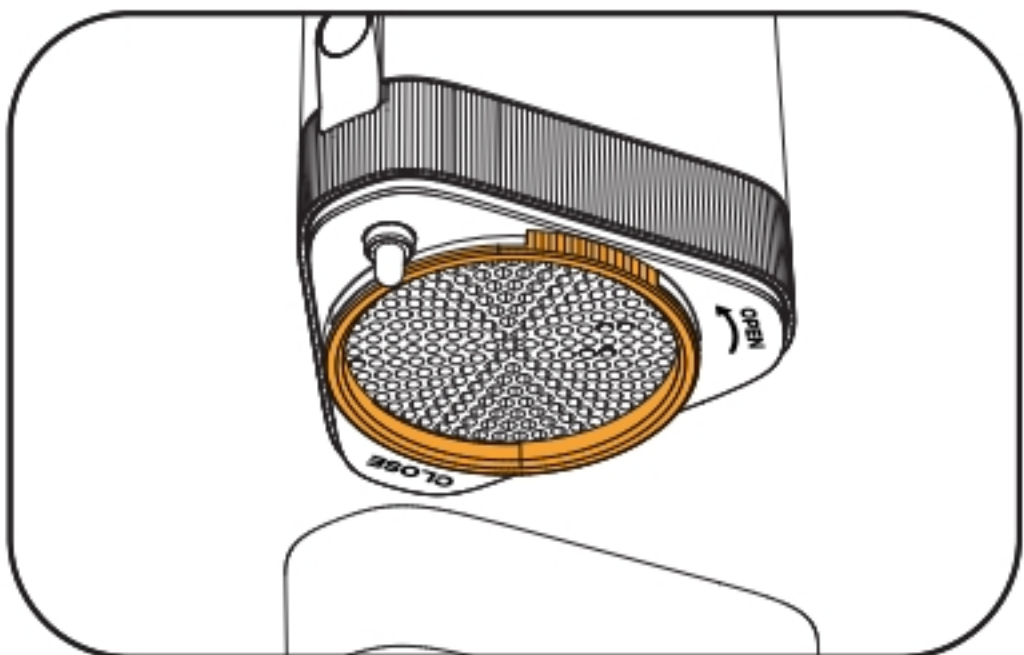

OTHER FEATURES


c. Removing the Plate:

Turn the lock ring counterclockwise to remove the bottom grinding plate.

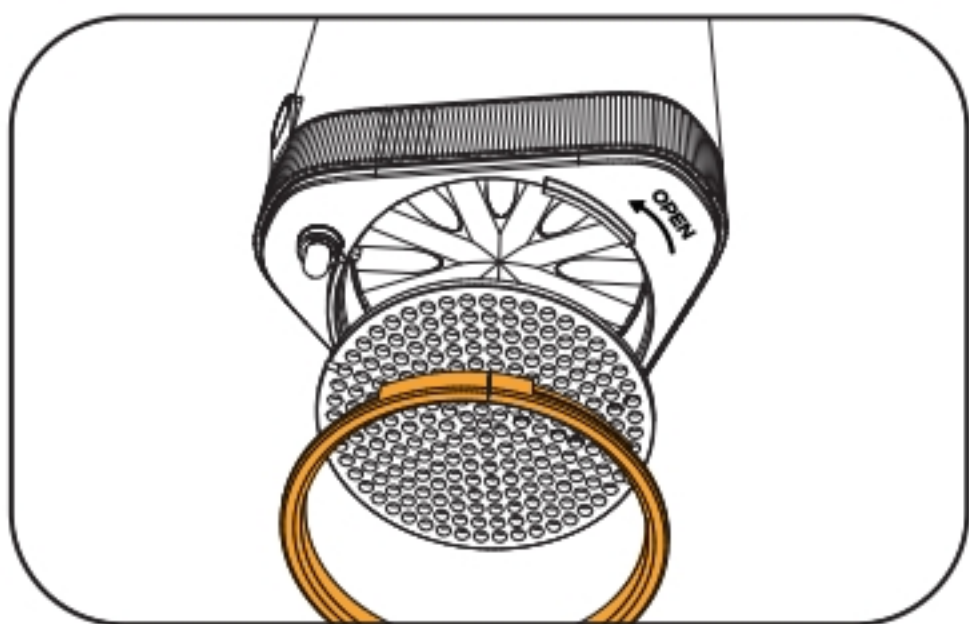

d. Installing a New Plate:

Place the new grinding plate of your desired size and then rotate the lock ring clockwise to secure it. Ensure it is tightened to the final position for safety.

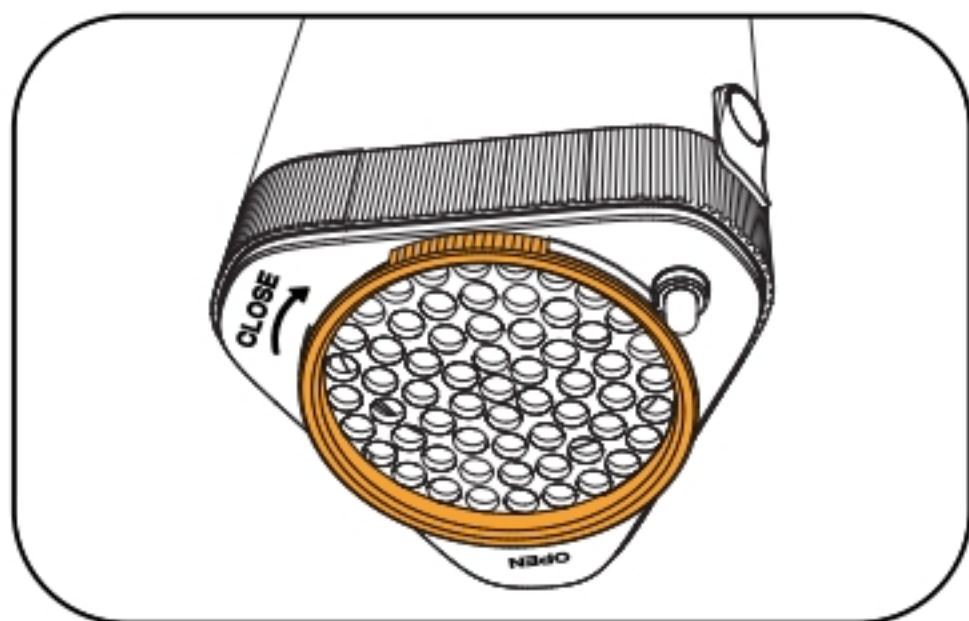

OTHER FEATURES

2. Charge Your Grinder

a. Using a USB-C Charger:

You can charge your device using any standard USB-C charger, which is commonly available in most households.

b. Charging Indicator:

During the charging process, the circular light on the device will gradually illuminate. This light is divided into four segments, each representing a portion of the battery charge. When all four segments are lit, the device is fully charged.



OTHER FEATURES

c. Battery Usage Indicator:

While using the grinder, the four indicator lights will progressively turn off as the battery depletes. When only the last segment is lit and it turns orange, it indicates that the battery is running low and the device needs to be recharged soon.



Please ensure to charge the device regularly to maintain optimal performance. It's recommended to fully charge the device before first use.

MORE INFORMA- TION ON OUR WEBSITE!

We've put our heart and soul into creating this product to make your experience with the electric grinder a breeze. If you ever find yourself in a pickle or need a helping hand, don't hesitate to reach out to us. We're here to save the day, one grind at a time! Thank you for choosing our awesome product, and happy grinding!

Model: K5

Battery Capacity: 18.5 Wh

Grind Torque: ≥ 40 Kg

No Load Speed: 80rpm

Storage Temperature: $20^{\circ}\text{C} \sim +60^{\circ}\text{C}$, $\leq 80\% \text{RH}$

E-mail: support@kactuskutter.com

Website: kactuskutter.com

Address: RM A07, 1701-02 New Trend Centre, 704
Prince Edward Road East, SAN PO KONG KLN, HONG
KONG

Made in China