

How to Open & Close


To Open

1. Pull down the weather cover
2. Press down the clear button in the middle of the key safe & release
3. Press each button of the number that is in your code firmly, making sure you feel the button click
4. Turn the dial at the top of the key safe clockwise 180° so the word 'Open' is upside down
5. Open the key safe



To Close

1. Close the key safe lid
2. Holding the lid closed, turn the dial at the top of the key safe 180° anti-clockwise
3. Close the weather cover

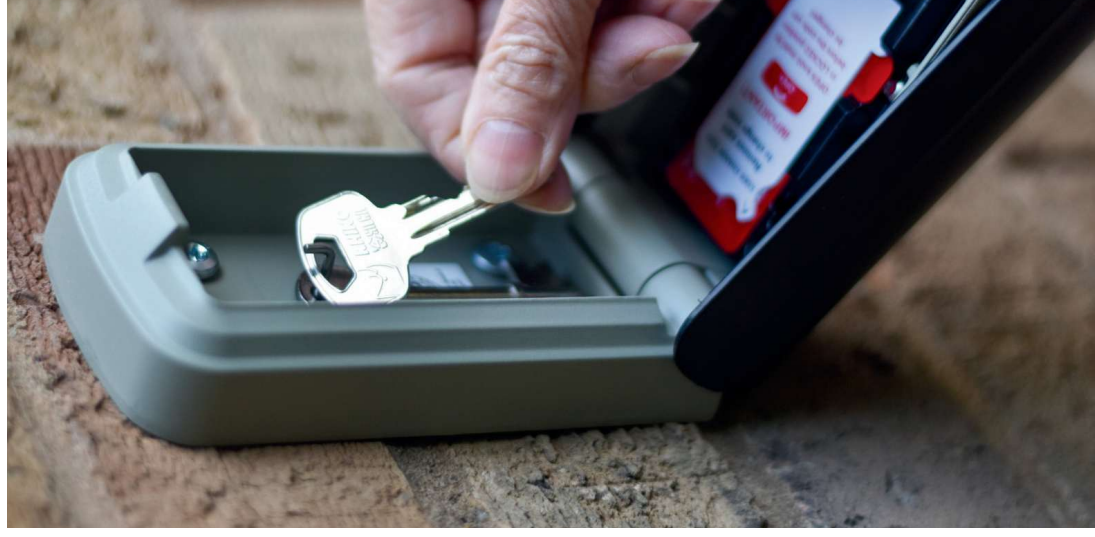

Best Practice

DO NOT leave the key safe open

A passerby could look inside and see the code, this could lead to unauthorised access to the key safe.

Rain could enter the mechanism which can freeze in cold weather. If this happened, the key safe would not open until defrosted.

How Safe is the C500 KeySafe?

The C500 Pro KeySafe™ has passed an independent attack test and is certified to LPS1175 Issue 8 A5.

This accreditation is recognised by the police and means we meet the Secured by Design police preferred requirements.

The C500 Pro KeySafe™ is more secure than a domestic front door.



Secured by Design



LPS1175 Issue 8 A5;
Ref 1062h/01

Official Police Security Initiative

Key Safe will not open

Make sure you follow the instructions in 'To Open' section.

If key safe did not open

1. Press down clear button again
2. Press every button and check if they all click

If all buttons click, this indicates that you are using an incorrect code.

If one or more buttons do not click, this indicates the mechanism may be broken.

Defrosting a key safe

Hold a warm cloth over the key safe to defrost it.

Once you have the key safe open, dry it as much as possible then spray some WD40 into the mechanism to remove excess moisture and prevent re-freezing.

www.keysafe.co.uk
hello@keysafe.co.uk
0330 363 0303