 
 


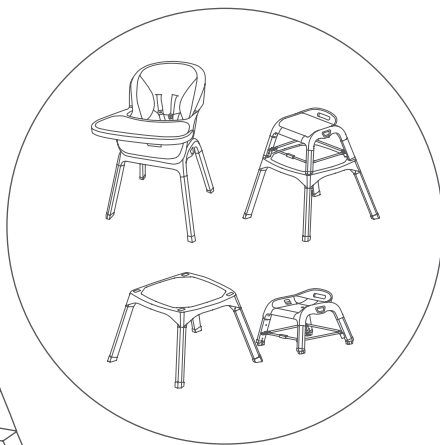

Baby Elegance[®]

Cube Highchair User Manual

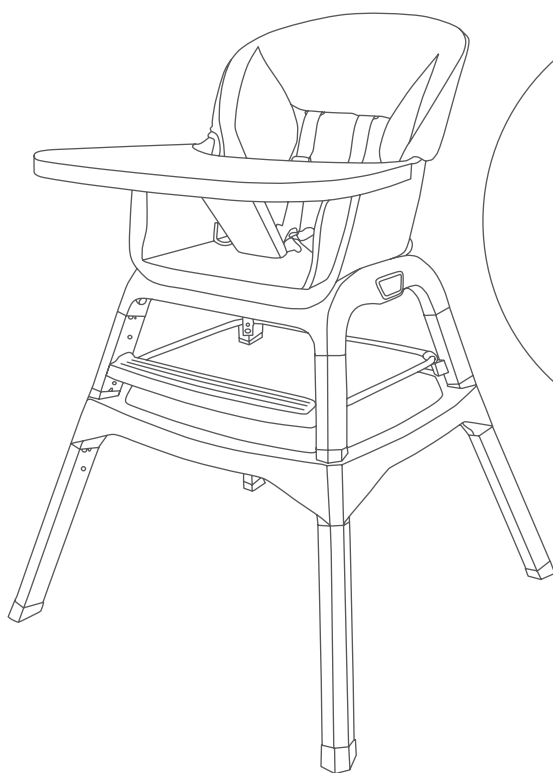

PLEASE READ THE FOLLOWING INSTRUCTIONS AND WARNINGS
CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE.



Safety Information

 
PLEASE READ THE INSTRUCTIONS BEFORE ASSEMBLY AND KEEP THEM FOR FUTURE REFERENCE

WARNINGS

- Please follow the instructions carefully. Failure to follow these warnings could result in serious injury.
- This product is suitable for children from 6 months > 3 years as highchair and 3 years > 14 years as toy table and stool.
- **DO NOT** make any modifications to this product or use it with components from any other manufacturer.
- **DO NOT** use this product if any parts are broken, torn or missing.
- Never leave your child unattended. Always keep your child in view.
- To prevent serious injury – secure your child with the safety restraint harness at all times.
- Make sure the harness is fitted correctly.
- **DO NOT** use this product on stools or benches.
- **DO NOT** allow your child to stand in or on the highchair.
- **DO NOT** allow your child to climb the highchair.
- **DO NOT** lift or carry the highchair while it is occupied.
- **DO NOT** allow children to hang over the side of the highchair.
- Always use on a flat surface and check all legs are locked before use.
- Remove your child before adjusting or folding the highchair.
- Keep children away when folding the highchair to avoid injury.
- Be aware of open fire and other forms of strong heat such as electric and gas fires in the vicinity of the highchair.
- To reduce the risk of injury be sure to position the highchair away from walls, hot surfaces, liquids, window cords and electrical cords.



Components

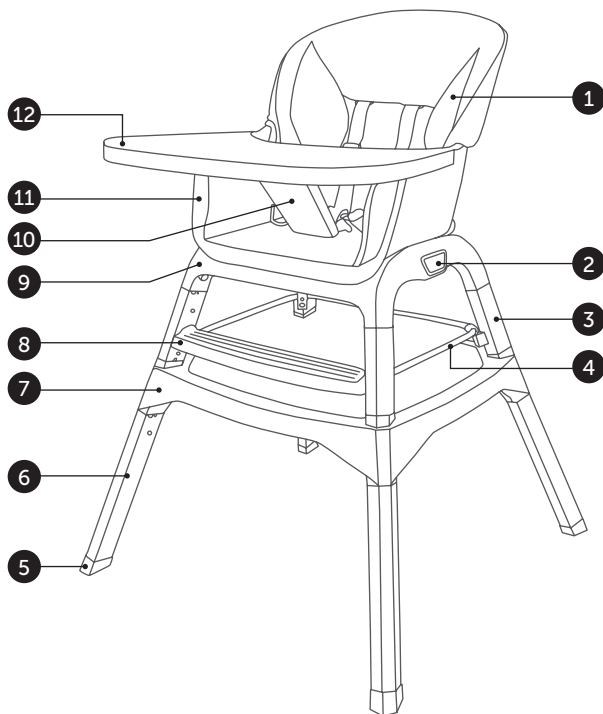

- | | |
|-------------------|------------------|
| 1. Seat pad | 7. Desktop |
| 2. Release button | 8. Foot rest |
| 3. Short leg | 9. Seat base |
| 4. Support frame | 10. Crotch guard |
| 5. Foot pad | 11. Seat |
| 6. Long leg | 12. Tray |

 


Baby Elegance®


Crotch guard




Tray




Seat

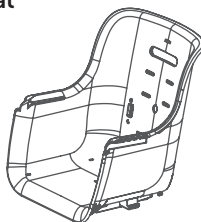 


Seat base

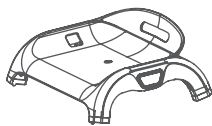 


Seat pad

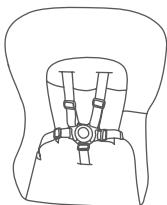 


Foot rest

 

Support frame

 


Short leg A

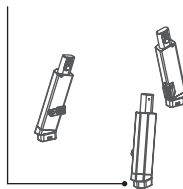 


Short leg B



 Desktop

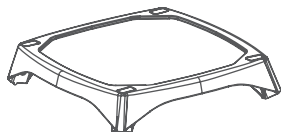

Long leg

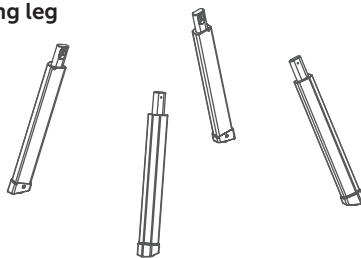 




Cube Highchair

Product Features

 Highchair

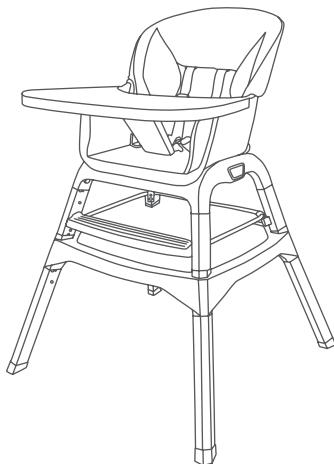

Low seat



 


Baby Elegance®

High stool



Play table and seat


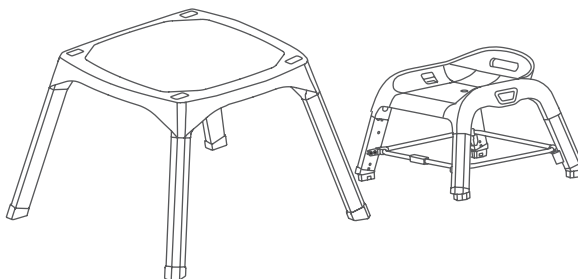





Assembly Information

► TABLE ASSEMBLY

  1

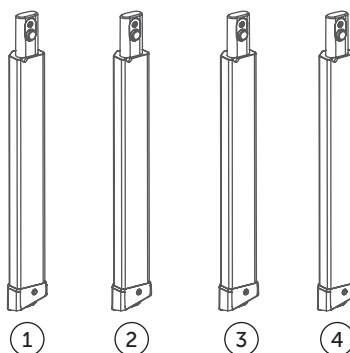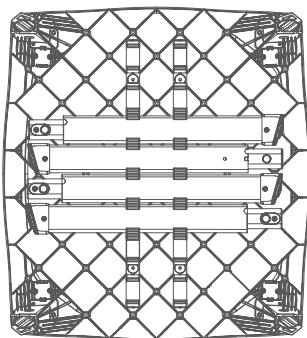

Long leg x4

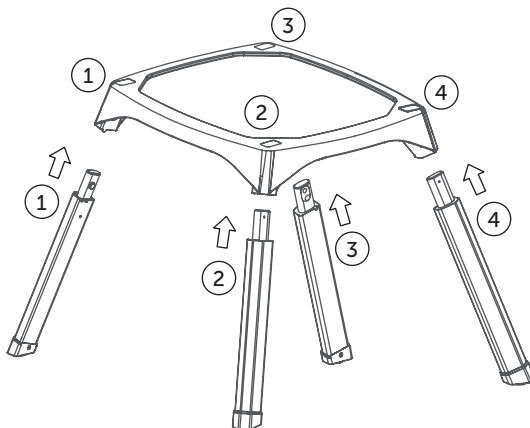 




Baby Elegance®

► SEAT BASE ASSEMBLY

 2

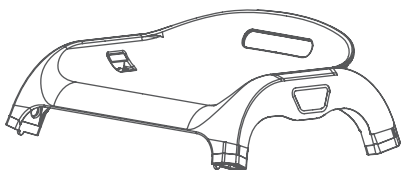

1

 
2

3

4

Short leg A



Short leg B

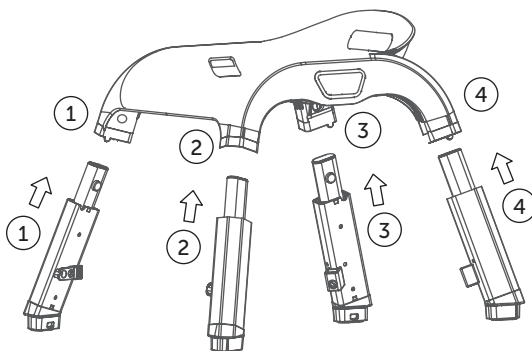





► SUPPORT TUBE GROUP ASSEMBLY

  3

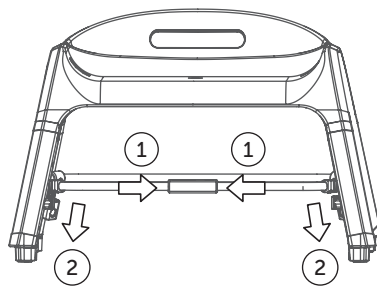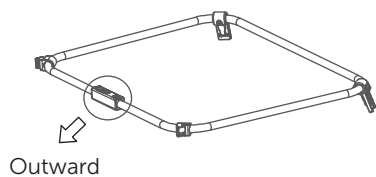

► FOOT REST ASSEMBLY

  4

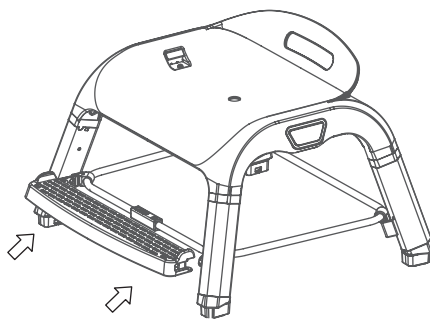




Baby Elegance®


► CONNECTING THE SEAT

 5

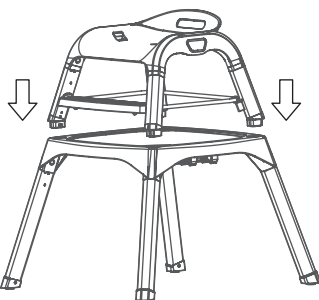

- Line up the seat with short legs up with the clips on the table ensuring all 4 are connected securely.

 6

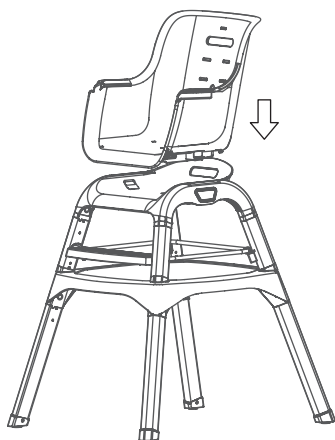


- To connect the seat, line up and push down on the seat base.



► TRAY ASSEMBLY

 
7

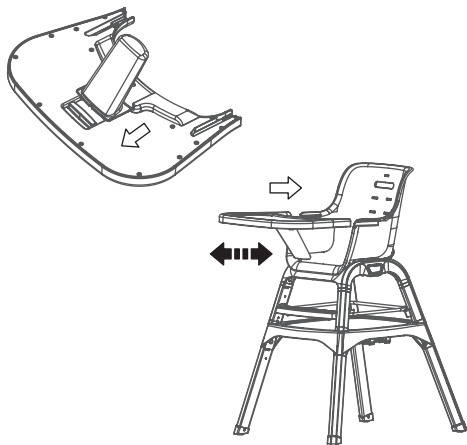

- The tray has three stages of adjustment.
- Release the lever and slide onto the frame.

► REMOVABLE TRAY INSET

 8

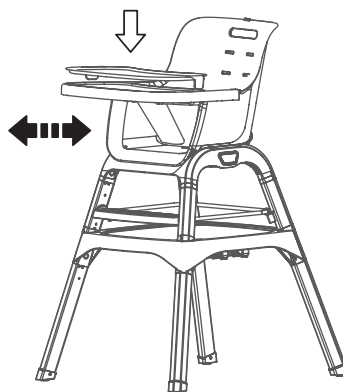




Baby Elegance®


► SEAT BELT INSTALLATION

 9

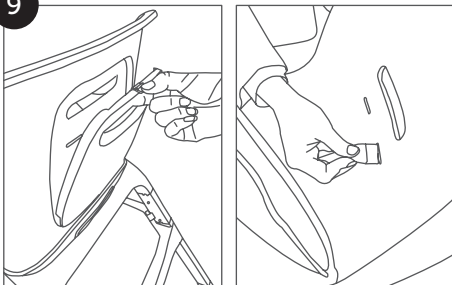


- Open the back cover of the seat.
- Feed the shoulder straps through the slots and allow the strap to catch in the seat.

 10

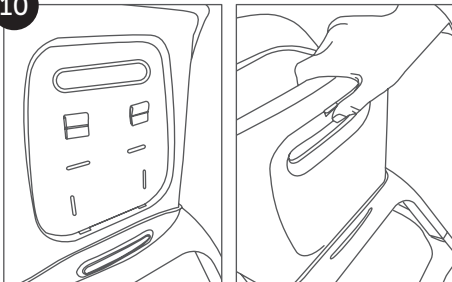

- Close the backrest when the straps are in place.

 
11

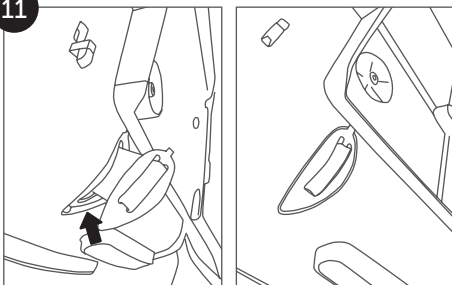

- Feed the side straps through the slots and pull back on the straps to allow them to catch against the seat.




 12

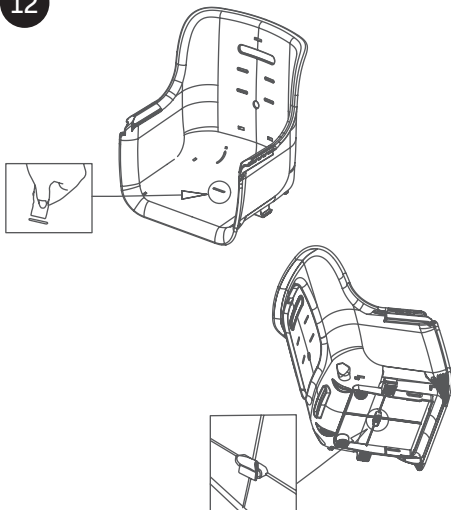

- Feed the crotch strap through the slot and allow to catch.

 13

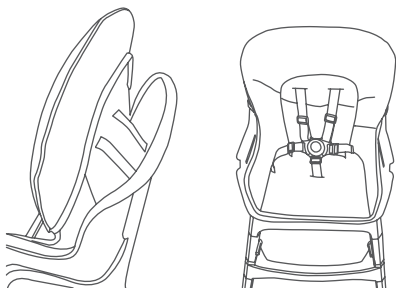


- Attach the seat cover.




Baby Elegance®

 14

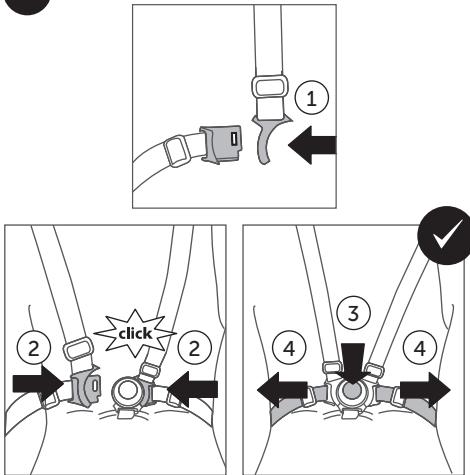

- Place the shoulder straps over each arm.
- Securely click the harness anchor points into the centre buckle.
- Make sure you hear it click in place to ensure the harness is totally secure.

 
15

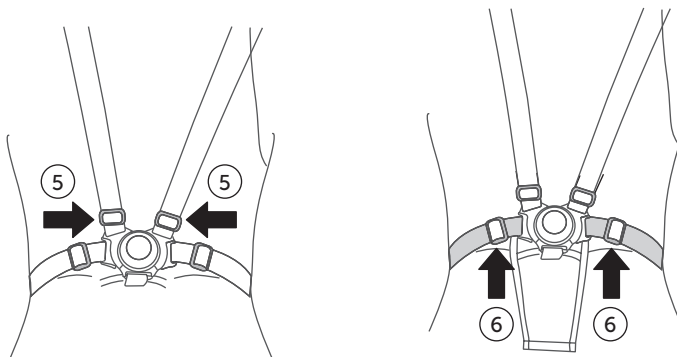




► TO RELEASE THE SEAT

 16

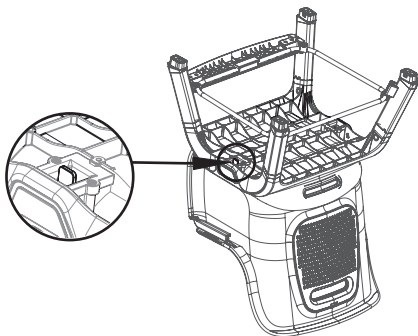

- To release the seat press the 2 buttons on the side of the seat and lift off.

 17

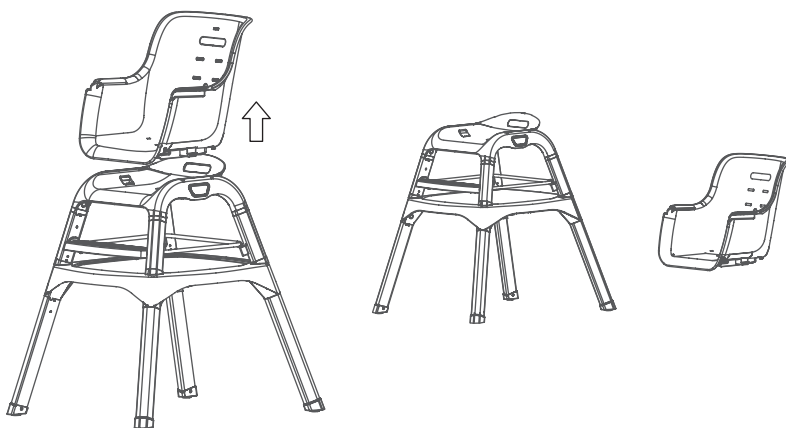




Baby Elegance®


► TO RELEASE THE SEAT BASE

 18

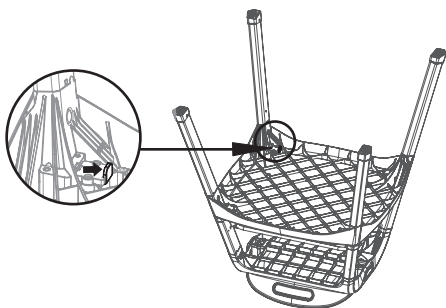

- Pull back the clip under the table to release the upper section. Repeat for all 4 legs.

 
19

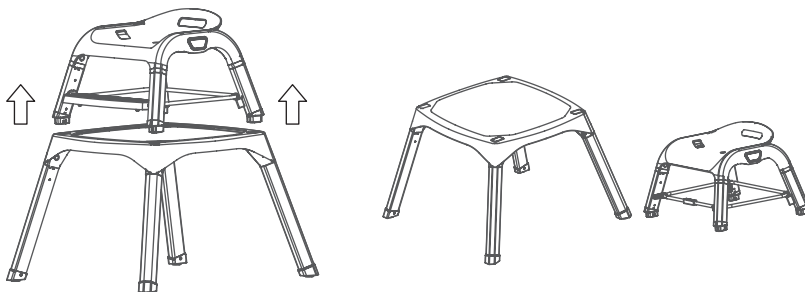



► REMOVING TABLE LEGS

 
20

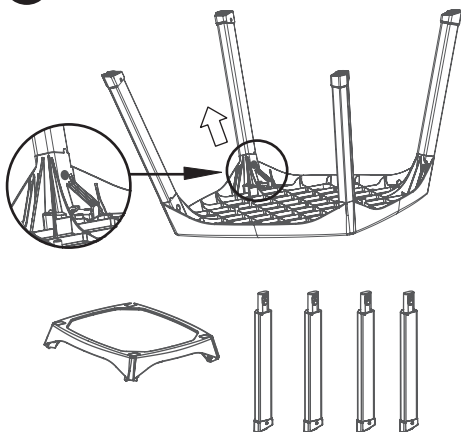

- Hold down the grey quick release button and at the same time pull out the wooden foot.

► REMOVING SEAT BASE LEGS

 21

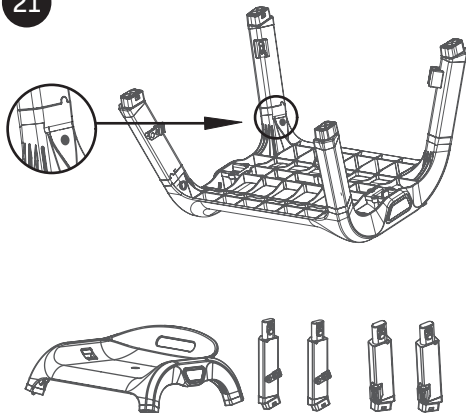

- Hold down the grey quick release button and at the same time pull out the wooden foot.



Baby Elegance®

Care and Maintenance



- The tray is dishwasher safe.
- The seat pad can be spot cleaned with a sponge and soapy water.
DO NOT use bleach.
- Please allow the seat cover to air dry – **DO NOT** tumble dry.
- To clean the frame, wipe with a damp cloth and mild detergent.
Make sure to dry it thoroughly leaving no moisture on the frame.
- **DO NOT** use harsh detergents or other organic solvents to wash this product
as it may cause damage.
- When the highchair is not in use, please store it away or place it somewhere
safe so your child can not access it.





**Baby
Elegance®**

Baby Elegance, Dublin, Ireland

   @babyeleganceire

www.babyelegance.com

