 


Allta Swing

Instruction manual

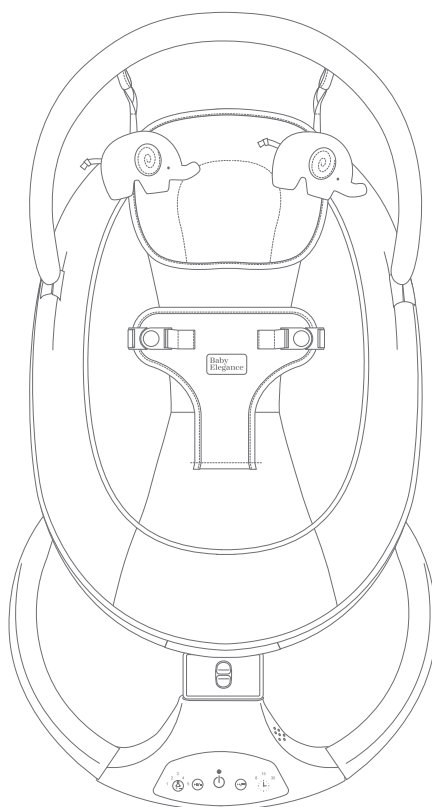

by

Baby Elegance®

IMPORTANT: PLEASE READ THE FOLLOWING INSTRUCTIONS AND WARNINGS CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE.

Product Information

EN

The Baby Elegance Allta swing provides a gentle and soothing natural rocking motion to calm your little one. Featuring Bluetooth connectivity, you can choose from classical pre-set tunes or stream your baby's favorite music right from your phone.

With the convenience of a remote control, you can easily adjust the swing's 5 speed settings, set the timer, and control the music all from the comfort of your own seat. The Baby Elegance Allta swing also includes a built-in display controller.

Designed with your baby's comfort and safety in mind, this swing boasts plush, thickly padded cushions and a 3-point safety harness. Its ergonomic and modern design is not only functional but also stylish, and it is lightweight and easy to assemble.

- Can be powered by mains or 4 x AAA alkaline batteries (not included).
- Comes with a remote control for easy adjustments.
- Includes an AC adaptor and one-step assembly instruction sheet.
- Has assembled dimensions of 65L x 65W x 72H cm and folded dimensions of 65L x 16.5W x 63.5H cm.
- Features Bluetooth connectivity for playing your child's favorite music from your own device.
- Equipped with remote control.
- Boasts an innovative ergonomic lightweight design.
- Provides a thick padded cushion with plush fabric for comfort.
- Easy one-step assembly process.
- Suitable for use from birth to 9kg.

Safety Information

EN

**PLEASE READ THE INSTRUCTIONS BEFORE ASSEMBLY
AND KEEP THEM FOR FUTURE REFERENCE**

WARNING!

- **NEVER** leave the child unattended.
- **DO NOT** use this product once your child can sit unaided.
- This product is not intended for prolonged periods of sleeping.
- It is dangerous to use this product on an elevated surface, e.g. a table.
- Always use the restraint system.
- Never use the toy bar to carry this product.
- The maximum weight of the child for whom the product is intended is 9 kg.
- This product does not replace a crib or bed. If your baby needs to sleep, they should be placed in a suitable crib or bed.
- Before each use or assembly, check this product for damage, loose connetions, missing parts or sharp edges. **DO NOT** use the product if any part is damaged or missing. In this case, contact the manufacturer's service department.
- **DO NOT** use accessories or replacement parts other than those approved by the manufacturer.
- This product cradle can be used by babies from the first davs of their lives (Ot).
- Never use the product on a soft surface (e.g. bed, sofa, cushion) because the product may collapse and suffocate the child. Use the product on a flat and stable surface.
- The product can be assembled only by adults.
- **NEVER** lift or move this product when the child is inside. Do not adjust or modify the product when the child is inside.

Safety Information

EN

WARNING! CONTINUED

- **DO NOT** let other children play with this product.
- **DO NOT** use the product as a car seat.
- **DO NOT** use the product near stairs.
- **DO NOT** repair the product on your own and do not modify it. These operations can be performed only by an authorized service technician.
- **DO NOT** put items into this product that may pose a threat to your child.
- **DO NOT** cover this product with items that may prevent airflow or pose a threat to the child.
- If you are not using the product, keep it away from children.
- **DO NOT** suspend any items on the toy bar that could affect the stability of the reclined cradle.
- **DO NOT** place the reclined cradle with the child near e.g. curtains or electric wires as they may lead to suffocation hazard or electric shock.
- **DO NOT** use the product for purposes other than those for which it has been designed.
- Use and store the product away from fire, heat sources, moisture and liquids.

Cleaning and maintenance:

- Small stains on the covering should be cleaned with a wet cloth and a mild detergent.
- Covering can be removed and handwashed at temperature up to 30°C and with a mild laundry detergent.
- Do not use bleach or other strong cleaning agents.
- Do not machine wash and tumble dry.
- Wet covering should be laid out and left to dry fully.
- Frame and plastic elements should be cleaned with a wet cloth and a mild detergent. Before each use, frame and plastic elements should be wiped dry.
- Store the product in a dry place and keep it away from high temperatures and moisture.

Safety Information

EN

SAFETY INSTRUCTIONS

- **DO NOT** use the product if any components are broken or missing.
- Powerful sway: Make sure that older child are not allowed to rock the baby too forcefully.
- **NEVER** leave baby unattended.

WARNING! Bouncer (max 20 lbs/9 kg):

- **DO NOT** use the bouncer once your child can sit unaided.
- Keep the toy out of the reach of children when it is not firmly attached to the product.
- Child's activity may move the bouncer.
- Dangerous to use on an elevated surface e.g. table.
- Never use the toy bar to carry the reclined cradle.
- This reclined cradle is not intended for prolonged periods of sleeping.

WARNING!

FALL HAZARD: Babies have suffered skull fractures falling while in and from bouncer.

- Use bouncer **ONLY** on floor.
- **NEVER** lift or carry baby in bouncer.

SUFFOCATION HAZARD: Babies have suffocated when bouncers tipped over on soft surfaces.

- **NEVER** use on a bed, sofa, cushion or other soft surface.
- **NEVER** leave baby unattended.

To prevent falls and suffocation:

- **ALWAYS** use restraints and adjust to fit snugly, even if baby falls asleep
- **STOP** using bouncer when baby starts trying to sit up or has reached 9kg/20lbs, whichever comes first.

WARNING!

AMPUTATION HAZARD: Chair can fold or collapse if lock is not fully engaged.

- Moving Parts can amputate child's fingers
- Keep fingers away from moving parts.
- Completely unfold chair and fully engage locks before allowing child to sit in chair.
- Never allow child to fold or unfold chair

Safety Information

EN


Name	Electric baby bouncer chair
Model No.	CR010
Input voltage	100-240V~50/60Hz 0.3A
Out voltage	DC5.8V/1A
Max. load capacity	9Kg
Standard	EN12790:2009/EN16232:2013+A1:2018 EN71-1/EN71-2/EN71-3
Production date	See the package or product label

WARNING!

- 1) Power supply terminal must not short-circuit.
- 2) Never use the adapter provided not by the manufacturer ,
input voltage of adapter:100-240V~50/60Hz/0.3A MAX,Output
voltage: DC5.8V/1A.
- 3) When using the adapter, the adapter should be kept away
from children.
- 4) Transformers used with the infant swing are to be regularly
examined for damage to the cord, plug, enclosure and other parts,
and in the event of such damage, they shall not be used.
- 5)The infant swing shall only be used with the recommended
transformer.

Baby Elegance®

 PLEASE CHECK THAT YOU HAVE ALL THE COMPONENTS LISTED
BELOW BEFORE STARTING ASSEMBLY

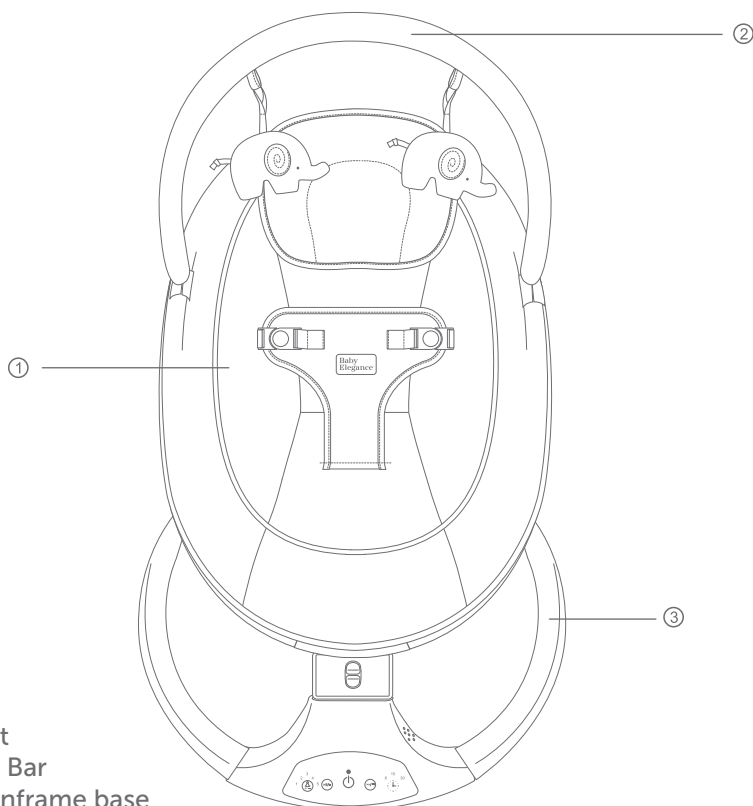

1. Seat
2. Toy Bar
3. Mainframe base

 
Also included:
Manual
1 x Adapter
1 x Remote control




Seat installation:

1


1a) Insert the seat into the mainframe base.

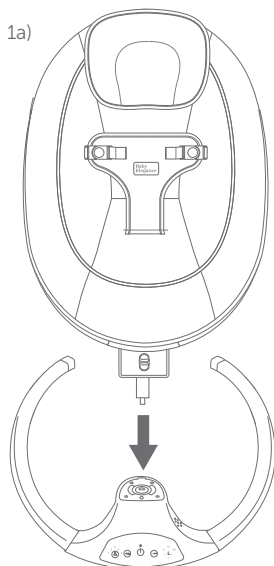

 1b) Keep the seat D hole and mainframe base D iron shaft in the same direction. Insert the seat into mainframe base, then rotate the seat left and right slightly, then press down the seat after alignment.

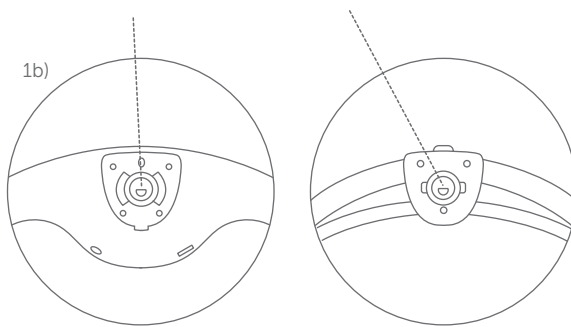


2a)

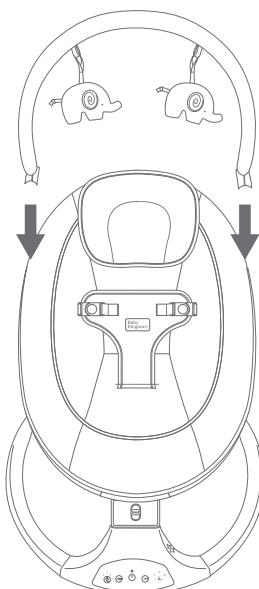 


2a) Clip toy bar onto the outer edge of the chair.

 2b)

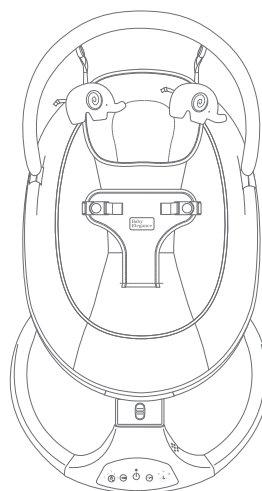

2b) The completed installation will look like this.

 IMPORTANT Safety information when using the seat:

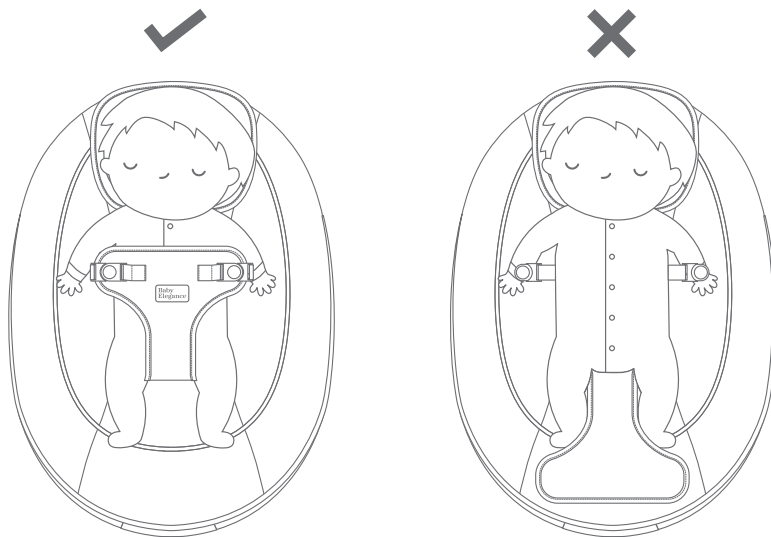


Make sure that the straps are properly adjusted to snugly fit your baby, providing optimal comfort and safety.

Always ensure your baby is securely fastened in their chair and never leave them unattended, as it can pose risks of harm.




 Seat disassembly:

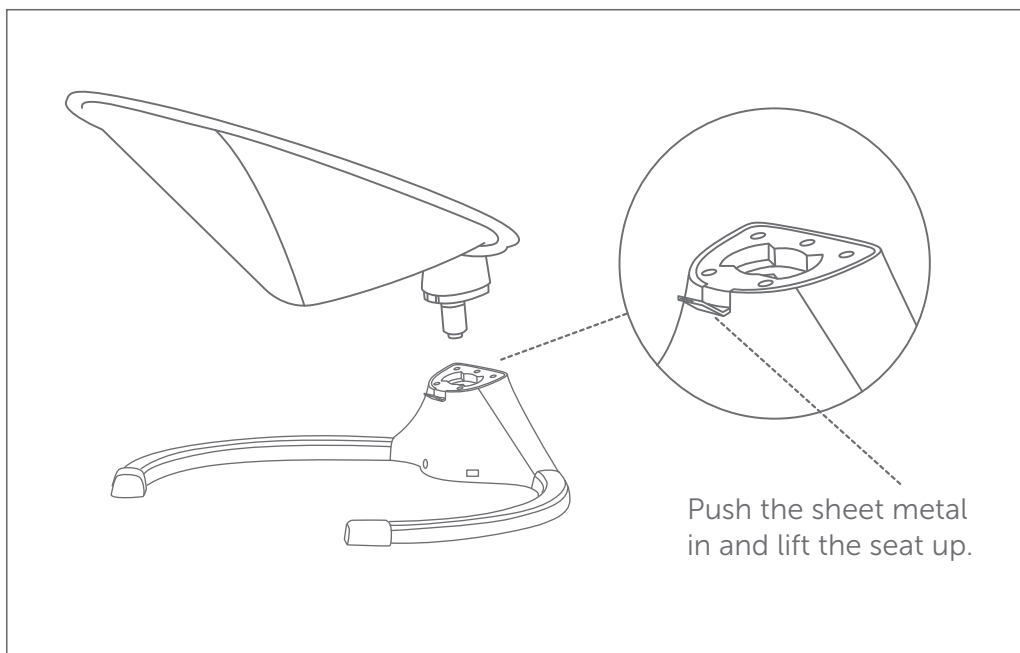


Power supply:

 1. DC plug can insert into the DC power of 100~240V,50/60Hz, 0.3A.
2. DC interface can be connected by power bank.
3. Output voltage:5.8V,electric current:1A. Never use the adapter of other specifications.
4. Never use the adapter provided not by the manufacturer.
5. Transformers used with the infant swing are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.

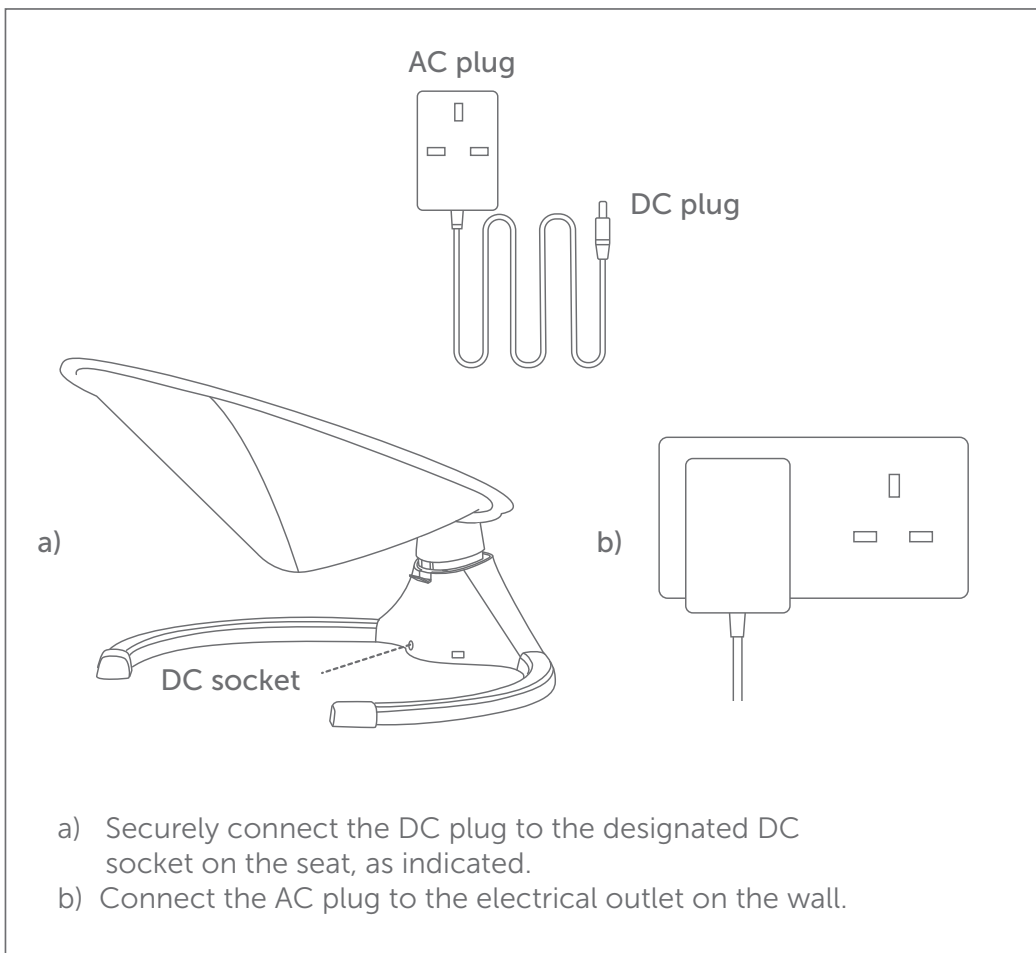

Battery assembly and disassembly:

 
1. Locate the battery compartment on the underside of the seat
2. Use a Phillips screwdriver to open the battery cover.
3. Load 4 x AAA alkaline dry batteries in the correct polarity.
4. Fasten the battery cover with screws.
5. Non-rechargeable batteries are not to be recharged.
6. Different types of batteries or new and used batteries are not to be mixed.
7. Exhausted batteries are to be removed from the infant swing.

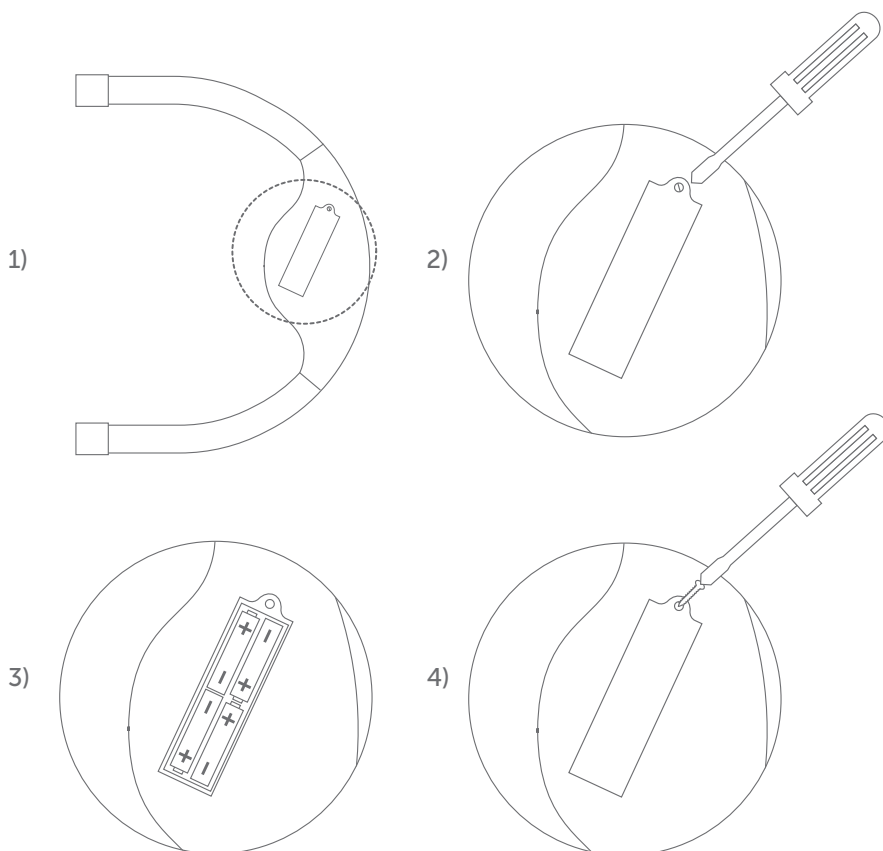

Guidelines for operation

EN

 Panel function:

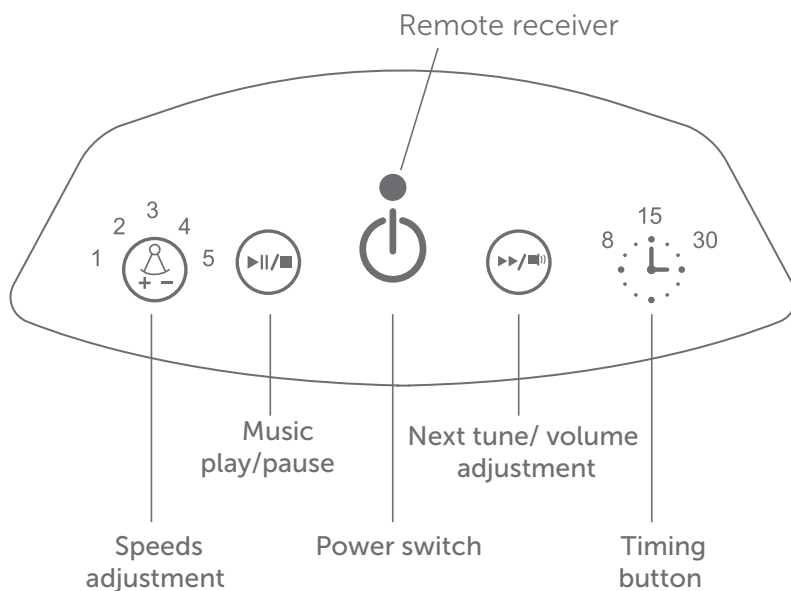


Remote function:

- | | |
|-------------------------|------------------|
| Power switch | Music play/pause |
| Timing | Last music |
| Switch inside music/Mp3 | Next music |
| Volume up | Sleep mode |
| Volum down | Stop |
| 5 speeds option | |



Bluetooth function:

 1. Turn on bluetooth on your mobile phone.
2. Scan for available devices to connect with the swing chair.
3. Connect via bluetooth to wirelessly stream music from your phone to the chair.

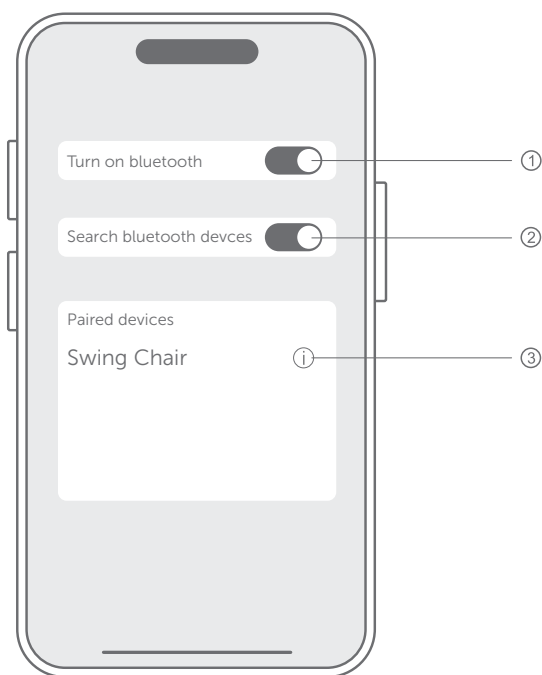

Baby Elegance®




Please don't hesitate to contact us for any more information on this product
hello@babyelegance.com

This product is manufactured in China
Made in China imported by Baby Elegance

**UK
CA**

Baby Elegance
International House
142 Cromwell Road
London
SW7 4EF

Baby Elegance
205 Northwest Business Park
Ballycoolin
Dublin 15
Ireland

   @babyeleganceire