


osmo


SOUNDBAR USER MANUAL

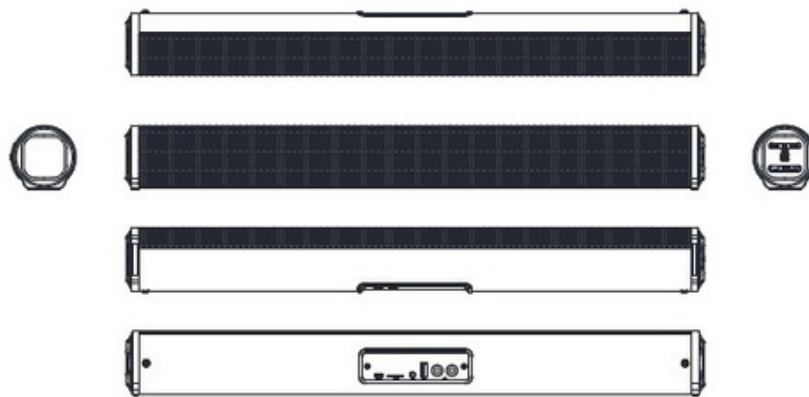

Graphic illustration



Function Indicator

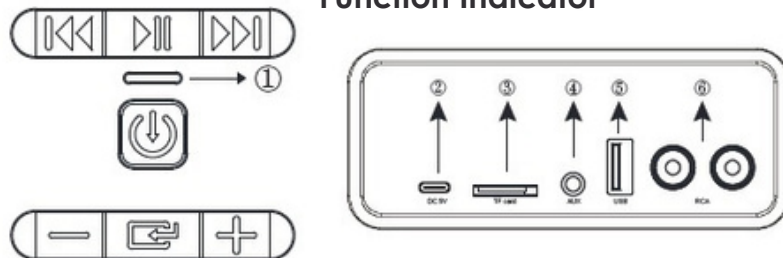

	Power on/off
	Mode switch
	Music play/pause
	Volume down
	Volume up
	Previous song
	Next song
1 Indicator light	Power and charging indicator light

Power socket	DC 5V input charging socket
TF card slot	TF card audio input, maximum support 32G
AUX socket	3.5mm AUX audio input
USB socket	USB audio input, maximum support 32G
RCA socket	RCA audio input

Operation Instruction

• Bluetooth Mode

1. Long press or 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Bluetooth searching mode starts automatically after power on.
2. Switch on Bluetooth searching mode on the cell phone. After pairing successfully, the device name (BS-10) will be shown connected on the cell phone, then you can open phone player and play songs. Due to different brands of mobile phone and Bluetooth versions, the searching and pairing time will be various. Under normal circumstances, it only takes 30 seconds. If the pairing password is needed, please type "0000" on the cell phone.
3. Press "+" "-" button to volume up/down.
4. Press "|||||" button to switch songs.
5. Press "▶ ||" button to play or pause music.

• AUX Mode

1. Using 3.5mm AUX cable to connect to the cell phone / MP3 / PC, then connect the cable to AUX socket on the soundbar.
2. Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Soundbar will automatically switch to AUX Mode. If the soundbar is in other mode, please press to AUX mode.
3. Press "+" "-" button to volume up/down.
4. Press "▶ ||" button to play or mute the music.

NOTE: The soundbar can not switch songs in AUX Mode.

• TF Card Mode

1. Insert the TF card with audio source into TF card slot.
2. Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Soundbar will automatically switch to TF Card Mode. If the soundbar is in other mode, please press to TF Card Mode.
3. Press "+" "-" button to volume up / down.
4. Press "|||||" button to switch songs.
5. Press "▶ ||" button to play or pause music.
6. TF card insert direction: please refer to the picture.

- **TV Mode**

1. Using RCA cable to connect to the RCA audio output socket on the TV, then connect the cable to RCA socket on the soundbar.
2. Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Then press to RCA Mode.
3. Press "+" "-" button to volume up/ down.
4. Press "▶ | |" button to play or mute the music.

NOTE:

1. Make sure the TV has RCA audio output socket.
2. Make sure the RCA plug connect correctly to the TV RCA audio output socket.
3. If the TV has 3.5mm audio output socket, please refers to AUX Mode connect method.
4. The soundbar can not switch the TV channels and songs in AUX Mode or RCA Mode.

- **FM Mode**

1. Insert the charging cable into the charging port of the speaker as a radio antenna, and then press the mode switch button to switch to FM mode.
2. Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Then press to FM Radio Mode.
3. FM auto searching mode: long press "▶ | |" button to start searching. When the soundbar finished searching, it will automatically stop searching. Or you can short press "▶ | |" button to stop searching.
4. Press "+" "-" to volume up/down.
5. Press "" button to switch radios.
6. Press "▶ | |" button to mute or play the radios.

- **USB Mode**

1. Insert the USB drive with audio source into USB socket.
2. Long press for 3-5 seconds, then you will hear the voice prompt with the indicator
3. light flashing. Soundbar will automatically switch to USB Mode. If the soundbar is in other mode, please press to USB Mode.
4. Press "+" "-" button to volume up / down.
5. Press "" button to switch songs.
6. Press "▶ | |" button to play or pause music.

- **TWS Mode**

1. Turn on soundbar 1&2, enter Bluetooth Mode. Long press for 3 seconds,
2. then you will hear a prompt tone with indicator light flashing.
3. Two soundbars will start to connect to each other. After pairing successfully, Both indicator light will stay on.
4. Open the Bluetooth settings on your phone to connect the soundbar.
5. Two soundbars can be controlled simultaneously by remote control or buttons on soundbar.

NOTE:

(1) TWS function can be only used on Bluetooth Mode and supports (2) devices connection. If two soundbars cannot connect to each other for long time, please turn off two soundbars and repeat the instructions again.

• Remote Control

NOTE:

- 1) next/previous song button will not function in AUX input mode or RCA mode.
- 2) Power on/off button on remote control only perform soft-on function. Press once the speaker enter soft-off. Press again enter soft-start. Buttons on speaker have no function in soft-off mode, except long press Volume down the power on/off button.
- 3) Switch the EQ sound effects by pressing the EQ button:


- ordinary music
- pop music
- jazz music
- rock music
- classical music
- country music

- 4) Only using the remote when the speaker is turned on.
- 5) The remote controls only match our corresponding speaker products.
- 6) Please take out the insulation sheet on the back of the remote control for the first time.

• Battery Charge


Use the offered USB charging cable to charge the soundbar by connecting to the 5V/1A-2A adapter or 5V USB power source socket. The indicator light will turn red while charging. When the battery is full charged, the red indicator light will turn off. Soundbar charging input voltage is 4.5V-5.5V, please do not exceed the safe voltage range, otherwise it will damage the soundbar.

• Soundbar Connection Instruction

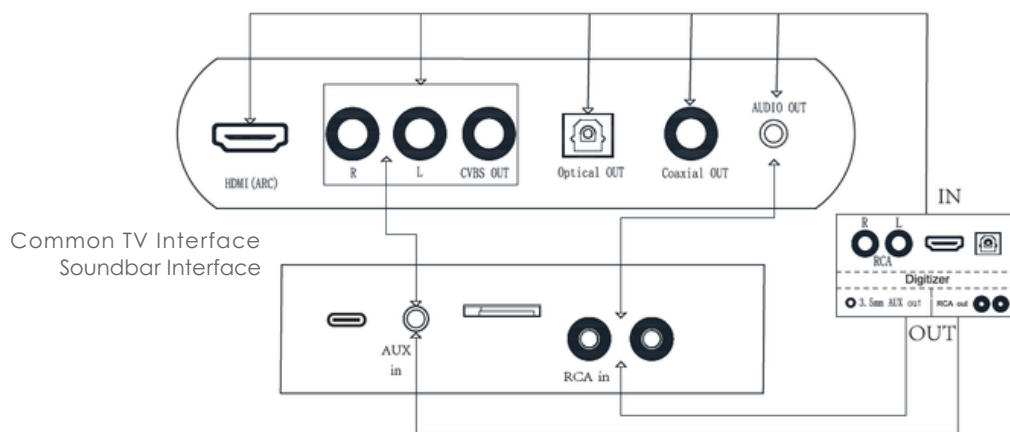

Soundbar can be connected to TV/PC/Cell Phone/Game machine/ Projector/Set-top box

NOTE: The mode of TV and soundbar should be consistent, please find the corresponding output mode to connect;

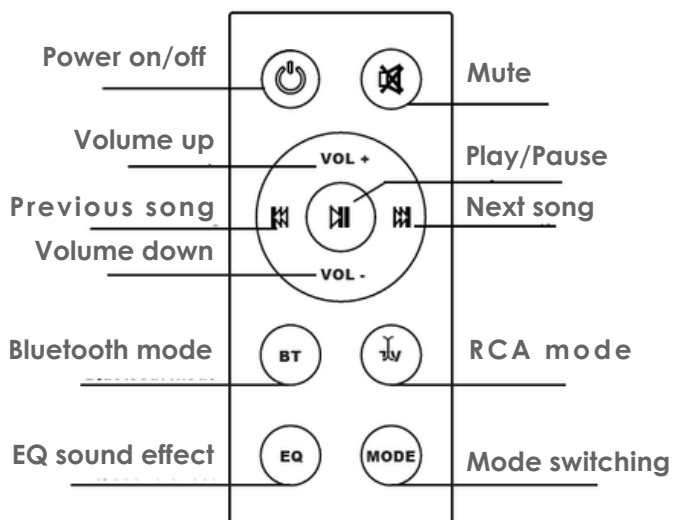

Common problems and solving method

1. If the soundbar does not turn on, please charge the soundbar first.
2. Connecting for many times still unsuccessful?
 1. Check the soundbar whether is on Bluetooth searching mode.
 2. If there are too many Bluetooth receivers around, it may cause the difficulty on searching. Please turn off other Bluetooth receivers.
 3. Open the Bluetooth settings on your phone, cancel pairing and reconnect.
3. The volume of soundbar is too low or appear distortion? Please check the volume settings of your phone and adjust the volume.
4. Discontinuities appear when playing music? Please check the distance whether is out of effective range or there are barriers between your phone and the soundbar.
5. The buttons have no effect to the soundbar? Please try to use the player on phone or other players.
6. If the soundbar cannot be controlled during using, please reset the soundbar by appropriate tools. Hardware reset is hidden inside the AUX socket.
7. When a low battery reminder appears, please connect the charger immediately to charge, and reduce the playback volume to 50%. It can be used while charging.

NOTE:

1. If connected to tablet, please refer to the phone connection method.
2. Laptop connection: Due to having many laptop's Bluetooth versions, the connecting method would be various. If fail to connect or play at the first time, please download the latest Bluetooth driver.
3. When the soundbar is on and without operation in 5 minutes, it will automatically turn off to save the power.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.