 
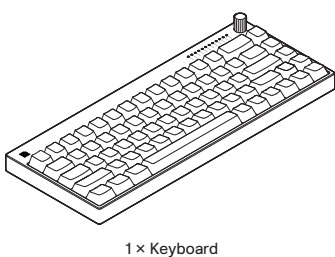 


K-001

INSTRUCTION MANUAL


WALLHACK

Contents

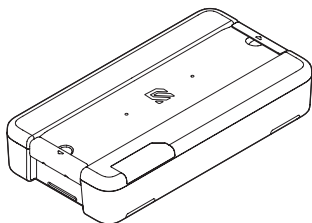



1

Accessories

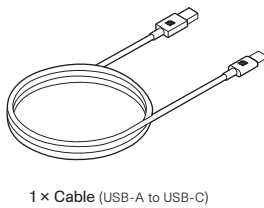

2


Riser Pack

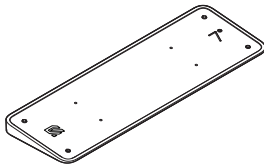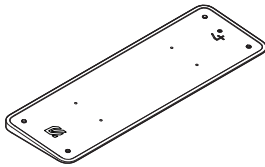

3

Connect to PC



Connect the keyboard to your PC using the included USB-A to USB-C cable.

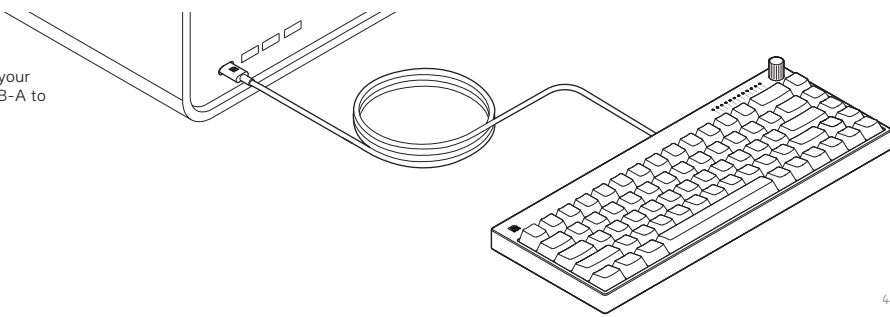

4

Adjusting the Typing Angle

Use the included risers to adjust the typing angle.



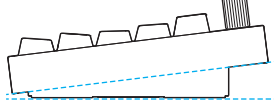
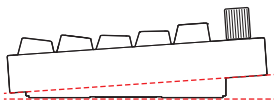


5

Riser Screws

Two sets of screws are included, one for each riser option. Ensure the correct screws are used with each riser.

  

Scale 1:1

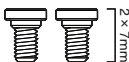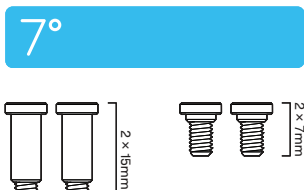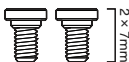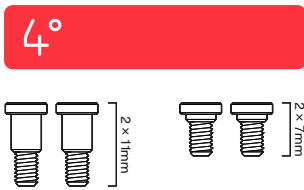

6

4° Riser



Use the 4° riser screws with the 4° riser.

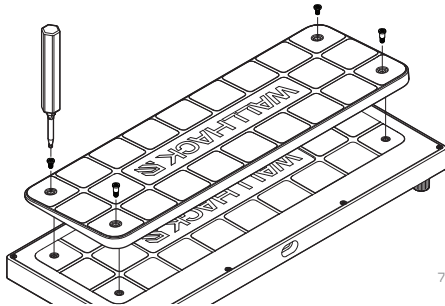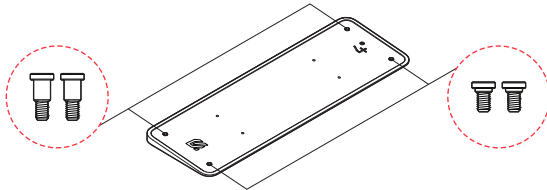

7

7° Riser



Use the 7° riser screws with the 7° riser.

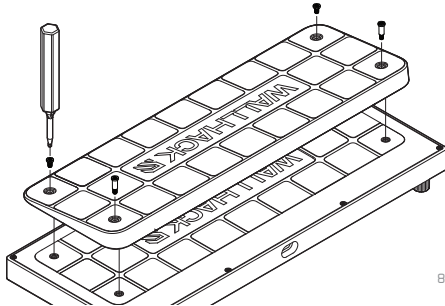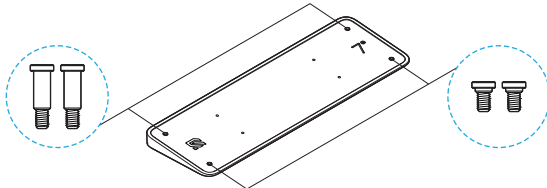

8

Keycap Puller



Use the included keycap puller to remove keycaps from the keyboard.

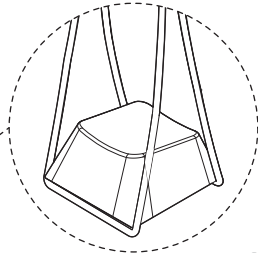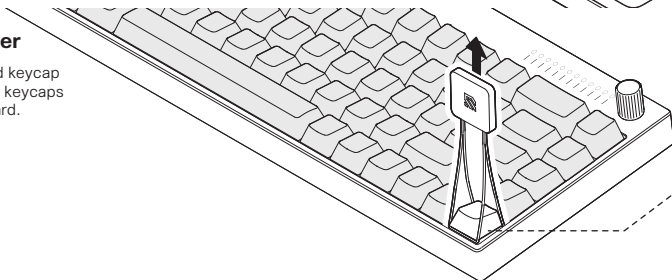

9

Switch Puller

Use the included switch puller to remove switches from the keyboard.

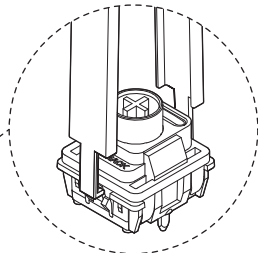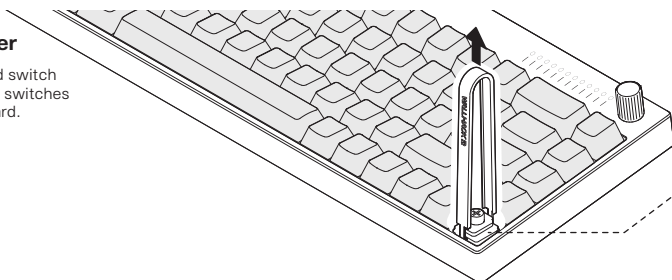


10

Adjust Actuation Point and Rapid Trigger

You can adjust performance settings directly on the keyboard, without opening the WALLHACK Terminal.



Actuation Point

To change the Actuation Point for all keys or specific keysets, use Actuation Point Mode.

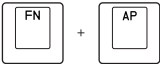


Rapid Trigger

To change Rapid Trigger settings for all keys, use Rapid Trigger Mode.

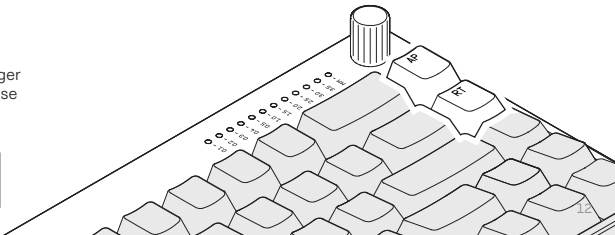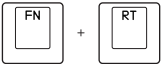

Set a Custom Actuation Point Value

To set a custom Actuation Point value, select **MM**, which represents the custom value configured in the WALLHACK Terminal.

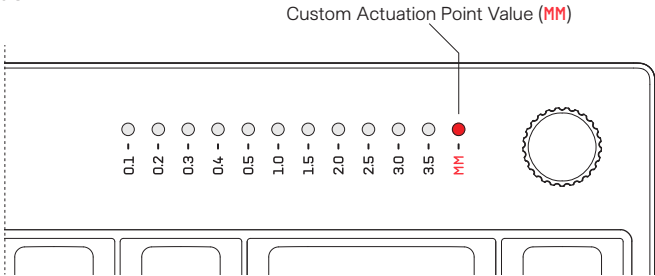


13

Adjust Actuation Point for All Keys

1. Enter AP Mode

Press the FN key and AP key together to enter Actuation Point Mode.

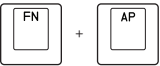

2. Adjust Actuation Point

Rotate the dial to adjust the Actuation Point for all keys except those assigned to existing keysets.



3. Save & Exit

Press the AP key to save and exit AP Mode.

 


14

Adjust Actuation Point for Specific Keys


1. Enter AP Mode

Press the FN key and AP key together to enter Actuation Point Mode.

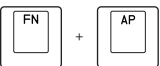

2. Select keys

Press individual keys to add or remove them from a keyset. Press any key in an existing keyset to select that keyset.

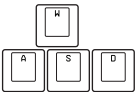

3. Adjust Actuation Point

When satisfied with your selection, rotate the dial to adjust the Actuation Point for the newly created or existing keyset.



4. Save & Exit

Press the AP key to save and exit AP Mode.




15

Delete an Actuation Point Keyset


1. Enter AP Mode

Press the FN key and AP key together to enter Actuation Point Mode.

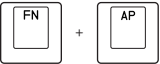


2. Select Keyset

Select an existing keyset by pressing any key included in that keyset.

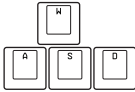

3. Delete Keyset

Press the Backspace key to delete the keyset.

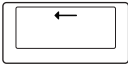

4. Save & Exit

Press the AP key to save and exit AP Mode.




16

Adjust Rapid Trigger for All Keys

1. Enter RT Mode

Press the FN key and RT key together to enter Rapid Trigger Mode.

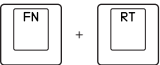

2. Adjust Rapid Trigger

Rotate the dial to adjust Rapid Trigger for all keys.



3. Save & Exit

Press the RT key to save and exit RT Mode.




17

Profile Selection

Different profiles can store individual settings, such as AP and RT values, key mappings, and performance preferences, allowing for a customized experience.

Change Profile

Hold the FN key and rotate the dial to switch between profiles.

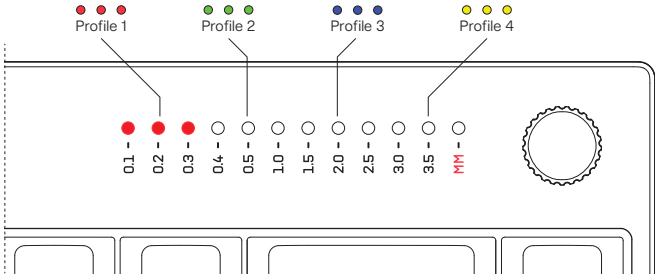

18

Media Controls


Play/Pause

Press the Play/Pause key to play and pause music or media.



Next Track

Press the FN key and Play/Pause key together to skip to the next track.

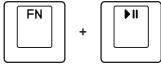

Volume

Rotate the dial clockwise to increase volume and counter-clockwise to decrease volume.




19

Key Functions (1/3)


LED Brightness

Press and hold the Brightness key and rotate the dial to change the LED backlight brightness.

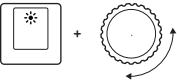

Toggle Windows Key Lock

Press the FN key and Windows key together to toggle the Windows key lock on or off.

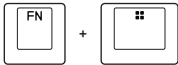

Toggle Actuation Readout Mode

Press the FN and Caps Lock keys together to toggle the Live Actuation Readout on or off for the key pressed down the farthest.



20

Key Functions (2/3)

 
Delete

Press the FN key and Backspace key together to perform the Delete function.




English/Japanese Switching

Press FN + Escape together to switch between English and Japanese input modes. Available only on some keyboard layouts.

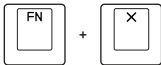

Print Screen

Press the FN key and P key together to perform the Print Screen function.

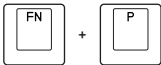


21

Key Functions (3/3)


Home / End / PgUp / PgDn

 Press the FN key and Left Arrow key for Home. Press the FN key and Right Arrow key for End. Press the FN key and Up Arrow key for Page Up. Press the FN key and Down Arrow key for Page Down.

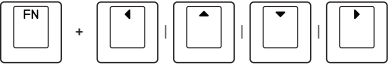

Function Keys

 Press the FN key and a top-row number key together to access the corresponding F1-F12 key.

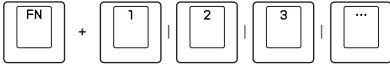

22

Wallhack Terminal

Use the WALLHACK Terminal Software to access gamepad emulation, custom mappings, SOCD, custom Rapid Trigger and Actuation Point settings, plus much more.

