User Manual for

Nipper Trek



SAFETY NOTES:

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLING AND USING THE NIPPER TREK, AND KEEP INSTRUCTIONS FOR FUTUREREFERENCE.



- Read all instructions before assembling and using the Nipper Trek.
- Keep instructions for future use.
- This framed back carrier is intended for children aged over 6 months.
- Do not load more than the overall maximum weight: 18 kgs.
- The maximum weight load recommended for the front panel pocket is 3 kgs.
- The maximum weight load recommended for the lower compartment is 3kgs.
- The maximum weight load recommended for the snack pouch & bottle holder pouch is 1 kg.
- The child's restraint system in the framed back carrier should be securely fastened and adjusted in accordance with the manufacturer's instructions.
- When the child is in the framed back carrier, the child could be in a position higher than the carer who should therefore be aware of potential hazards.
- · Never leave the child unattended.
- Take care when bending or leaning forward or sideways. Never bend at waist; bend at knees.
- Your balance may be adversely affected by your movement and that of the child.
- This carrier is designed only for use while walking. This carrier is not suitable for use during sporting activities and cycling.
- Be aware that the child in the child carrier may suffer from the effects of weather and temperature before you do. Dress the child appropriately and occasionally check the temperature of their ears and face.
- Care should be taken when putting on or removing the child carrier.
- · Additional or replacement parts should only be obtained from Out'n'About ATP Limited.
- Always use child retention system and adjust to fit snugly.

Tested in accordance with EN13209-1:2022

Getting Started





We hope these instructions help you to enjoy your Nipper Trek.

If at any time you are unsure about the safe use of this product please call our helpline before using it on 01234 344 230

Distributed in the U.K. by:



Out'n'About ATP Limited Unit 2D Kinsbourne Farm Stagsden, Bedfordshire MK43 8TS

Tel: 01234344230

Email: info@outnabout.com

Useful Information

Like us on Facebook to keep up to date with all the latest news and offers.



facebook.com/outnaboutuk




twitter.com/outnaboutuk




instagram.com/outnabout_official

Inside the box

out nabout

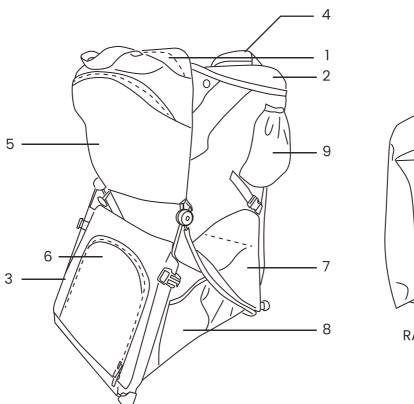

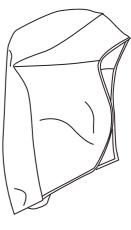

RAIN COVER

1. SUNSHADE

The built-in sunshade is stored in the dedicated pocket for convenient UV protection.

2. COMFY RIDE

The framed and padded seat and harness are designed for child comfort and safety.

3. LIGHTWEIGHT FOLDING FRAME

Lightweight stainless steel frame fully supports loads and provides a stable platform to set the Nipper Trek down.

The frame folds down for travel and storage.

4. TOP GRAB HANDLES

Safely pick up or set down the Nipper Trek with reinforced grab handles.

5. FRONT PANEL POCKET

The front panel pocket is designed for storage of small items.

6. LOWER COMPARTMENT

The lower compartment offers 14L of storage for nappies and other items.

7. REMOVABLE EASY-CLEAN SEAT COVER

8. SNACK POUCH

9. BOTTLE HOLDER POUCHES



10. HIPBELT POCKETS

Quick and easy access to trail snacks or small items.

11. EXTERNAL HYDRATION SLEEVE

An opening at the top of the backpanel allows for convenient hydration storage.

12. BREATHABLE BACKREST

13. ADJUSTABLE FIT

With 4"/10cm of torso length adjustment, it is quickly and easily fitted to a variety of adult users even while on the trail.

14. STOWAWAY HARNESS AND HIPBELT

The hipbelt and harness stow away for safe keeping and protection while traveling.

15. COMPANION ROPE


For walking wildlings to hold onto while adventuring alongside you. Easily clip on and off when needed.

16. CHECK-IN MIRROR

Take a look to see if little one is taking a nap or taking in the views.

17. MOBILE PHONE HOLDER


Store your phone here for easy access and navigation.

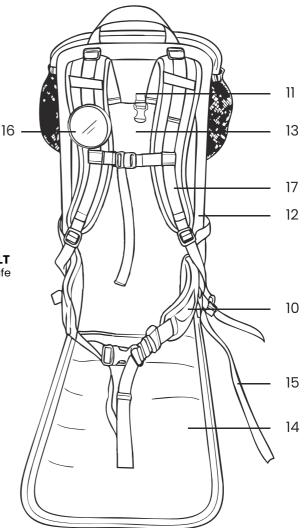


Instructions

out nabout


1. SET-UP

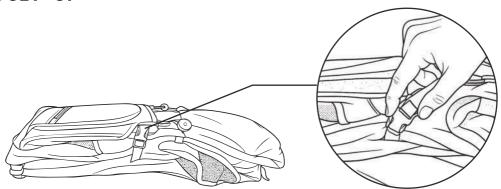


1-1. If your Nipper Trek arrived in the stored, flat position, disconnect the two half-black buckles at the top of the lower pocket hidden behind the frame.

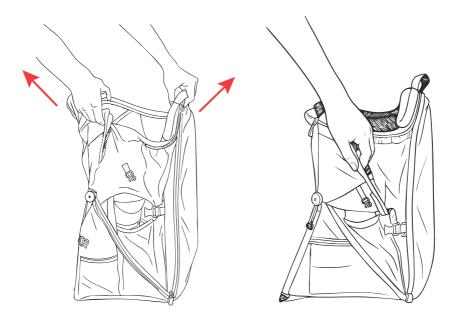

1-2. Grab the two handles at the top of the carrier and pull apart. Then hold the folding joints on both sides of the pack and press down until the folding joints are fully extended.

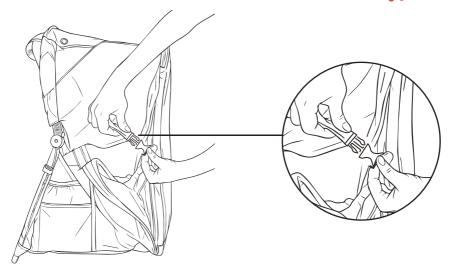

1-3. Connect the two black male buckles at the top of the lower pocket with the two black female buckles on each lower side of the child seat. Your Nipper Trek is now locked into child carrying position.

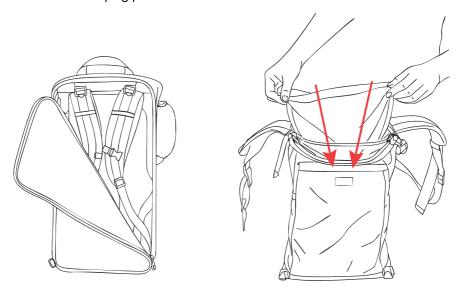

1-4. If your Nipper Trek arrived with the harness and hipbelt stored, fully unzip the backpanel cover and store the cover in the open compartment at the bottom of the backpanel.

To store and travel with your Nipper Trek, reverse Steps 1-4.

2. FIT THE ADULT



WARNING:


Child must not be in the carrier during the adult fit process.

HIPBELT SIZING 69cm-130cm TORSO SIZING 38cm-53cm

FIT THE HIPBELT



2–1. Loosen the harness, hipbelt and load lifter straps.

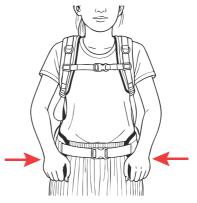

2-2. Put the pack on and place the hipbelt centered over the hipbones. Buckle and tighten the hipbelt.

FIT THE BACKPANEL AND HARNESS




2-3. After fitting the hipbelt, tighten the shoulder harness by pulling the straps down and back.
Lastly, tighten the load lifter straps.




2-4. When properly fitted, the shoulder harness yoke should rest 1-2 inches/2.5-5cm below your C7 vertebra (the bump at the base of your neck).


TO ADJUST THE TORSO LENGTH, FOLLOW THESE STEPS:

2-5. Take the pack off and completely loosen the pack's load lifters and harness straps.

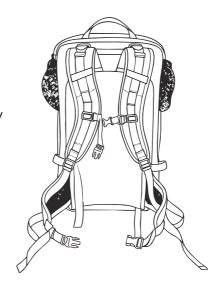

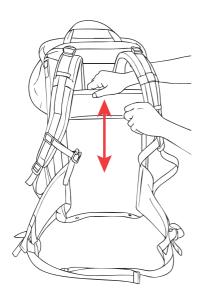

2–6. Slide hand between back and harness and up or down to the correct torso length.

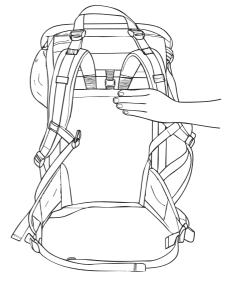


2–7. Make sure the Velcro on the back and harness are secured, your child carrier is now fitted to the adult.

3. FIT AND SECURE THE CHILD

PREPARE THE CHILD SEAT

3-1. Open the child harness by releasing both black harness buckles located below the child's center back pad.

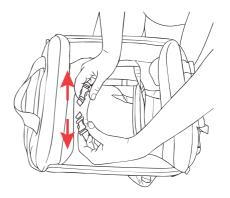


ADJUST CHILD SEAT HEIGHT



WARNING:

Child must not be in the carrier while adjusting seat height.


To adjust the seat, follow these steps:

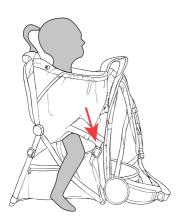

3-2. For proper fit, the child's chin should be level to the top of the padding at the front of the seat. Place the child in the carrier to check if adjustment is needed.



3-3. To adjust the seat, locate the velcro that secures the child's seat height. This is found below the child seat back pad.

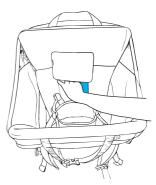


3–4. Slide your hand underneath the velcro to seperate the back pad from the carrier fabric.

3-5. Leave your hand behind the velcro to keep it disconnecting while adjusting the seat up or down to fit the child's size.


SECURE THE CHILD




3-6. Place child into carrier guiding each leg through the corresponding left and right leg loops. Ensure proper fit by checking the child's chin is level with padding at the top of the seat.

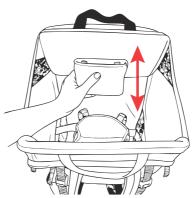

3-7. Guide the child's arms through the harness arm loops.

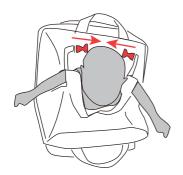

3-8. Buckle the right and left red harness male buckles into the black female buckles located behind the center back pad.

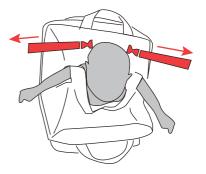


3-9. Tighten to tension both right and left straps so that the harness is snug around the child's upper torso. The child is now secure.

4. SAFELY PUT ON THE NIPPER TREK

- 4-1. Before putting on the pack with child:
- Ensure the adult torso and hipbelt are properly fitted on the adult. (Refer to Step 2)
- Ensure the child is properly fitted and secure within the child carrier. (Refer to step 3)
- Loosen one side of the harness: keeping the side you intend to put on your shoulder first tight and fitted.
- Unbuckle and loosen the adult hipbelt and adult sternum strap.


4–2. While standing, face the adult backpanel and use both handles at the front and rear of the child cockpit to lift the child carrier and place the frame onto your slightly bent knee.

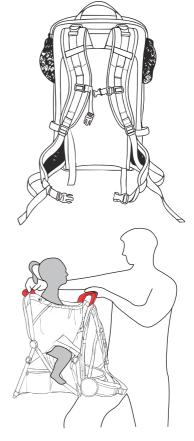


Additional Recommendation

If a second adult is available to help, the dual horizontal side panel handles are available to lift the child carrier onto the adult's back.

4-3. Slip your free arm through the tightened and fitted harness strap, grab the handle in front of the seat with your other hand and lift the carrier up onto your shoulder.

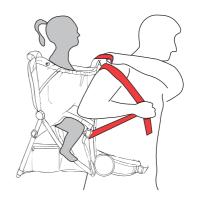


4-4. While still holding the shoulder strap, lean forward to stabilize the child and child carrier on your back. Let go of the handle in front of the seat, slip your free arm through the shoulder harness and slide the child carrier on to both shoulders.

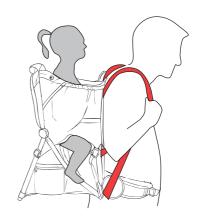


4-5. Buckle and tighten the hip belt.




4-6. Tighten the shoulder harness straps.

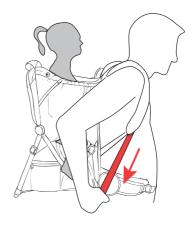

4-7. Tighten the load lifter straps.

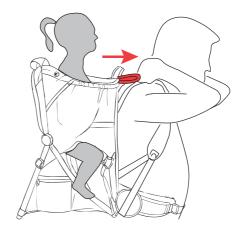

4-8. Buckle and tighten the sternum strap. You are now ready to use your Nipper Trek Child Carrier.

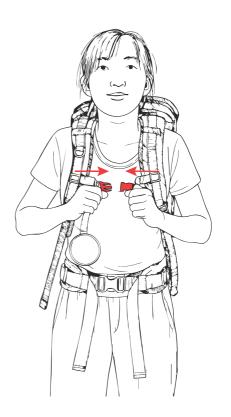

SUNSHADE

outnabout

The built-in sunshade, is easy to deploy from its dedicated pocket and offers convenient UV protection for the child.



1. Unzip the sunshade pocket (marked with the sunshade label), pull the sunshade out of the pocket.



3. Unzip the front panel pocket, take the canopy out.




5. Find the two buttons on the top two corners of the backpanel and webbing. Attach the webbing to the top of the button. Repeat this step for the webbing on the other side to secure the canopy.



2. Locate the hook-and-loop closure panel affixed to the sunshade, align it with the hook-and-loop closure panel affixed to the inside of the pocket and apply pressure to the back and front of the sunshade to fasten.



 4. Attach the canopy and shushade with the zipper.

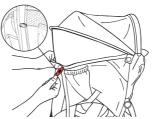

top of the canopy.

6. Find the rope loop next to the bottle holders, and the two toggles at the front of the canopy. Securely pull toggles through the loop. Repeat this step for the other side of the canopy. The mesh for the canopy can also be fixed on

STORING YOUR SUNSHADE:

To store your sunshade, reverse Steps 1–6, taking care to ensure the sunshade webbing does not spring back at the child.

Care & Maintenance



STANDARD MAINTENANCE

- After each trip, be sure to clean out your pack thoroughly.
- · Clean zippers often to prevent them from failing. Use mildsoap,warm water and a soft brush.
- · If your pack is wet, hang it to dry before storing.
- When your Nipper Trek is not in use, loosen all the straps.
- · Wash your pack if dirt, sweat, salt and stains have workedtheir wayinto fabrics, webbing or mesh.

WASHING YOUR NIPPER TREK

- Brush out and remove gear, food, dirt or spilled items.
- Do not wash in washing machine, Clean your Nipper Trek and components in a bathtub or large sink using a mild detergent and warm water.
- · Agitate gently and scrub all compartments and pockets inside and out with a soft brush.
- Brush clean all zippers and rinse the interior channels and the exterior of all buckles.
- Drain the soapy and dirty water from the bathtub or sinkand refill with cool clean water. Rinse thoroughly.
- · Hang to dry outdoors or in a well-ventilated area out of direct sunlight.

WARRANTY

- To register your Nipper Trek online please go to www.outnabout.com/warranty
- It's simple and will only take a minute.



Follow QR code to register your warranty

This child carrier complies with: EN 13209-1: 2022

Out'n'About ATP Limited Unit 2D, Kinsbourne Farm, MK43 8TS, Stagsden Tel: 01234 344230

Email: info@outnabout.com



facebook.com/outnaboutuk



twitter.com/outnaboutuk



instagram.com/outnabout_official



Out'n'About ATP Limited
Unit 2D, Kinsbourne Farm,
MK43 8TS, Stagsden
Tel: 01234 344230
Email: info@outnabout.com

Email: info@outnabout.com www.outnabout.com



facebook.com/outnaboutuk



twitter.com/outnaboutuk



instagram.com/outnabout_official