 


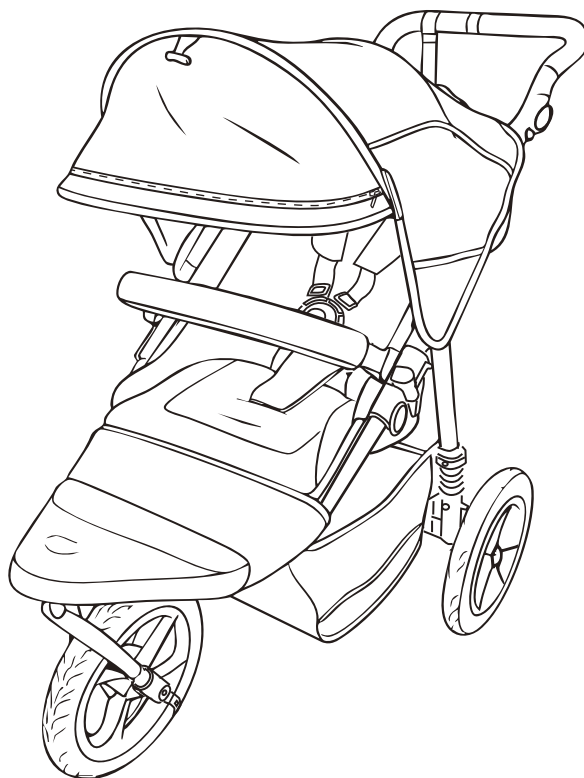

User Manual for
Nipper
and
**Nipper
double**



SAFETY NOTES:

IMPORTANT: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Your child's safety may be affected if you do not follow these instructions.

WARNING: A child's safety is your responsibility.

Follow the manufacturer's instructions. Failure to follow these warnings and assembly instructions could result in serious injury or death.

WARNING:

- To avoid injury or death, always apply the brakes whenever the pram/stroller is stationary/parked.
- Always engage brakes when you stop or when you let go of the handle.
- Never leave the child unattended.
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that the child is kept away when unfolding and folding this product.
- Always use the restraint system (Secure the child in the harness at all times).
- Check that the carry cot, seat unit or car seat attachment devices are correctly engaged before use.
- Please use the most reclined position for new born babies.
- The parking device shall be engaged when placing and removing the children.
- Children should be supervised at all times whilst using this stroller.
- Always check that the stroller is correctly assembled and that all locking devices are engaged before use.
- Do not carry extra children or bags on this stroller.
- Make sure children are clear of any moving parts if you adjust the pram/stroller, otherwise they may be injured.
- Immediately discard any plastic wrapping. Keep away from children to avoid suffocation.

- Never allow children to fold, assemble or disassemble the stroller.
- Never place child in stroller on their back with their head forward and feet rearward.
- Never use stroller if it becomes damaged.
- Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- This stroller must only be used for the number of children for which it has been designed. Single is for one child, double is for two children.
- Do not let the child play with this product.
- Each seat is suitable from newborn to approximately 4 years old, or weighing up to 22kg. (whichever comes first).
- Maximum weight for objects placed in the back pouch is 0.5 kg on the Nipper single or 0.5kg per pouch on the Nipper Double.
- Maximum weight for the storage basket for both models is 5kg.
- Maximum weight for the pouch on both sides of the canopy for Nipper single is 0.5kg.
- Maximum weight for the mesh pouch on both side of the seat for both models is 0.5kg.
- Excessive weight may cause a hazardous unstable condition.
- Overloading, incorrect folding and the use of non-approved accessories may damage or break this vehicle.
- Check that the seat unit attachment devices are correctly engaged before use.
- Accessories which are not approved by the manufacturer shall not be used.

Sport activities mode:



WARNING:

(For Nipper Plus and Nipper Double Plus models with 14" wheels)

- Do not use the stroller for running until the child is 9 months old.
- It is advisable to protect the child with appropriate protective equipment (e.g. a helmet).
- For running the seat unit shall always be adjusted in the most upright position, and the front fork in the fixed position.
- This product is not suitable for ice skating.
- Remember a child is with you: take extra care, particularly over kerbs, steps, rough ground and obstacles.

- Do not use the stroller for running when it is configured with a carseat or a carry cot.
- The child in the stroller needs to be more warmly clothed than the carer and be protected from rain or UV.
- It is advised for the adult to wear a reflective vest or clothing, when near traffic.
The jogging strap shall be used at all times during sports use.

Service:

WARNING:

- This vehicle requires regular maintenance by the user.
- Do not use replacement parts other than those supplied by the manufacturer or distributor.
- Regularly check that this stroller is in good operating condition and that all fasteners and nuts are secure.

WARNING:

Do not use the pram/stroller near an open fire or exposed flame.

Getting Started

outnabout

Helpline

We hope these instructions help you to enjoy your new buggy.

If at any time you are unsure about the safe use of this product please call our helpline before using it on 01234 344 230

Note for Nipper Double & Nipper Double Plus owners

Please be aware that many of the images in this manual show the Nipper Single & Nipper Single Plus, however the instructions are the same and apply to both models, unless otherwise specified.

Distributed in the U.K. by:

outnabout

Out'n>About ATP Limited
Unit 2D, Kinsbourne Farm,
MK43 8TS, Stagsden
Tel: 01234 344230
email: info@outnabout.com

Useful Information

Like us on Facebook to keep up to date with all the latest news and offers.



facebook.com/outnaboutuk



 
twitter.com/outnaboutuk




instagram.com/outnabout_official

Inside the box


outnabout

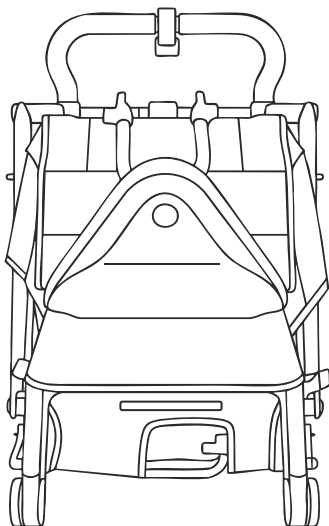


Frame and seat

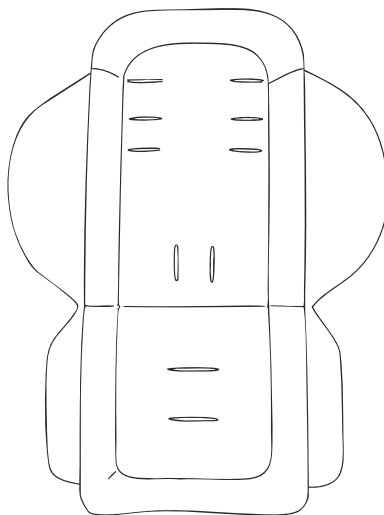 


Seat Liner
X2 for Nipper Double

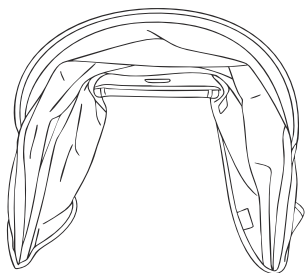 


Sun Canopy
X2 for Nipper Double

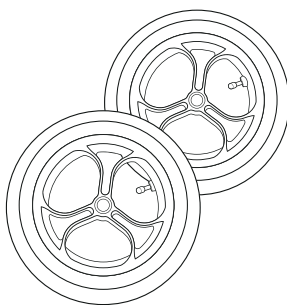 

Rear Wheels X2

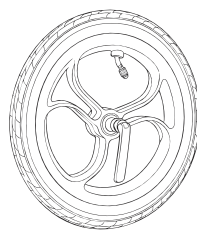 


Front wheel

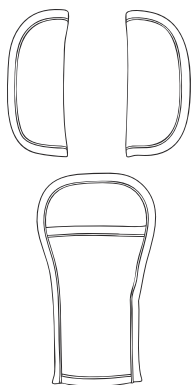 


Shoulder and Crotch Pad
X2 for Nipper Double



 Bumper Bar

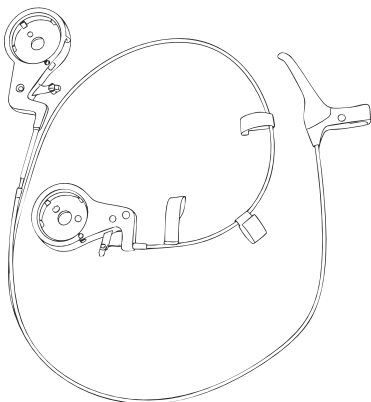

 Rear handbrake components
(for Plus models)

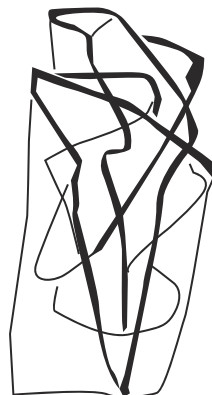


Rain Cover


Instructions

outnabout

 
Frame Assembly

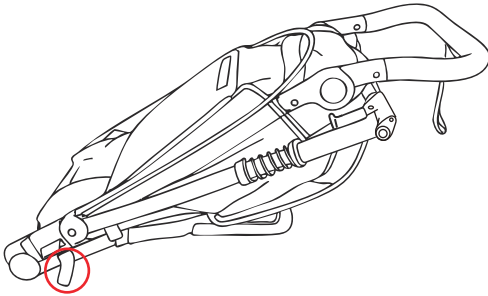

Release the auto lock catch.

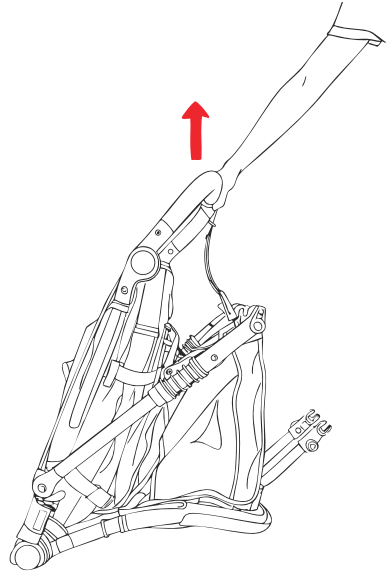 

Hold the handle bar and lift upwards.

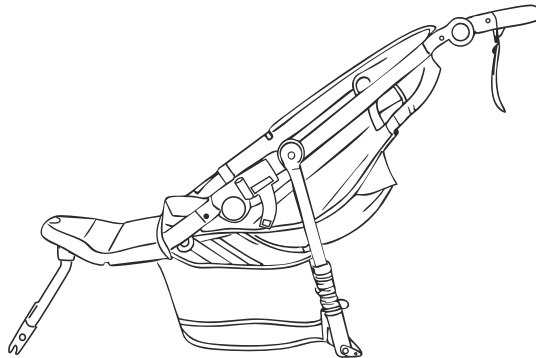


Continue to lift until the buggy is unfolded.


Instructions

outnabout


Fitting the Wheels

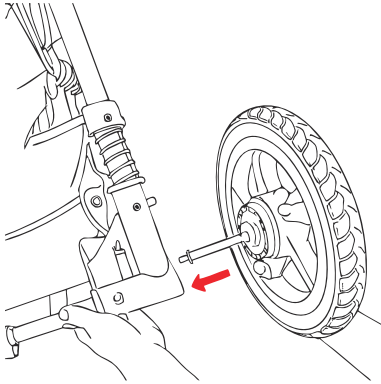

Grasp rear wheel in one hand. Slide wheel axle into frame until it clicks into place. Check that the wheel is properly inserted by pulling it firmly. The wheel should not pull out if fitted correctly.

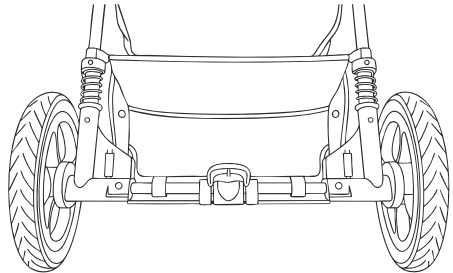

Repeat this for the other rear wheel.

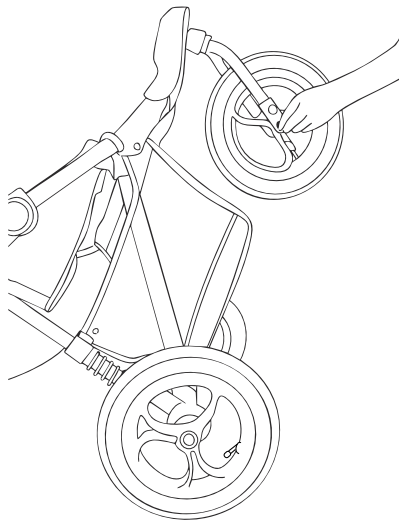


With stroller upright on its rear wheels tip it back so that the handlebar is down on the ground. (Take care not to damage the handlebar foam).

Instructions



outnabout

Fitting the Wheels

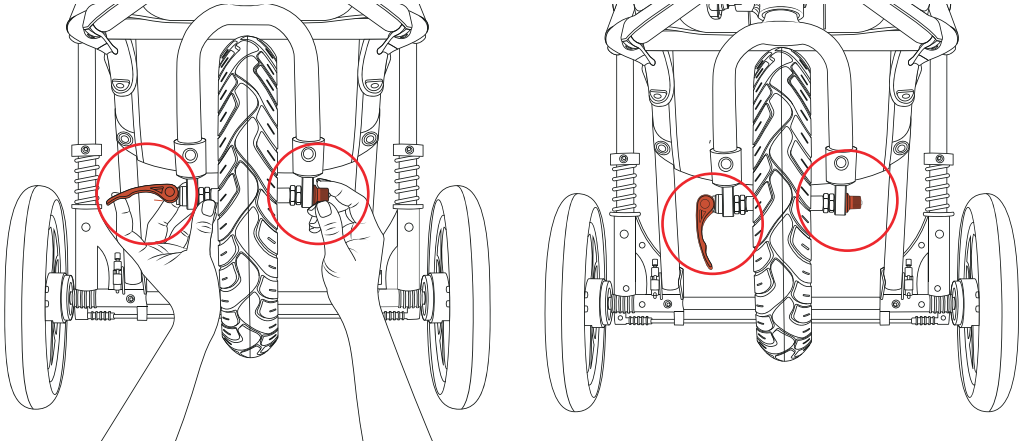

Attach the front wheel by loosening the quick release lever far enough to allow the axle to slide into the front forks. Tighten the cone nut until almost tight, flip the quick release lever backwards into the closed position. This locks the wheel in place. Pull on the wheel to make sure it is firmly locked in the forks.

Locking Front Wheel

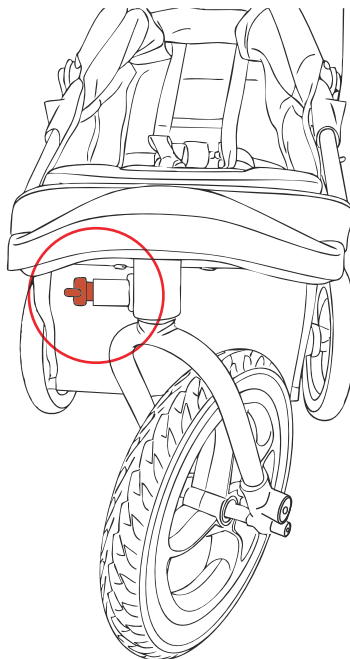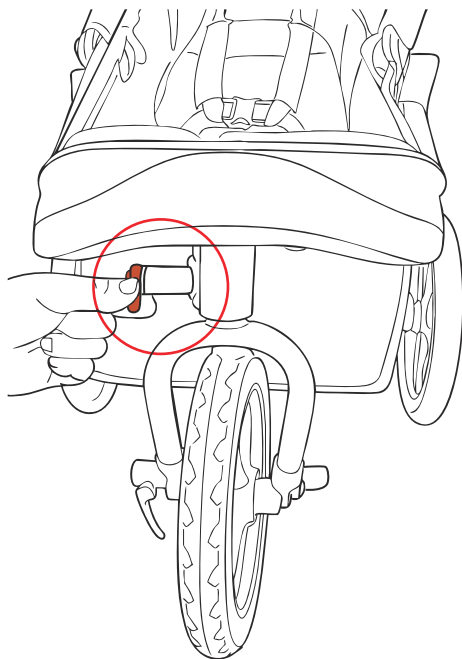

The front wheel can be locked into a fixed position or allowed to swivel.


1. To allow the wheel to swivel – turn the knob 90°counterclockwise.
2. To fix the wheel – Rotate the knob 90°clockwise.

You can test if the wheel is in swivel or fixed mode by trying to swivel the front fork with your hand.


Instructions

outnabout


Apply the brakes

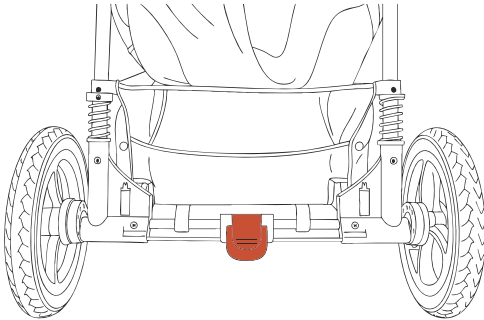

The orange brake foot-pedal is located in the centre of the rear axel.

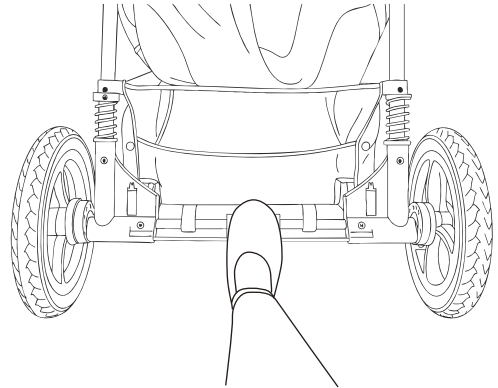


To engage brake, step down lightly on the entire foot-pedal until you hear a click sound. The brake is now engaged.

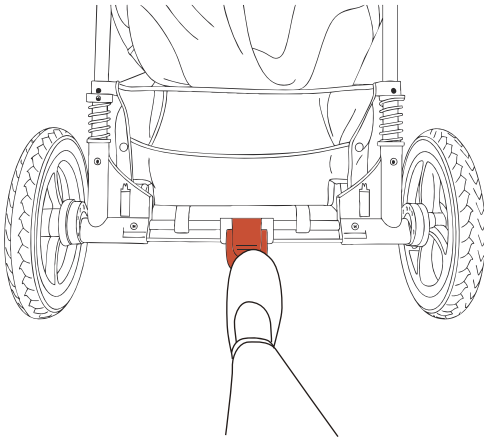

To release the brake:

Option 1: Step down on the outer edge foot pedal (without touching the center pedal).

Option 2: Flip the foot pedal up by applying pressure from below the pedal.


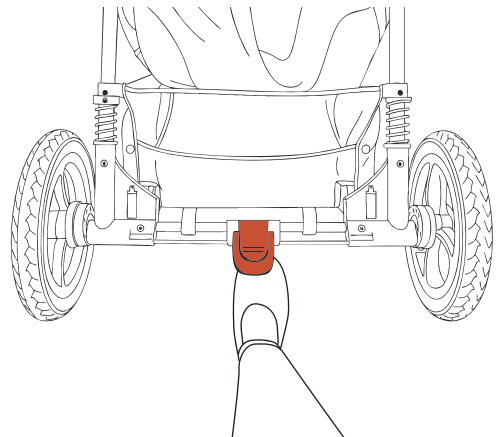


WARNING: Never leave the buggy without first applying the brakes.



Instructions

outnabout



Sun canopy

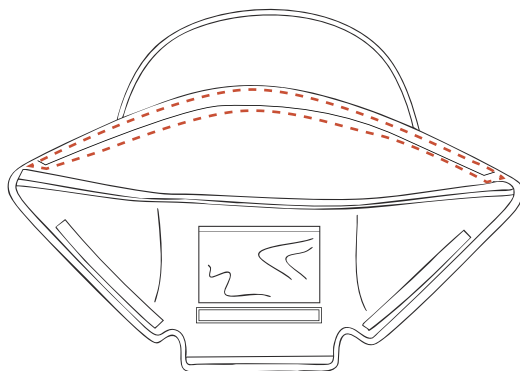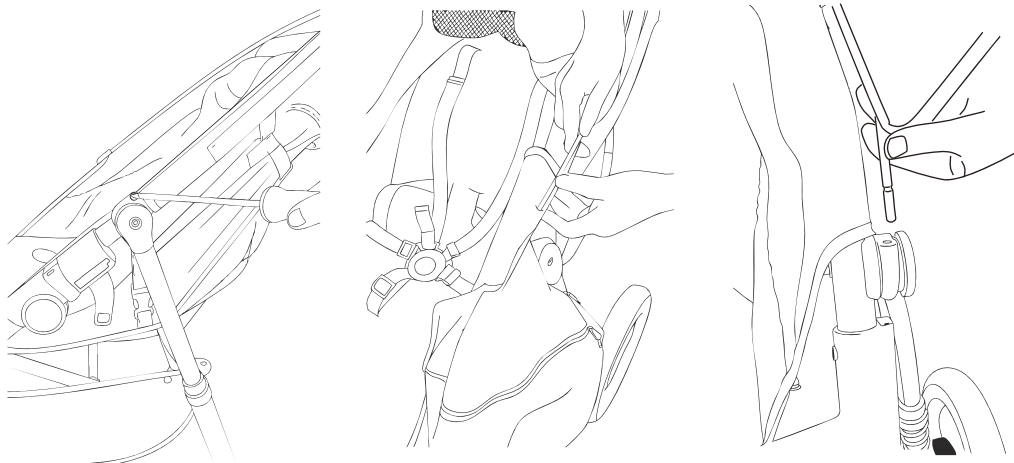


To install the sun canopy, loosen the screw that holds the canopy rod in place. Pull the rod out of the frame fixing, but leave the screw in the hood fixing. Thread the rod through the sleeve in the canopy. Once threaded all the way through, put the hood rod back into the frame fixing and tighten the screw. Make sure the rod is secured and can't be pulled out. NB you do not need to release the hood rod on both sides. It is easiest if you keep one side fixed while threading the rod through the sleeve.

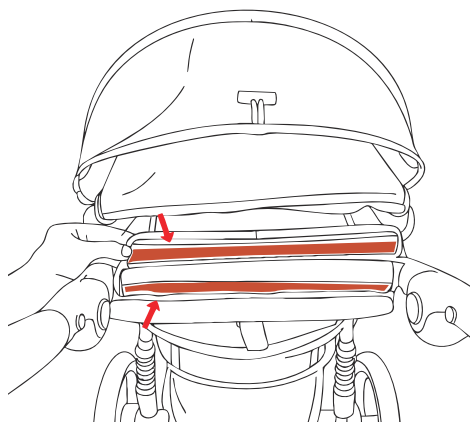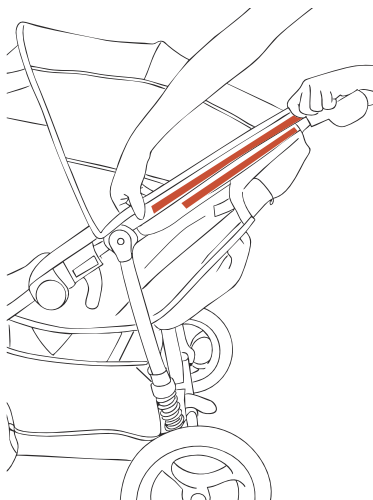


Attach the Velcro on the left and right sides and back of the frame.

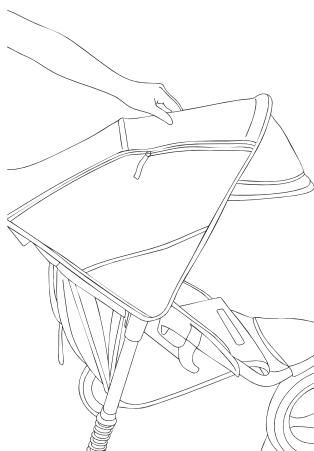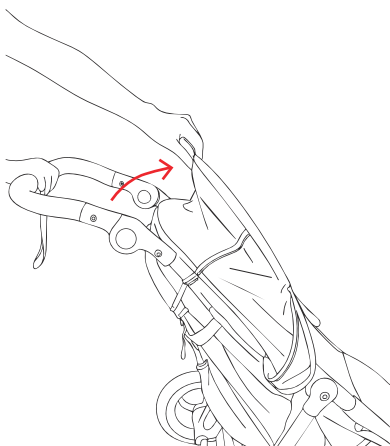

The sun canopy can be adjusted by simply pulling it into the desired position.

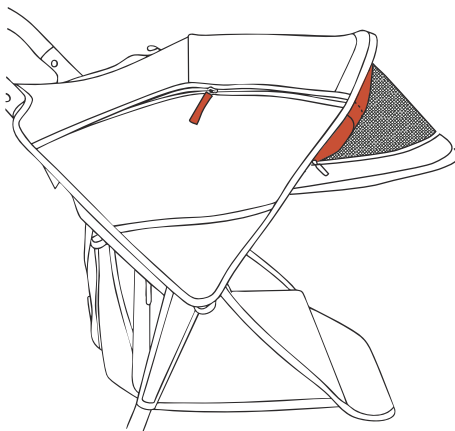


The extra sun visor is located under the rim of the hood, and can be pulled out when required. The visor has a cover that can be unzipped and rolled up to reveal the mesh ventilation panel.

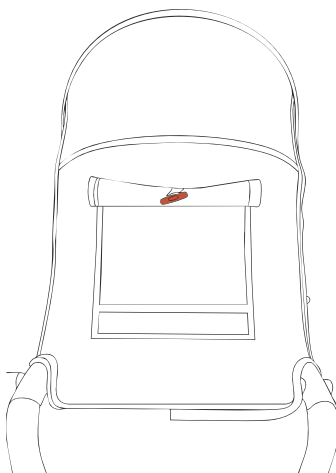


The canopy has a peek-a-boo window to make it easy to check on your little one. To keep the window open, roll the hood curtain and secure with the elastic loop and toggle.

Fitting the seat liner

Place padded seat liner on the seat area and follow the instruction for feeding the seat liner.

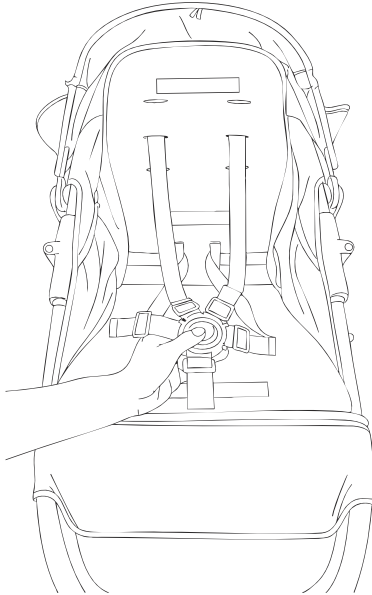


Press the button on the center buckle to unfasten the harness connectors.

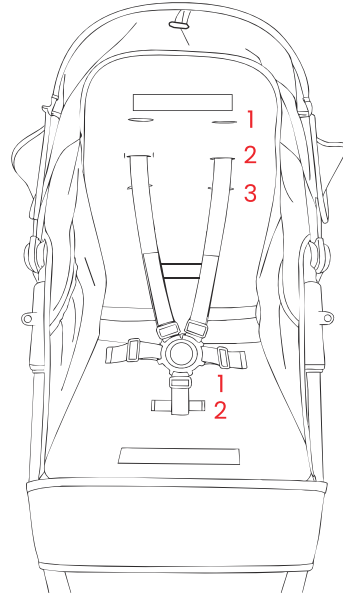


The shoulder and crotch strap harnesses can be adjusted to match the size of your little one. For the most comfortable fit, we recommend they are adjusted to the following positions:

- Above 6 months
(shoulders position 1 or 2, crotch position 2)
- Under 6 months
(shoulders position 3, crotch position 1)
- NB, for the shoulder harness to be in position 1, you will need to change the seat unit attachment position
(See page titled "Shoulder Harness Position")

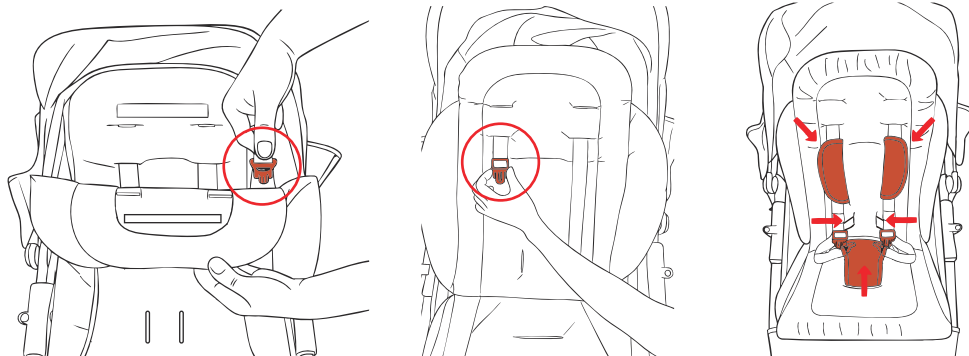

Place padded seat liner on the seat area. Feed the individual harness straps through the corresponding slits in the pad. Slide the harness pads onto the harness straps.

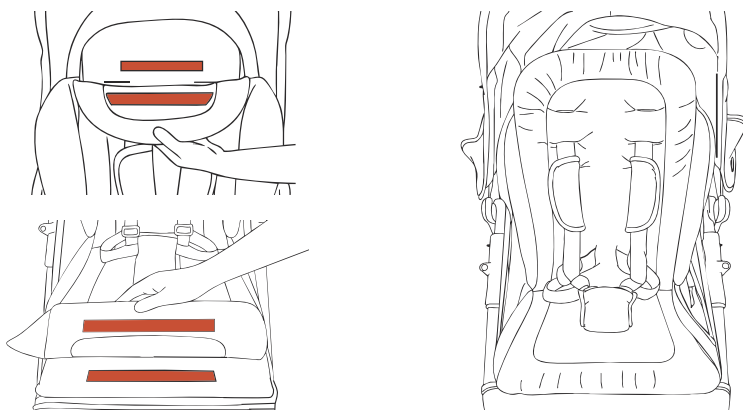

There are two sets of Velcro strips on the pad and buggy, this ensures the pad will be held securely in place.

Place child in seat and ensure crotch strap is between the child's legs.

Proper Use of Harness


1. Place child in seat and make sure crotch strap is between the child's legs.
2. Place shoulder straps over child's shoulders.
3. Engage the clips into central buckle on the crotch strap.
Adjust the harness as necessary to ensure a good fit.



WARNING: When using the buggy in the reclined position, always adjust crotch and shoulder straps on the harness to ensure a good fit.

Shoulder harness position

How to change the position of the shoulder harness

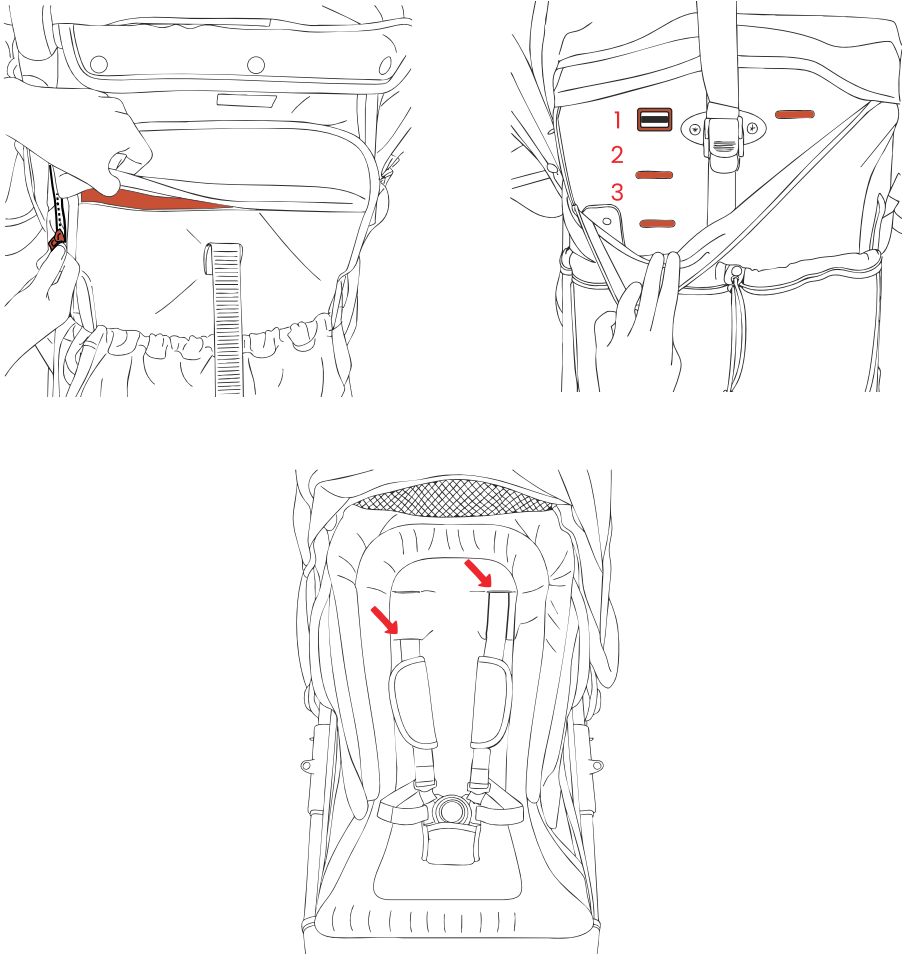

Behind the seat, above the seat recline toggle, there is Velcro & zipper access to the seat backboard. To move the shoulder harness position, push the harness out of the back board and fabric seat unit. Then, move the harness to the desired position and gradually thread it through the seat unit and backboard until fixed in place.

Instructions


outnabout

Adjustable Handle




Press the locking buttons on the inside of the handle hinge with your thumbs and rotate the handle to find a comfortable height.

Wrist strap

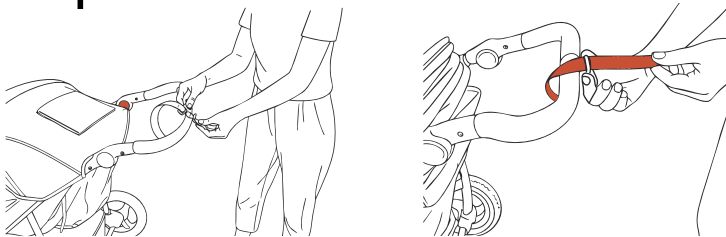

Wrap the wrist strap around the handlebar and slide one side's strap through the metal loop ring at other side.

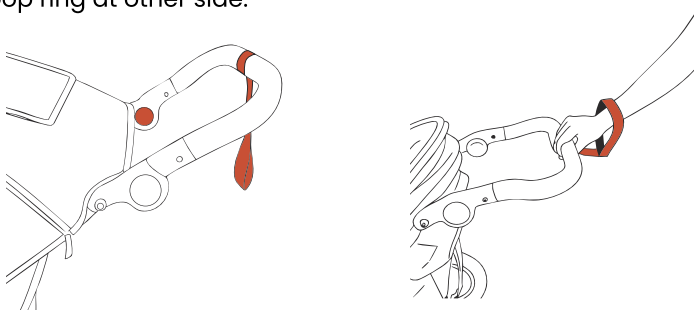

Pull on strap end to tighten the wrist strap. Place the strap around your wrist and hold the handle.

WARNING:



Use the jogging strap at all times during sports activities or when the equipment is in use.





Instructions

outnabout

Single Rain Cover

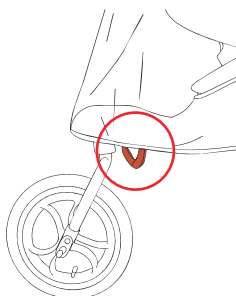
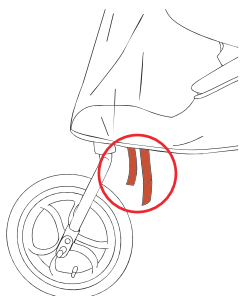


Fit the rain cover over the buggy, and secure the velcro under the front of the rain cover together.

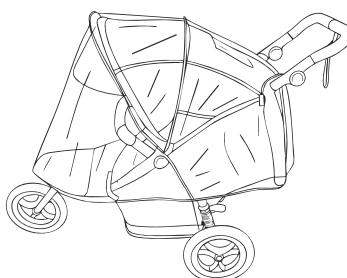
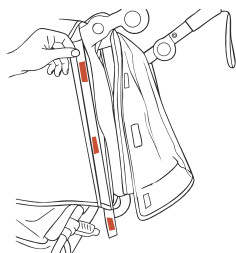


Attach the Velcro on both sides of the back of the rain cover.

Double Rain Cover

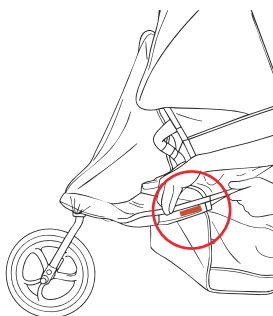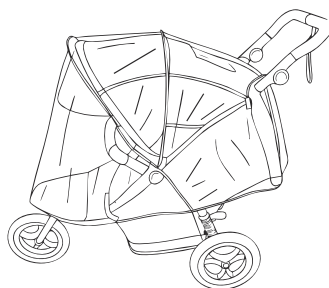

Fit the rain cover over the buggy, attach the velcro on the rain cover to the Velcro at the bottom of the foot strip.

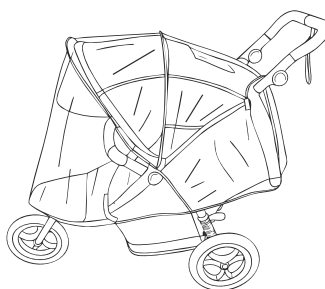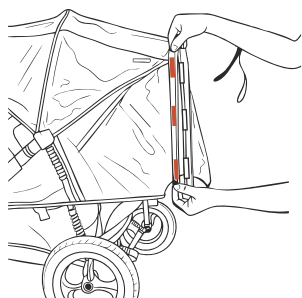


Attach the Velcro on both sides of the back of the rain cover.

Instructions


outnabout

Back Pouch

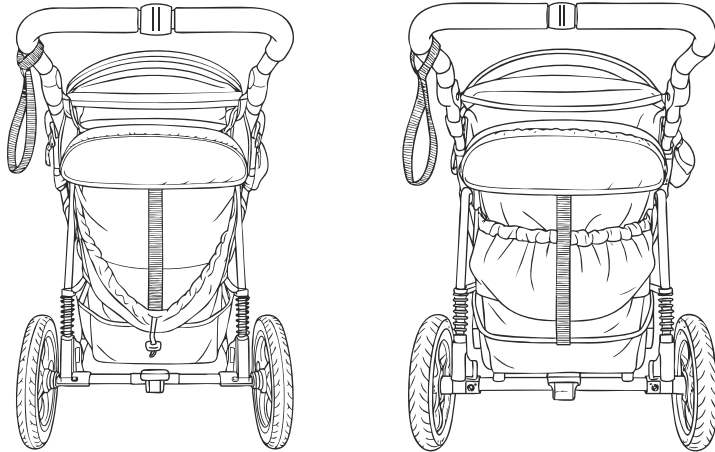

There's a storage pouch at the back side of the backrest.


Reclining seat

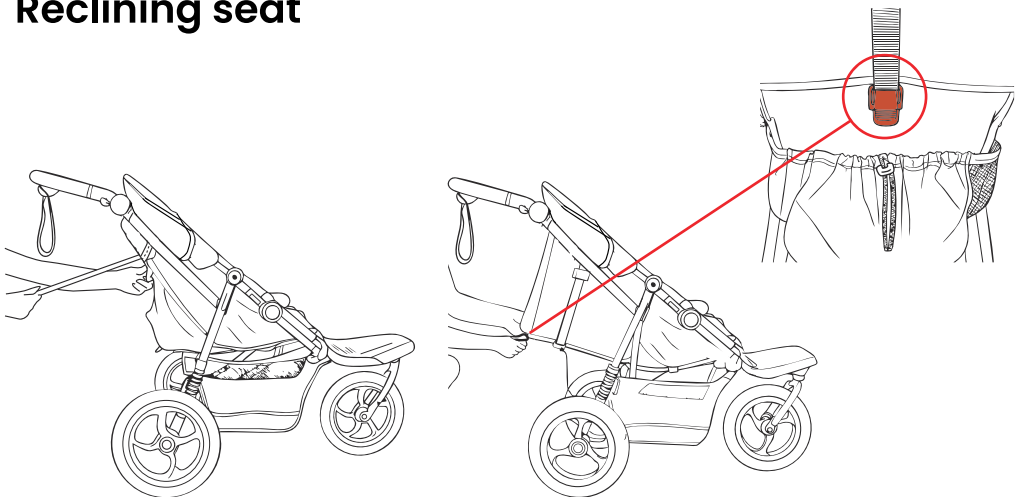



The recline position of the seat(s) on your stroller can be adjusted using the strap on back of the seat unit.

To recline the seat squeeze the clasp and pull it down the straps.

To adjust the recline position simply change the length of the strap using the clasp.

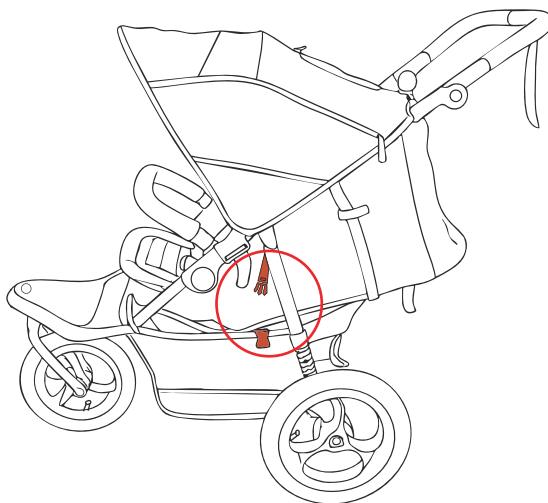

There is a buckle on both sides of the buggy. On the double buggy, these buckles are also on the back between the two seats. These buckles allow you to lift the base of the seat up or down. For a lay flat position, or upright seating position, keep the buckle fastened. For a deeper seat position (better for running and allows more leg & head room), unbuckle these buckles.

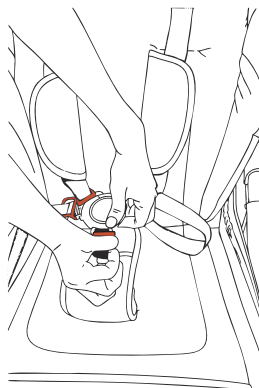
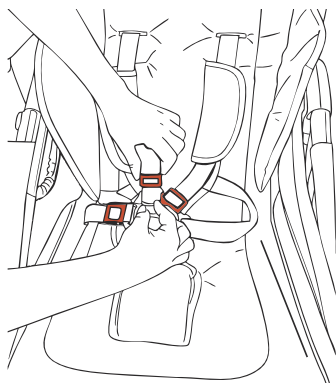


WARNING: When using the buggy in the reclined position, always adjust crotch and shoulder straps on the harness to ensure a good fit.

Instructions

outnabout

Bumper Bar

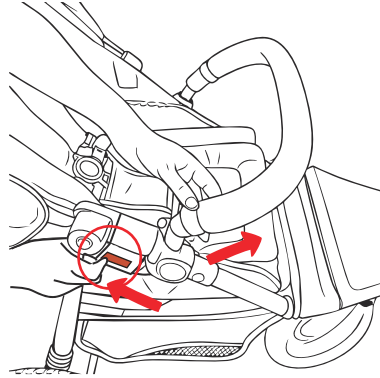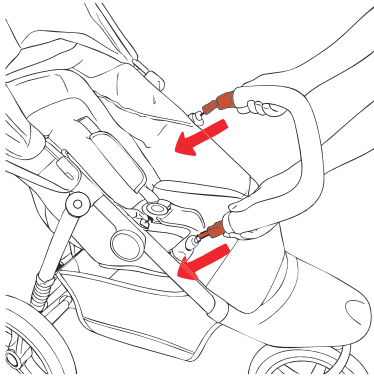


The bumper bar fits to the buggy housing on the chassis as shown above. Insert the metal prong on the bumper bar into the chassis.

To remove the bumper bar, slide the release button up and pull the bumper bar out of the housing.

Repeat the process for the other side.

Pull on the bumper bar to ensure that it has locked securely.

Back ventilation cover

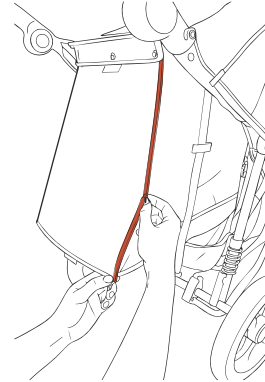

The rear panel of the buggy has a ventilated window which can be easily covered when required.


To cover the meshed windows, firstly pull out the cover fabric from the pocket located above the mesh. Then pull down the zips either side of the fabric to cover the seat.

Instructions

outnabout

Cup Holder

The cup holder fits over the plastic molding on either side of the handlebars.


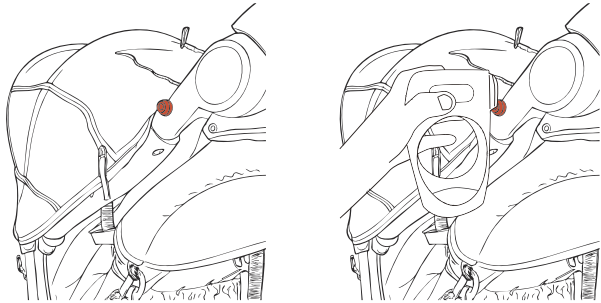


Rear handbrake components


Please note that the wheels suitable for use with the hand brake have a round iron ring around the wheel cog as shown in the above picture.

Older versions of our 12" and



16" wheels do not have this ring, and a v6 purchased with standard 12" wheels also do not have this ring.

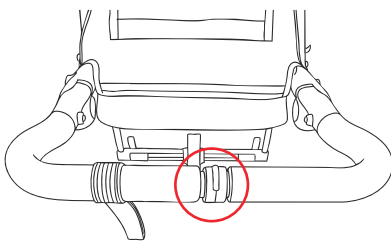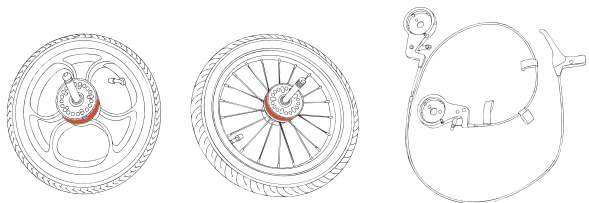

Remove this plastic cover from the handle.

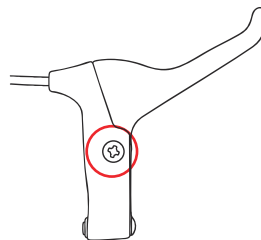


Loosen the screw on the brake lever.

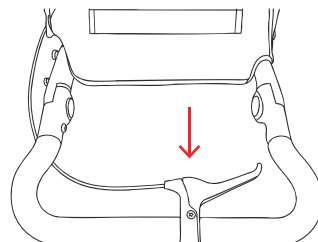
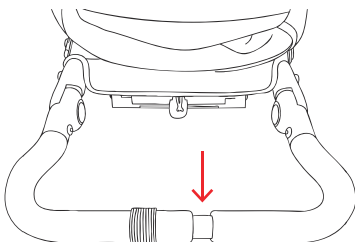


Install the brake lever in the position where the plastic cover was which you removed.



Run the brake cable along the frame with the following steps:

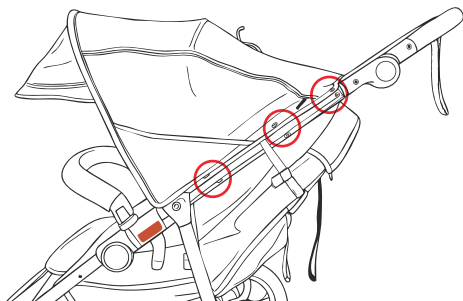

1. Unbutton the poppers along the left side of the frame holding the seat unit to the frame. Run the brake cable along the frame and secure it by reattaching the poppers from the seat unit around the cable.

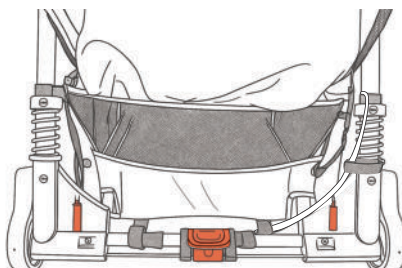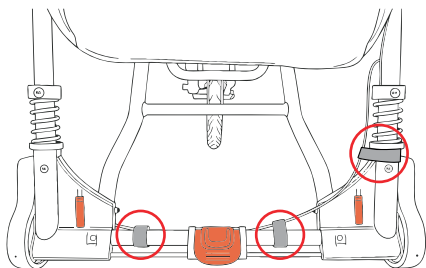


2. Secure the brake cable to the foot brake bar using the basket Velcro straps or separate Velcro straps provided.

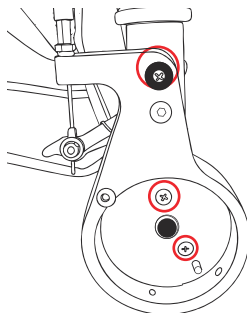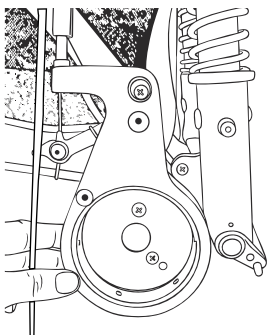

Note that the upper and lower screws are different.


3. Attach the brake housing to the frame with the screws provided.

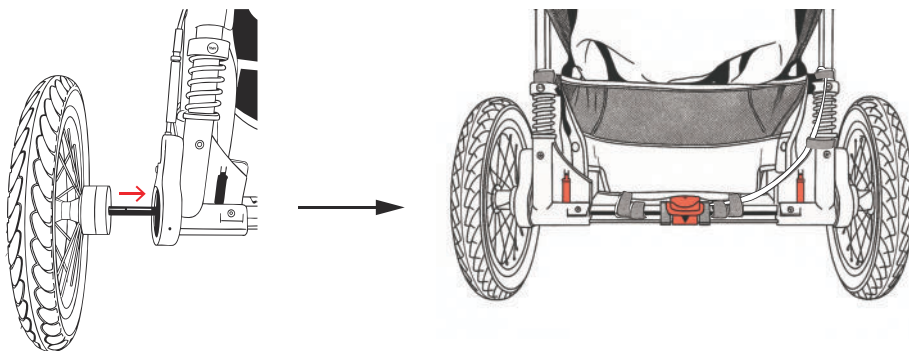

4. Slot the wheels into the frame.



5. The handbrake set up should look like this when completed.

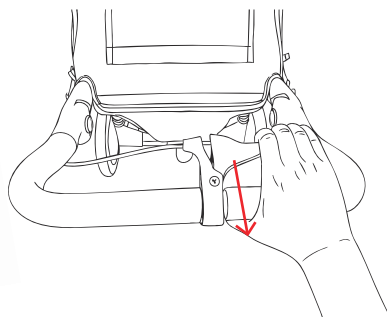


Squeeze the Hand Brake gradually to give you better control over your buggy while jogging or running.

WARNING:

For running the seat unit shall be in the most upright position, the harness fastened, jogging strap on your wrist and the front wheel in fixed position.

Hand Brake Adjustment

If your brake is not working well, or one side is braking more than the other, you should adjust the tension in your brake cables.

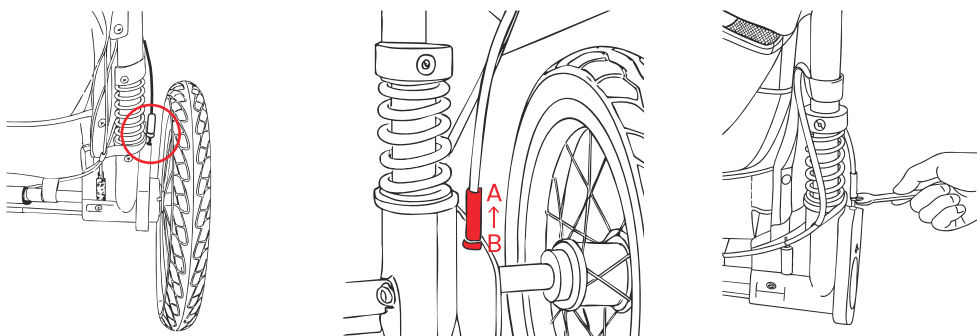

1. In the case where one brake is functioning and the other is not, for the one that is not, loosen cylinder ring (A) while holding the small ring (B) in place.




2. Long-term use of your brakes can lead to wear and tear of the brake pad on both sides, resulting in weak brakes. To strengthen your brakes, loosen cylinder ring (C) while holding the small ring (D) in place.

Instructions


outnabout

Folding the stroller

Attention! Ensure the canopy is closed, the backrest is reclined and the front wheel is in swivel position for the smoothest and most compact fold.

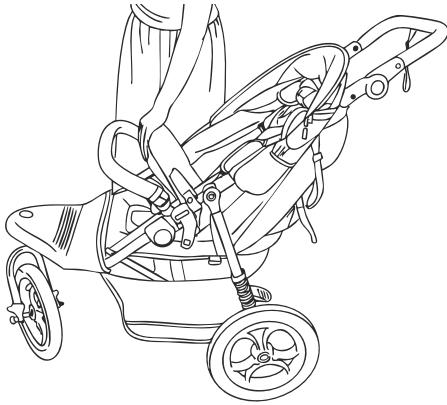


1. Flip the seat board up to reveal the folding lever beneath the seat unit.

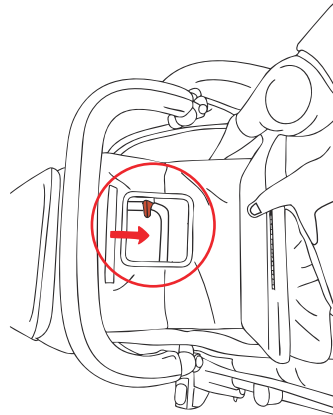


2. Grab the folding lever and hold the release lock with your thumb. Pull the release lock with your thumb and hold it tight before the next step.




3. While holding the release lock with your thumb, pull up the folding lever as if pulling through the seat. The buggy will fold.

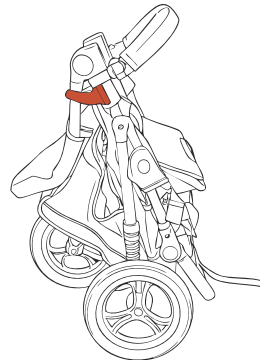


4. Once folded, the auto lock catch will engage to keep it folded. For a more compact fold, take the wheels off.

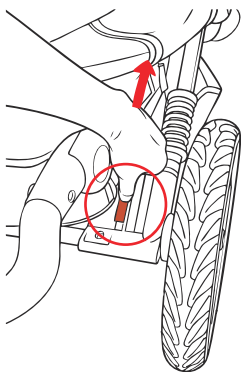





5. To release the rear wheels lift the orange axle release button and pull the wheel free from the frame. Repeat for the other rear wheel.

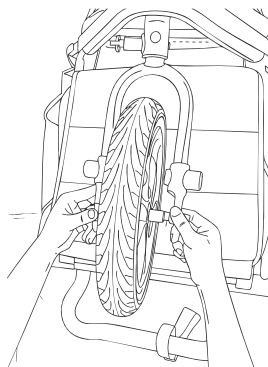

6. The front wheel can be released by loosening the wheels quick release lever far enough to allow the axle to slide off the front forks.

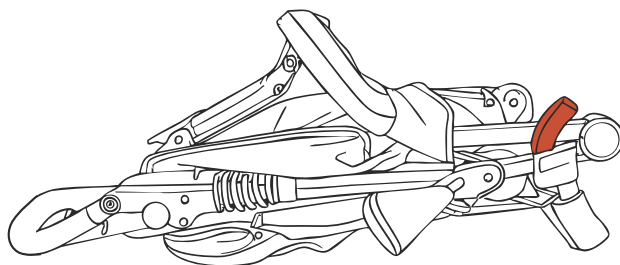

7. The most compact fold is achieved when all the wheels are off.

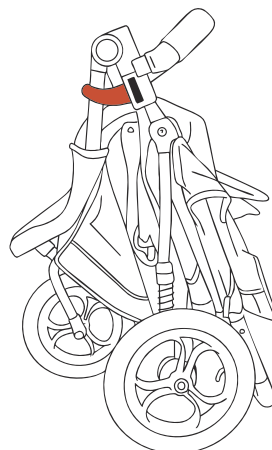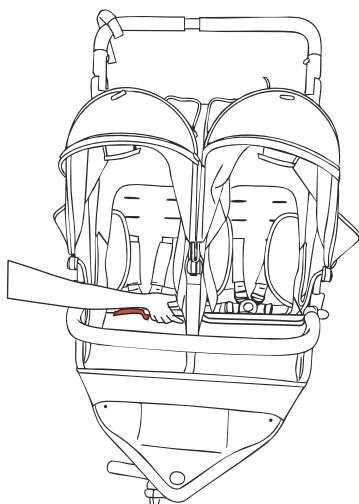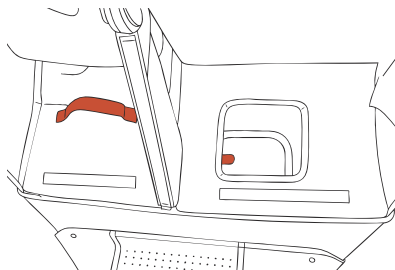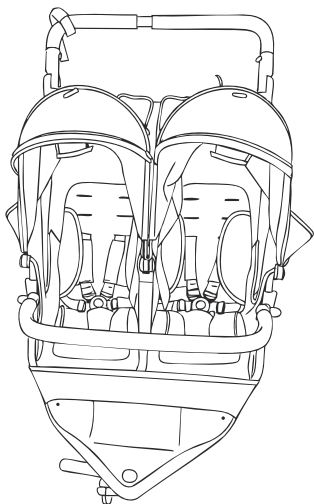

For the double, follow the same process, but ensure to flip the seat board up on both sides to reveal an orange pull strap on the right side of the buggy. Pull the locking lever and the orange pull strap at the same time. The buggy will fold and engage the locking latch.

Care & Maintenance

- Periodically check the stroller to ensure that it is in good operating condition.
- Check all fixings to make sure they are secure.
- Check the condition of the wheels and oil with a silicone spray if necessary.
- Do not use the stroller if any screws, nuts, bolts are missing or if any component is damaged.

To clean seat and canopy:

If light cleaning is required, use a soft cloth with warm water and mild soap then air dry. Do not put in the washing machine. Do not put in the dryer. DO NOT BLEACH.

To clean frame:

Wipe using a soft cloth with warm water and mild soap. Air dry. Do NOT USE polish, abrasives or corrosive products. Lubricate moving parts with a silicone spray if necessary.

Tyres:

Check the tyre pressure regularly. Do not over inflate tyres – 36 PSL (14") / -22 PSL (12") will provide a comfortable ride for your child.

Warranty

To register your buggy online please go to www.outnabout.com/warranty
It's simple and will only take a minute.



Follow QR code to
register your warranty

This pushchair complies with: EN 1888-2:2018+A1:2022/ EN 1888-3:2024 (E)

outnabout

Out'n'About ATP Limited
Unit 2D, Kinsbourne Farm,
MK43 8TS, Stagsden
Tel: 01234 344230
email: info@outnabout.com



facebook.com/outnaboutuk



twitter.com/outnaboutuk



instagram.com/outnabout_official

Accessories

available for your buggy



Carrycot

The carrycot connects easily to the frame with a click. Includes a quilted lining, mattress and apron to give your newborn a comfy cosy ride. Sizes available to fit Nipper Single and Nipper Double in a choice of colours to match your Out'n'About pushchair.



UV Cover

Available in sizes to match your buggy



Tyre Sealant

Inner tube puncture repair sealant. Available in tube or bandage strip form.



Newborn Support

Used in conjunction with the low-lie position of the reclining seat this gives extra support to babies in the first couple of months. Available in colours to match your buggy.



Custom Buggy Bag

Available for both single and double models, this bag will make your buggy extremely easy to handle and keep it safe when travelling as well as ensuring your car boot stays mud free. Out 'n' About buggy bags are custom made for a perfect fit, complete with hand and shoulder straps.



Universal Travel System Adapters

Suitable for use with all single Outnabout pushchairs. The adapter is compatible with a range of carseats including Maxi Cosi, BeSafe & Cybex. Please check model compatibility with your retailer.

For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be replaced in a suitable pram body, cot or bed.



EVA Wheels

The EVA wheel is a lightweight and durable alternative when using your Nipper pushchair around town. Low maintenance wheels, ideal for the city parent. Simple to fit, with the quick release function as standard.



Front Rider



Footmuff



Nipper Pack (Mama Pack)



All seasons cover



Out'n'About ATP Limited
Unit 2D, Kinsbourne Farm,
MK43 8TS, Stagsden
Tel: 01234 344230
Email: info@outnabout.com
www.outnabout.com



facebook.com/outnaboutuk



twitter.com/outnaboutuk



instagram.com/outnabout_official