

# SmartCard Quick Start

## Google Find Hub

Thanks for purchasing Smartcard! Before you put your KeySmart SmartCard in your wallet, let's get it connected to the Google Find Hub app.

**1**

Power on: Press and hold the button for 5 seconds, the device will beep and turn on. (To confirm your device is powered on: Double-click the device button, the device will make a sound.)

**2**

Open the Google Find Hub app on your Android™ device. A pop-up showing SmartCard will appear. Select "Connect", "Agree" and "Continue".

**3**

Set a custom name for your device. Your device is now connected.

**4**

Fully charge the SmartCard battery using a wireless charging pad. SmartCard will last about 8 months on a single charge.



**To Charge:** Align the lightning bolt icon with the center of your wireless charger.

**While Charging:** The indicator light will be red. When the battery is charged, the indicator light will be green.

See inside for helpful tips & tricks →

Follow the tips below for the best SmartCard experience.

- Charge your SmartCard every 5 months to get the best finding experience.
- Use the SmartCard with a leather or fabric wallet and place in the outermost pocket.
- Share your SmartCard with family inside the Google Find Hub, so they can help you find your wallet.
- Still having trouble? Reach out to our support team at [orders@mykeysmart.com](mailto:orders@mykeysmart.com).

### Operating Instructions

- Power On: Press and hold the button for 5 seconds, the device will send a prompt tone, and the device has been turned on.
- Disable: When the device is powered on, press the button 5 times in 2 seconds, the device will send a prompt sound, and the device will enter the shutdown sleep mode.
- To Enable Identification: Locate the ON/OFF button on the SmartCard. Quickly press the button six times within 2 seconds.

### Locate your SmartCard

1. Open Find Hub app and select the SmartCard under the "My Devices" list.
2. Tap on your SmartCard.
3. Tap "Play Sound" to trigger the Smartcard locator sound.
4. Tap "Stop Sound" to stop the sound once your SmartCard is found.

### Removing SmartCard from Google Find Hub App.

- To remove your SmartCard from the Find Hub app, select the gear icon to navigate to Device Details.
- At the bottom of the screen, select "Remove from Find Hub".

### How to Perform a Factory Reset

- After the device is turned on, click the device button 4 times in a row, and the device will sound a prompt sound. When you hear the device tone, continue to press and hold the button for about 8 seconds until the device sounds again, release the button, and at this point, the factory reset is complete.

### Use And Care

KeySmart SmartCard is water-resistant but not waterproof. We encourage you to bring your KeySmart SmartCard along on most of your wild adventures, but deep-sea explorations (and the like) are not recommended. It is not recommended that you expose the KeySmart SmartCard to extreme hot or cold temperatures.

### Legal

Android and Google Play are trademarks of Google LLC. This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.