


**EXTAR**

**EP9**

***CARBINE***

**OWNER'S MANUAL**

# OVERVIEW & FEATURE TERMINOLOGY

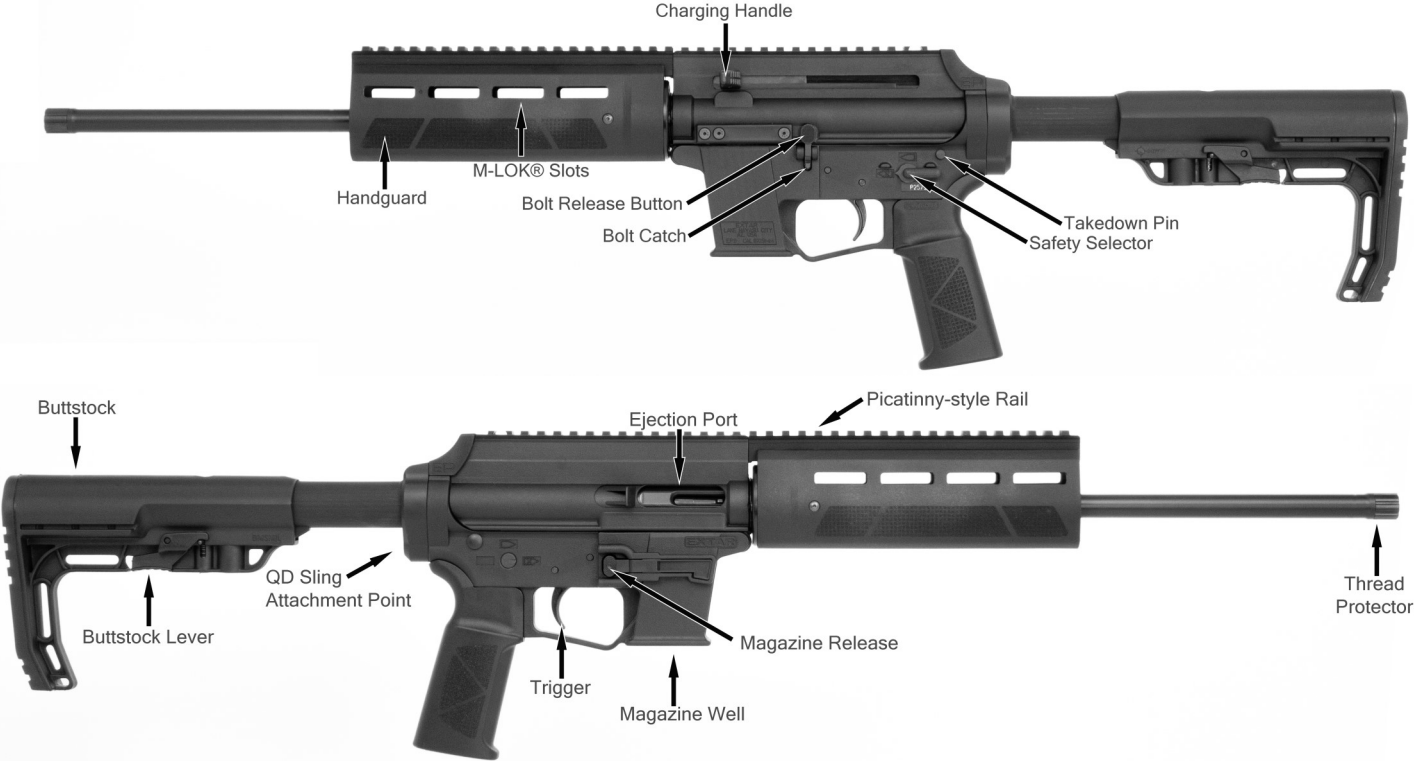

We want you to enjoy shooting your new Extar EP series rifle, but we want you to enjoy it safely. You may be an experienced safe shooter already familiar with the procedures in this instruction manual, or you may never have handled a firearm before. Either way we urge you to read this entire instruction manual carefully. You must follow the safety instructions for your safety and the safety of others.

### **Warning!**

If this firearm is carelessly or improperly handled, unintentional discharge could result and could cause injury, death or damage to property. However, your safety and the safety of others depend on your compliance with this advice, and your adoption, development and constant employment of safe practices. If unfamiliar with firearms, seek competent advice through safe handling courses run by your local gun range or an approved NRA instructor, or similar qualified organization.

### **Notice!**

This instruction manual should always accompany this firearm whenever this firearm is loaned or transferred to another individual. The manufacturer shall not be responsible for injury, death or damage to property resulting from either intentional or accidental discharge of this firearm, or from its function when misused for purposes or subjected to treatment for which it was not designed.

Please read through all of the procedures listed in this manual. If any part of this manual is unclear to you, please contact us before attempting the procedure.

### **THIS IS *NOT* A SAFETY MANUAL**

**If you need assistance with the safe handling of this, or any firearm, please contact a certified firearm's instructor or school.**

## General Firearm Safety Rules

1. Always handle your firearm as if it were loaded.
2. Never point your firearm at anything you are not willing to destroy.
3. Always make sure your firearm is not loaded and bolt is locked open before laying it down or handing it to someone else.
4. Never leave a loaded firearm unattended.
5. Always be sure barrel, bore, chamber and action are clear of obstruction.
6. Never drink alcoholic beverages or take drugs before or during shooting.
7. Always wear eye and ear protection when shooting.
8. Always keep the firearm safety selector on safe when it is loaded, until ready to shoot.
9. Never attempt to fire if the bore is obstructed.
10. Never indulge in "horseplay" when operating firearms.
11. Always be sure of your backstop and that it is adequate to contain projectiles before beginning target practice so that you do not hit anything outside the range.
12. Always put a knowledgeable and responsible person in charge to maintain safety and control when a group is firing on a range. Obey commands so that discipline is maintained to reduce the likelihood of accidents.
13. Always carry your firearm empty with the bolt locked open while on the range until preparing to fire. Keep it pointed towards the backstop or in a safe direction when loading, firing and unloading .
14. Always be sure barrel bore, chamber and action are clean and clear of obstructions. Clean a wet or fouled firearm as soon as possible so that it will continue to function safely and properly.
15. Always use only clean, dry, original high-quality commercial ammunition in good condition, and of designated caliber of your firearm. **DO NOT USE ALUMINUM CASE AMMUNITION OR RE-MANUFACTURED AMMUNITION. (RELOADS)**

16. Do not attempt to use any type of drum fed magazine.
17. Forcing damaged ammunition into the chamber could cause damage to the weapon and could result in injury, death or damage to property.
18. Always seek a doctor's advice if you are taking medication, to be sure you are fit to shoot and handle your firearm safely.
19. Always wear ear protection and advise others in close proximity to do so as well. Discharging firearms without hearing protection can cause hearing loss over time.
20. Always wear eye protection and advise others in close proximity to do so as well. Flying particles could damage eyes and cause blindness but wearing protective equipment will greatly reduce your risk of injury.
21. Always keep clear and keep others clear of the ejection port. Spent cartridges are ejected with enough force to cause injury and the ejection port must be unobstructed by your hand to insure safe ejection. Never place fingers in the ejection port, they could be burned or injured by the bolt moving forward.
22. Never put your finger in the trigger guard until you are aiming at a target and ready to shoot.
23. Always be absolutely sure of your target and the area behind it before you squeeze the trigger. A projectile can travel up to three miles; if in doubt, don't shoot.
24. Never shoot at a hard surface such as a rock, or a liquid surface such as water. A projectile may ricochet and travel in any direction causing injury, death or damage to property.
25. Never discharge a firearm near flammable substances since flame and sparks are expelled from a firearm.
26. Keep this firearm out of the reach of children, unauthorized individuals and others unfamiliar with the safe handling practices of firearms.

**Failure to follow these rules can result in damage to property, injury or death. Always follow these instructions and carefully read and refer to this manual before loading firearm.**

## HEALTH WARNING

Discharging of firearms in poorly ventilated areas and handling of ammunition may cause exposure to lead and or lead compounds. Exposure may cause cancer, birth defects and other reproductive harm. Have adequate ventilation at all times, especially in confined areas. Wash hands thoroughly after shooting, handling ammunition, or cleaning the firearm. Do not eat or smoke during these activities.

## Unloading and Clearing Your Rifle

1. Keep your rifle pointed in a safe direction for the duration of the procedure.
2. Place your safety selector on "SAFE". You cannot select the "SAFE" position unless the hammer is cocked. (fig. 1)
3. Depress the magazine catch button and remove the magazine.
4. Eject the chambered cartridge by retracting the charging handle until it stops. Let the ejected cartridge fall to the ground.



Figure 1

5. While holding the charging handle to the rear, inspect the chamber and receiver to ensure you have removed any cartridges from the action and barrel chamber. (fig. 2)
6. Release charging handle once you have verified the chamber to be clear and no cartridges are in the rifle. **Your rifle is now unloaded and clear. It may now be loaded or prepped for transportation or storage.**



Figure 2

## Loading and Firing Your Rifle

Begin with a rifle that has been verified to be unloaded using the preceding directions. Make sure the selector is on safe.

1. Keep your rifle pointed in a safe direction for the duration of the procedure.
2. Load your magazine with proper ammunition. Place cartridge in front of feed lips, press down until it is below feed lips and then slide fully to the rear.
3. To insert your magazine, press the magazine upwards into the magazine well until it locks in place. Pull the magazine down to verify that it is locked in place. **IMPORTANT NOTE:** Forcing a fully loaded magazine to seat on a closed bolt can be difficult and possibly cause damage to your magazine or firearm that could make it unusable. Magazines should either be loaded one less than full, or only inserted with the bolt locked to the rear.

4. Retract the charging handle fully to the rear. Release the charging handle. Do not “ride” or attempt to control the charging handle while chambering a cartridge, as this can cause the rifle to misfeed. **Your firearm is now loaded.**
5. Place the selector on “FIRE” (fig. 3) **Your rifle is now ready to shoot.**
6. Squeeze the trigger until the hammer is released.
7. Once the magazine is empty, the LRBHO (Last round bolt hold open) will lock the bolt back, leaving the bolt in the open position. Depress the bolt catch (fig. 3) to send the bolt forward, **this will chamber another round if you have a loaded magazine in the rifle.**



Figure 3

## Malfunction Procedures

1. If an audible “pop” or reduced recoil is experienced during firing, **immediately CEASE FIRE**, remove the magazine, lock the bolt to the rear and place the selector lever to the safe position. Visually inspect and/or insert a cleaning rod into the bore to ensure that a projectile is not lodged in the bore.
2. Failure to fire: always hold the firearm, keeping it pointed in a safe direction and wait 30 seconds when it fails to fire. If a hang fire (slow ignition) has occurred the round should fire within 30 seconds. If the round does not fire, open the breech, eject the round and examine the primer. If the firing pin indent is slight, off center or non-existent, have the firearm examined by a competent gunsmith before firing again. If firing pin indent appears normal in comparison with previously fired cases, you can assume faulty ammunition. Properly discard and resume firing. Note: it is normal for a light firing pin indent to appear on the primer of cartridges which have been fed into the chamber of the rifle but not fired.
3. Never use your firearm if it fails to function properly and never attempt to force a jammed action into battery.
4. Never alter any of your rifle components, as the level of safety could be reduced.
5. If your rifle is in need of repair or replacement parts, please contact Extar for instructions and prior approval before shipping a firearm to our facility.



## Disassembly Instructions for Normal Cleaning and Maintenance

**Regular cleaning and maintenance will ensure proper function and long life of your firearm. Before disassembling your pistol, unload and make absolutely certain that your rifle has been cleared, as described in the unloading instructions.**

1. Verify your rifle is unloaded/clear and return the bolt into battery.
2. Partially push the rear take down pin from the left side so it is not captured by the detent that retains it in the receiver in the closed position. Do not attempt to drive it out with a punch. A bullet tip or other tool that will move the pin enough to grasp the head on the opposite side is proper procedure. (fig. 4)
3. Pull the rear take down pin the rest of the way to the right side of the lower receiver until it engages the detent that holds the pin in the open position. (fig. 5)



Figure 4



Figure 5

4. Grasp the front of the magazine well with a thumb up on the back of the hand guard retainer as shown in the illustration. (fig. 6) Push the upper assembly forward with your thumb until it lifts up in the back to a loose position and simultaneously disengages from the front retaining hook.



Figure 6

5. The upper and lower receiver groups are now separated; set the upper receiver group aside. **PLEASE NOTE: The receiver extension should not be removed or replaced.**

6. Remove the buffer and action spring from the lower receiver by first depressing the buffer slightly into the lower receiver extension tube. While maintaining tension on the buffer face, the retaining plate that inserts into a slot in the lower receiver can now be lifted up or drop out. While removing the buffer, remember it will be under pressure from the action spring. (fig. 7) Holding the hammer depressed past the cocked position will allow the buffer and spring to be easily removed from receiver extension. (fig. 8)



Figure 7

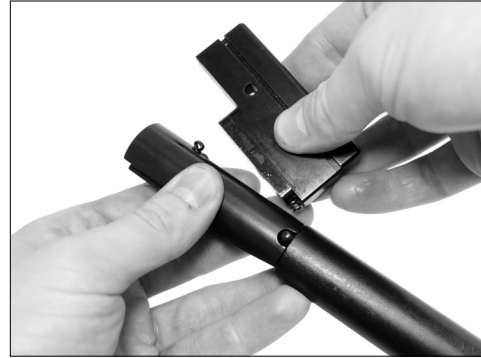


Figure 8

Figure 9



Figure 10



7. Set the lower receiver, buffer and recoil spring aside and pick the upper receiver back up.
8. Move the charging handle all the way to the rear, and then pull the charging handle straight out. (fig. 9).
9. With the charging handle removed, pull the bolt straight out and then lift off the top portion of the bolt (the "key") by lifting from the front end. Set it to the side.
10. Remove the firing pin retaining pin from the left side of the bolt carrier group. You may use a small tool to push out the firing pin retaining pin. (fig. 11) To further aid disassembly you may need to slightly depress the firing pin to relieve tension from the firing pin spring.

Figure 11



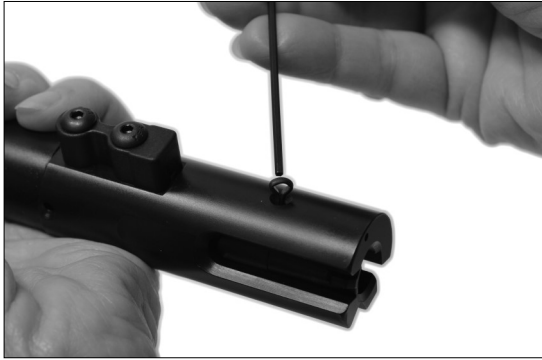


Figure 12



Figure 13

11. Tilt bolt face up and the firing pin should fall from the bolt.
12. Remove the extractor by pulling the retaining pin up and out of the bolt. (fig. 12) To ease the retaining pin removal, apply slight pressure onto the lateral face of the extractor to ease the spring tension.
13. Your rifle is now disassembled to the point necessary for normal required cleaning and maintenance. **Do not attempt disassembly of your bolt any further than herein described.**
14. Your EP9 Carbine has been designed implementing advanced materials that eliminate the need for oil lubrication. Your EP9 Carbine will have optimal performance and best longevity if simply kept clean and dry. After thorough cleaning with traditional products, oils can be used if one simply insists, but they will not enhance function or decrease wear and tend to create a grimy mess that does just the opposite. If anything, “dry” lubricants such as a light fog of silicone spray or any of the PTFE based dry lubricant sprays are preferable over oil. **Never add oil to the firing pin or inside of the bolt.** Doing so will likely collect carbon on the firing pin, hindering its ability to move freely.
15. Assembly is the reverse order of the disassembly steps.
16. When installing the bolt key back on to the bolt, first insert the end with the exposed spring and push the spring into the bolt in order to slide the key on (fig. 10). The spring pressure is what keeps the key on the bolt.

**IMPORTANT:** The firing pin spring, if it has been removed, must be assembled back onto the firing pin as illustrated with the spring all the way up over the retaining shoulder. (fig. 13) Failure to do so can result in spring or firing pin breakage and failure to function.

Upon reinserting the bolt into the upper receiver make sure that the last round bolt hold open actuator is positioned out of the path of the bolt.

## Instructions For Muzzle Device Work

**WARNING:** Always confirm that a muzzle device is appropriate for use with the designated caliber of the firearm. If you are not sure or do not have the capability to physically confirm this, consult a qualified gunsmith.

The Extar EP9 Carbine is uniquely designed to accommodate easy and efficient muzzle device work in an uncommonly sensible manner. Do not attempt to use “upper vise jaws” or any similar devices designed for other firearms. Simple and common hand tools are all that is required and all that should be used to prevent damage to your upper receiver.

1. Remove the factory thread protector first by firmly gripping the thread protector and then turning it to the left till it is removed.

**NOTE:** To reinstall our unique non-threaded thread protector, simply put the thread protector on with the tapered side toward the muzzle and then push it on with the palm of your hand (fig. 14). This thread protector will not walk off and thus requires no Loctite or O-ring.



Figure 14

2. Remove the handguard by removing the two retaining screws on the backside of the hand guard retainer and the one retaining screw in the front upper rail, using a Phillips head screwdriver. (fig. 15)
3. After all three screws have been completely removed, the hand guard may now be pulled firmly forward to release it from the barrel nut. Lower the handguard from the top rail and then pull straight off the rest of the way. (fig. 16)
4. For muzzle devices that require orientation or torquing, standard open-end wrenches should be used to perform required work. (fig. 17) For additional stability, the wrench flats on the barrel can be covered with heavy protective paper and lightly clamped in an appropriate area of a vise, but this is usually not necessary and wrenches are the preferred method to avoid damage. If a vise is used on the flats, tighten only enough to hold against rotation, as a powerful vise could easily deform the barrel bore.
5. Assemble in reverse order. Make sure to only hand tighten the handguard back on and do not use power tools.

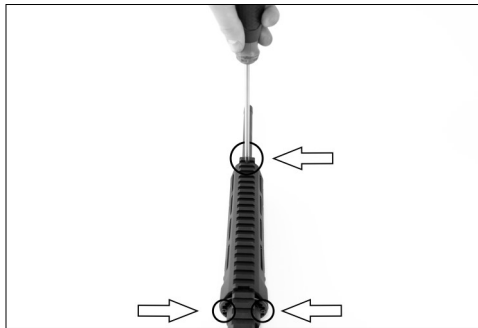


Figure 15

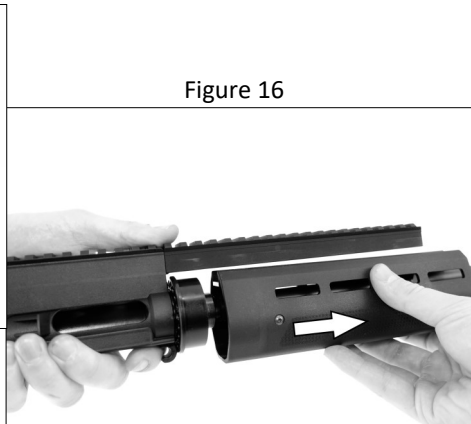


Figure 16

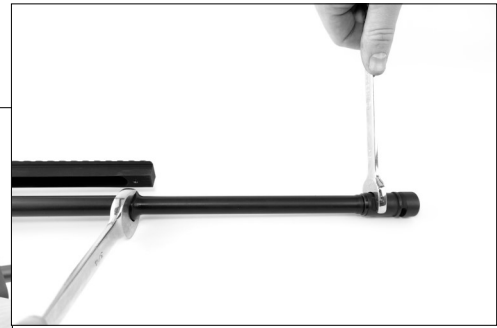



Figure 17

## Limited Warranty

 Extar LLC products are warranted to be free from defects in materials and workmanship for one year and ten days from the date of purchase. The warranty card included with this rifle should be filled out completely and sent to EXTAR LLC to activate the warranty, or you may register your firearm on our website. Any such defect of which EXTAR LLC is given written notice, as provided below, within the warranty period by a customer will be remedied by EXTAR LLC. This limited warranty is granted by EXTAR LLC. To initiate warranty service, you must first contact EXTAR LLC at **support@extarusa.com** and get a “Warranty Return Authorization” number. All warranty claims should state the model and serial number of the gun, a description of the difficulty experienced, and the date of purchase. It is recommended that the owner insure the shipment since EXTAR LLC will not accept responsibility for loss or damage in transit. Serialized receivers must ship directly from and back to an FFL dealer. EXTAR LLC will pay ground transportation and insurance charges for return back to the owner if the claim is covered by warranty. After authorization has been granted, the firearm should be sent to:

Warranty Service Department  
EXTAR LLC  
1070 Metric Dr.  
Lake Havasu City, AZ 86403

<https://extarusa.com>



**Lake Havasu City  
Arizona**

