

Warranty

This watch has been produced using first class materials and fully tested before leaving our manufacturing centre. Subject to the conditions stated below, this watch is guaranteed against defects in materials and workmanship for twelve months from the date of purchase, this does not affect your statutory rights.

Improper repair or warranty service performed by anyone other than P&CO or suppliers/ watch specialists designated by P&CO will make this warranty void.

Warranty claims will be investigated on a case by case basis. If the claim is found not to be covered by the terms of this warranty, it will not be processed and a replacement will not be issued. This warranty does not cover the following:

• Batteries, straps, bracelets, case, crown/stem, finishes and watch glass/crystal.

• Damage caused by excessive wear and tear and /or physical/accidental abuse.

 Damage resulting from wear under conditions exceeding the watch manufacturer's water resistance limitations.

• Damage caused from accidents, maltreatment and mishandling.

• Water penetration, except in watches marked as water resistant.

• Tarnishing of the watch case or bracelet caused by external agents.

Setting the time

- To set the time pull out the crown to the first click position 2.
- Turn the crown to set the hour and minute hands.
- Push the crown back to the normal position 1.



Setting the date and time

Setting the time • Pull the crown out to position 2. • Turn the crown to set hour and minute hands. • When the crown is pushed back to the normal position, second hand begins to run.

Setting the date

- Pull the crown out to position 1.
- . Turn the crown counter-
- clockwise to set the date.
- If the date is set between the hours of around 9:00PM and 1:00 AM, the date may not change the following day.
 After the date has been set, push the crown back to the normal position.



Quick Release Strap

To remove the strap locate the quick release pin on the reverse.

Slide the pin to the left whilst gentley pulling the strap, this should release the strap at the shoulder.

To reattach the strap position the left hand side of the strap in line with the hole at the shoulder.

Slide the quick release pin to the left whilst pushing the strap into the right hand shoulder of the watch.



Disposal of electronic equipment

The consumer has a significant role to play in reducing the impact

of waste electrical and electronic equipment, batteries and accumulators on the environment through re-using or recycling those articles. Some batteries and accumulators and some of the

components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed



The crossed out wheelie bin symbol is to remind you that waste electricia and electronic products, batteries and accumulators should not be disposed of with household waste. If you are unable to re-use or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.

Care for your watch:

Keep this booklet safe as it contains important information about the care of your watch.

• Battery should only be replaced by a qualified technician.

• Remove your watch before applying perfume or cosmetics.

 Do not allow the watch to be in contact with any corrosive agent (e.g. paint, all solvents and adhesives as this may affect the case and finish)

Do not expose to steam

• Please note this product is not water resistant unless marked.

 ${\scriptstyle \bullet}$ Do not bend bracelets beyond the normal curvature of the wrist.

 ${\mbox{ \ \ }}$ It is recommended the watch be kept in the presentation box when not in use.

Water resistance

If your watch is water resistant as indicated on the case back and / or on the dial, please follow the guidelines below:-

No markings: The watch is designed to withstand accidental exposure to water splash or rain.

5ATM: The watch is designed to withstand leisure type swimming (ic: swimming baths, yachting and taking a shower. It is not designed for high board diving, scuba diving, etc. 10ATM: The watch is designed to withstand swimming, yachting, taking a shower, shallow diving but NOT scube diving. WARNINO: Always make sure the crown is fully returned to the case to ensure water resistance.

Product warranty repair and servicing

In the unlikely event of a fault arising under the terms of the warranty; return the watch to our customer loyalty team where it will be directed to our team of specialists.

Posting address:-Return your watch directly to-

Peers Hardy UK Ltd, Precision House, Starley Way, Birmingham International Business Park, Birmingham, 837 70M

0121-524-1400 customerservice@peershardy.co.uk Please pack the watch carefully and include with your watch the completed guarantee form and enclose proof of purchase clearly stating the nature of the fault with your name and full address.

Name:

Address:

Postcode: Model: Telephone: E-mail:

Please allow up to 28 Days for repair completion.