# Bottom-Load Water Cooler Troubleshoot Guide - PUMP







#### **CHECK BOTTLE PROBE,**

Make sure the probe is secured onto the bottle. If loose it may just need to be secured to work.





#### **LOCATE COOLER PUMP**

The water pump can be found inside the cabinet in the upper right hand corner.








## CHECK PUMP CONNECTIONS

Ensure the fittings are pushed in all the way to allow an airtight seal. Pump will no longer be functional if the fittings are loose.

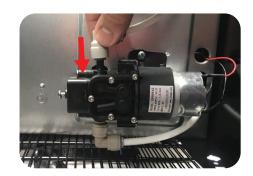



### **SECURE FITTINGS**

Simply push in loose fitting to tighten the seal. Once tightened, water should start pumping back into the reservoir.



Unplug the power cord and then contact your representative from whom you purchased the dispenser.