

CARL FRIEDRIK

Smart Holder

The Smart Holder attaches under the two vertical straps on the backside of the Palissy product.

A small area about halfway up is left unstitched to slide the Smart Holder in.

You can remove the Smart Holder and store it for your next trip when not travelling.



