


BYRON ENTERTAINMENT UNIT ASSEMBLY INSTRUCTIONS

PARTS LIST			
No.	HARDWARE		Qty.
Α	JCBC M6 X 70MM		4
В	MINIFIX		12
С	SPRING WASHER M6		4
D	FLAT WASHER M6		4
E	PANHEAD M3.5 X 16MM		25
F	DOWELL M8 X 30	Û	12
G	ALLEN KEY M4		1

PARTS LIST			
No.	PART LIST FOR FRAME	Qty.	
1	TOP PANEL	1	
2	BOTTOM PANEL	1	
3	SIDE PANEL	2	
4	MIDDLE PANEL	1	
5	LEGS	4	
6	BACK PANEL	1	

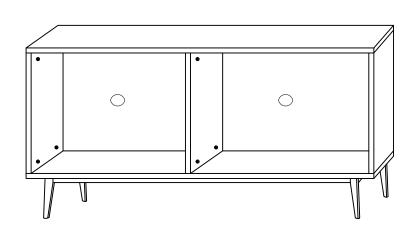

Assembly Tips:


Remove hardware from box and sort by the size parts and hardware for frame and drawers to check that all hardware and parts are present before assembling. Follow instructions below in proper sequence to ensure fast, easy and correct assembly.

Recomended for assembley:







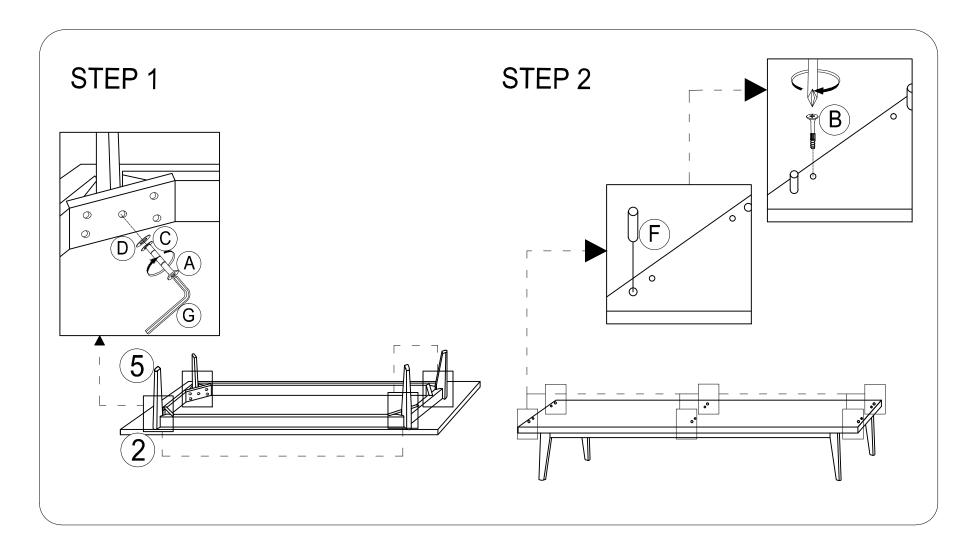

STEP 3 STEP 4 $\left[\mathbf{B}\right]$ STEP 5 **(6)** 0 \bigcirc COMPLETED ASSEMBLY X25