


Plug in all cords in order as pictured above:  
Cord A goes from a standard outlet to the black end of Cord B.  
The silver end of Cord B connects to the corresponding end of  
Cord C. The other end of Cord C plugs directly into the 100WB  
(labelled as D).



To turn the light on and/or increase brightness, turn the knob circled in green clockwise.

To turn the light off and/or decrease brightness, turn the knob circled in green counterclockwise.



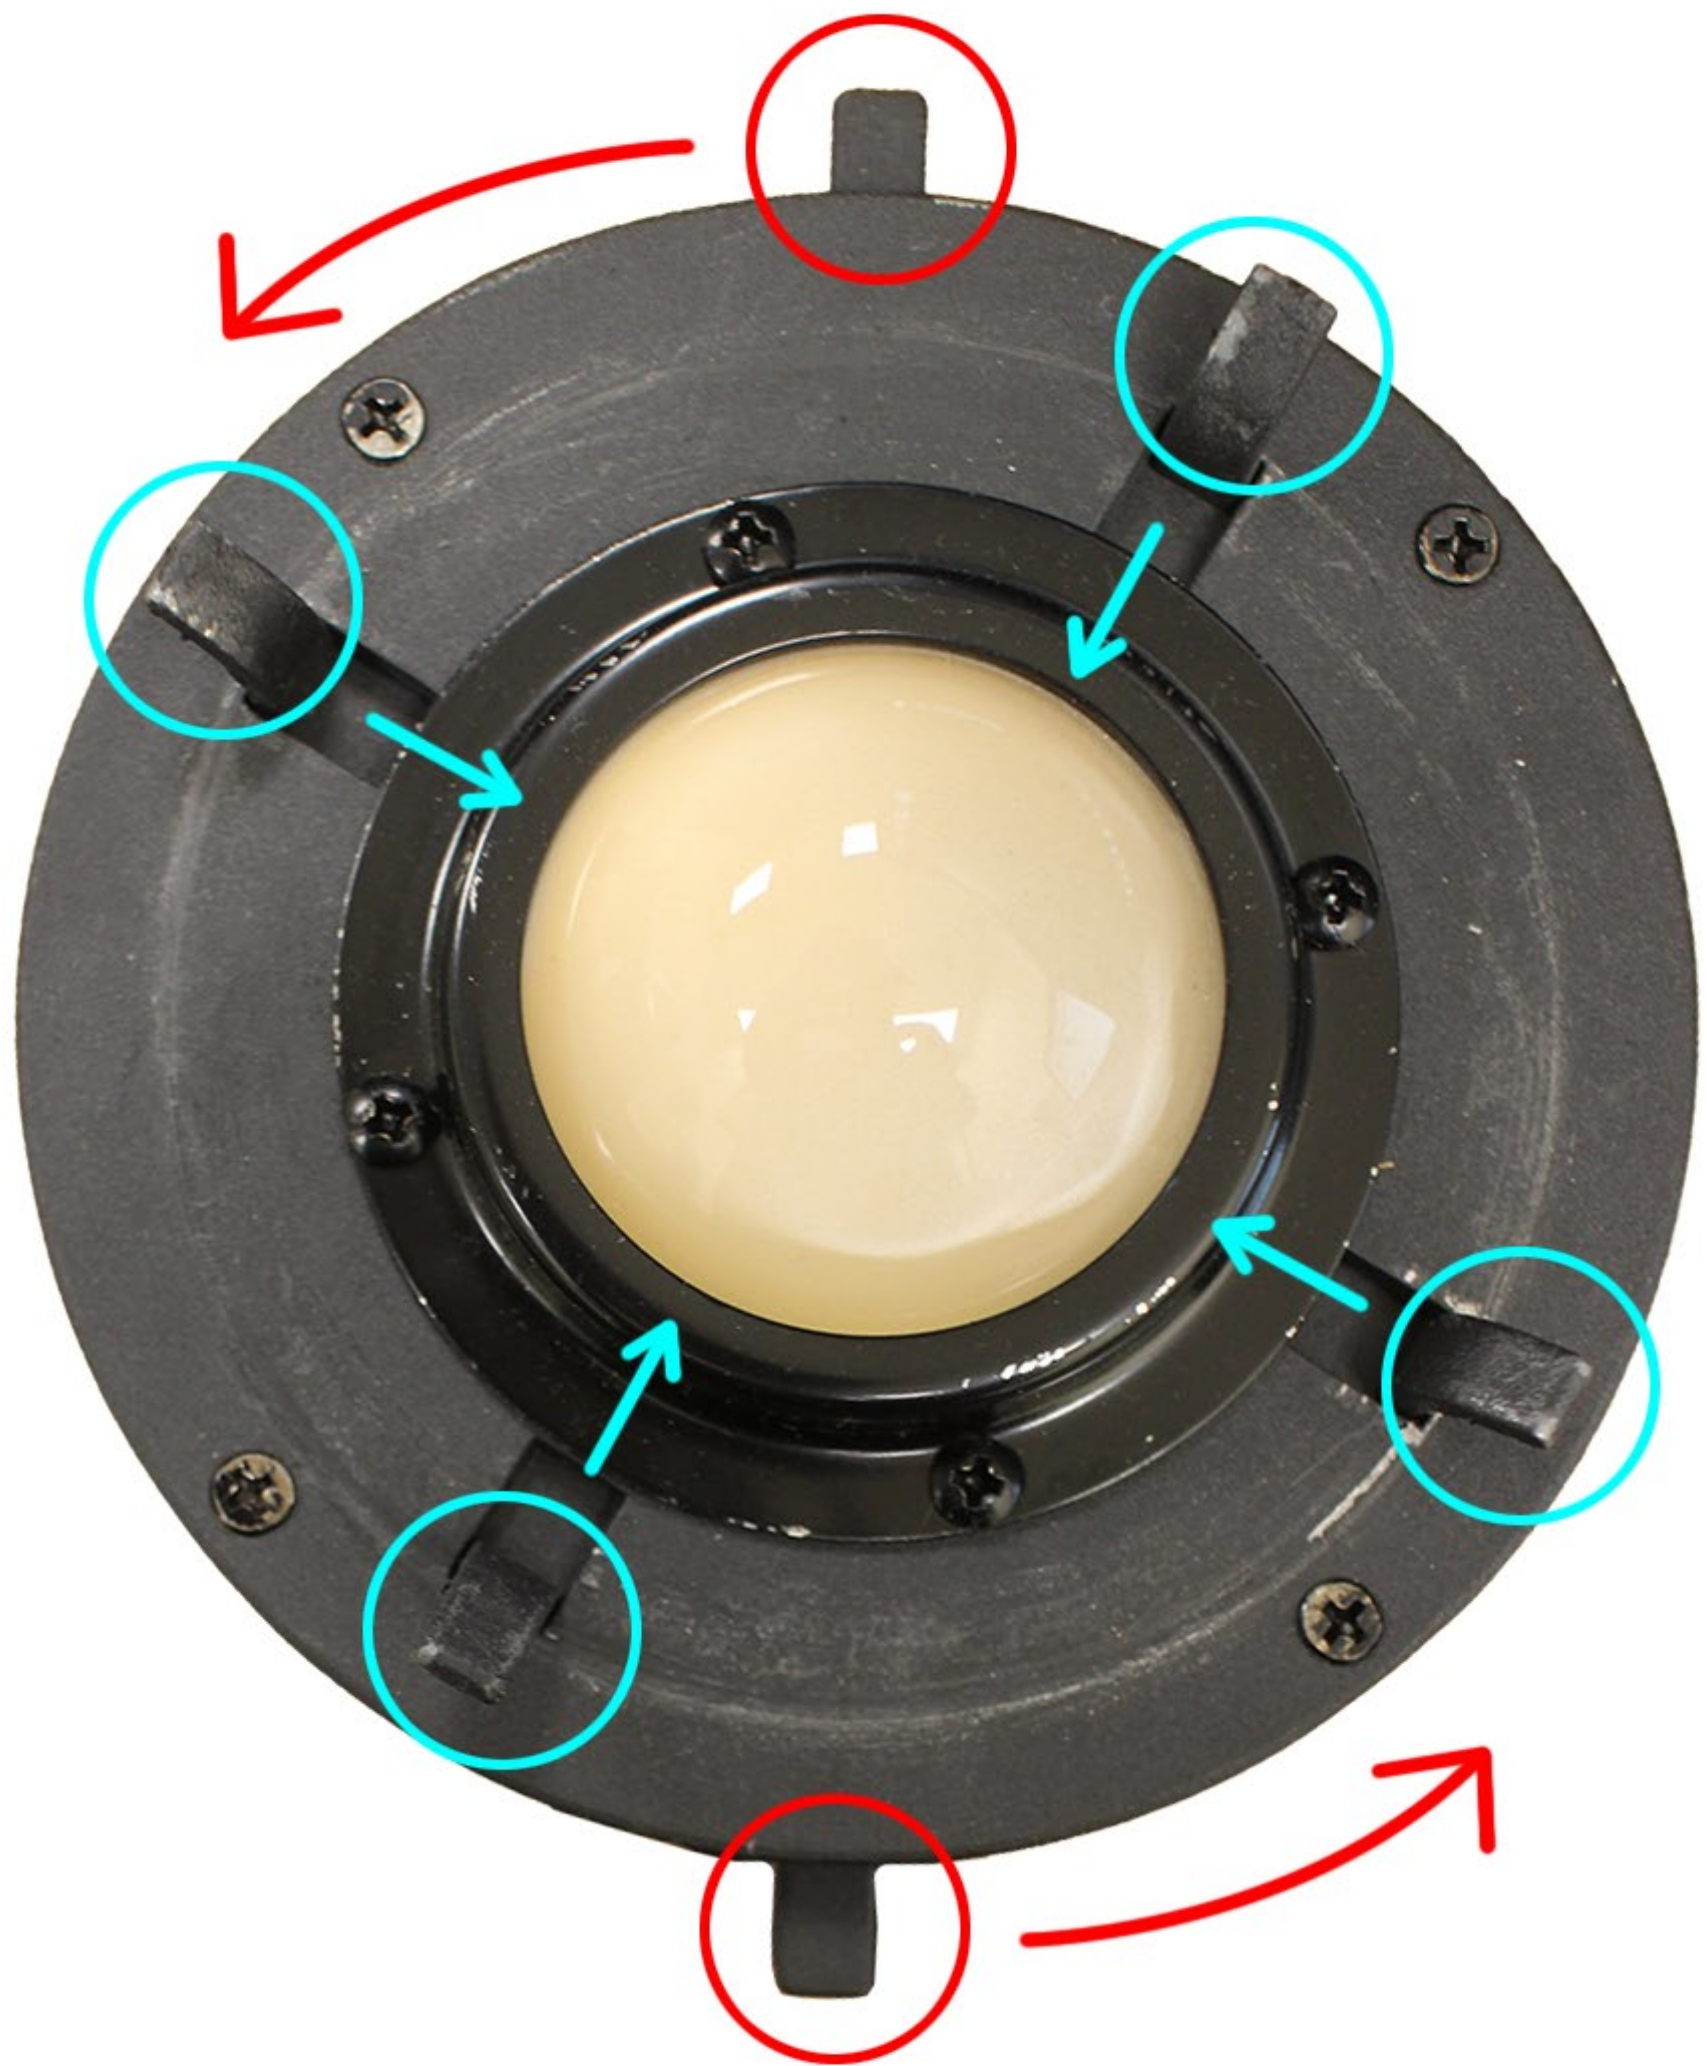

To connect Balcar-mount-compatible light modifiers, move one of the tabs circled in red in the direction of the red arrows. The tabs circled in cyan will move towards the center of the light, allowing you to add the modifier. Release the tab circled in red to lock the modifier onto the light.





To connect an umbrella to the light, loosen the knob circled in magenta. Slot the center rod of the umbrella in the same position as the yellow line above and tighten the knob circled in magenta.



Button A toggles the light on and off.  
Button B controls the light's intensity.  
Button C has no function.  
Button D is used for pairing lights to remote.

- 1) To reprogram/re-pair the remote to the 100WB, press the "A" and "D" button simultaneously.
- 2) Turn on the light that you want the remote to operate.
- 3) The remote is now paired to the light.