



Nikon to Canon EOS


for Nikon F and Nikon G adapters

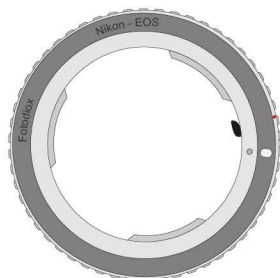


Nikon F - Canon EOS Consumer

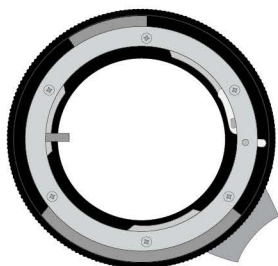

Nikon G - Canon EOS Consumer

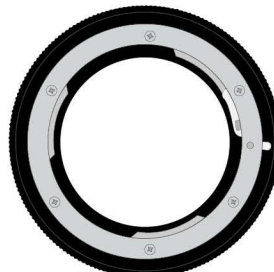



Nikon F - Canon EOS Pro

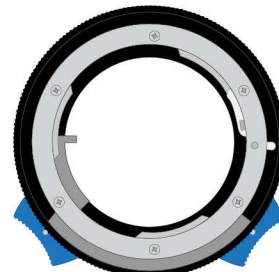

Nikon G - Canon EOS Pro


INSTALLING: FOR ALL NIKON ADAPTERS INCLUDING NIKON G

- 1 Before you mount the adapter on your lens, make sure the locking pin retracts in and out by pressing the lens release button repeatedly.
Note: Do this before each use!
- 2 To install the adapter on your lens, match the red dot on the adapter with the marking on your lens and turn adapter counterclockwise to lock it; you should hear it click.
- 3 Install the lens with the adapter on your camera by matching the adapter's red dot (camera side) with the marking on the camera. Turn until it locks.

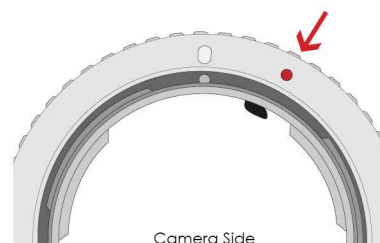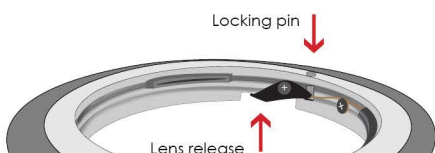


UNINSTALLING: FOR ALL NIKON ADAPTERS INCLUDING NIKON G

- 1 Remove the lens from the camera by pressing and holding the camera's lens release button and turning counterclockwise.
- 2 To remove adapter from the lens; press and hold the adapter's lens release tab and turn clockwise.

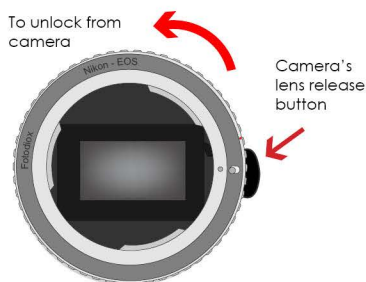

*Lens not illustrated

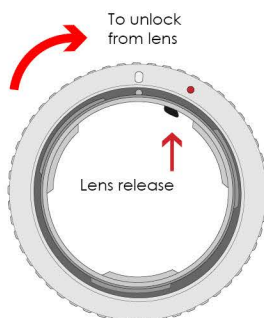

*Lens not illustrated


All Nikon adapters install the same way including consumer and pro versions.

Always make sure your adapter is securely locked onto both camera and lens before use.


Continue to the next page for Nikon G adapter users.

ADJUSTING LENS FIT: FOR CONSUMER ADAPTERS ONLY INCLUDING NIKON G

- 1 Consumer adapters may feel tight or loose on the lens side, to adjust, locate the three metal flanges along the inner edge.

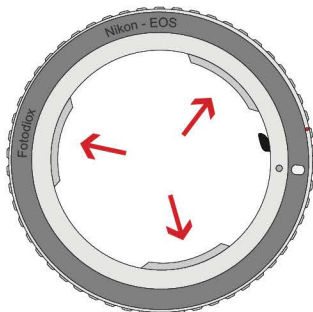


- 2 If adapter fits too tight, lightly press the metal flanges together to decrease the stress between lens and adapter; adjust accordingly.

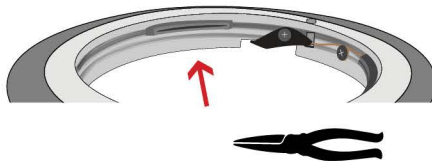

A flat flange loosens the adapter




- 3 If adapter fits loose, insert a small flat screw driver and widen the flange little by little. Repeat step 2 if necessary.

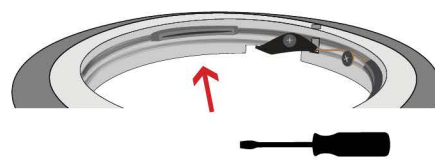

A wide flange creates a tighter fit



APERTURE CONTROL: FOR NIKON G ADAPTERS (CONSUMER AND PRO VERSION)

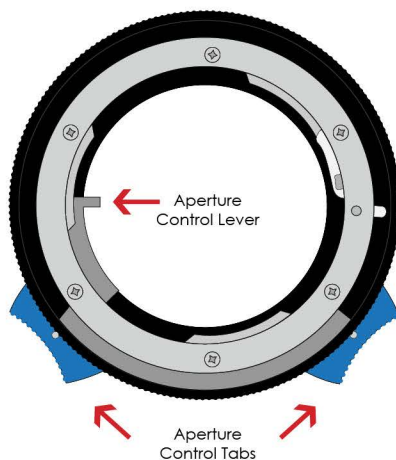

- 1 Move the adapter tabs along the edge and see how the aperture opens and closes (digital lenses).

- 2 To use specific set f-values, (manual lenses only) set the desired aperture value on the lens.

Example: f-8

- 3 When you close the aperture using the adapter tabs, the aperture will stop at the previously set value on your manual lens. Example: f-8

