

QUICKPLAY

KICKSTER COMBO



INSTRUCTIONS

The Kickster Combo goal is a portable product and has been designed to be put up and taken down quickly and easily. It should not be left up after use. To ensure maximum product lifespan of your Kickster Combo goal please ensure to pack it away and store the product in a dry place.

WARNINGS:

Please read this page carefully to get the best from your new goal.

1. Must be assembled by an adult.
2. This product is not suitable for children under 3 years of age.
3. Only use on a flat surface.
4. Check the product is fully assembled before use.
5. Check the frame is secured to the ground before use.
6. Disassemble after use. Do not leave outdoors in adverse weather conditions.
7. If Combo goal gets wet after use, ensure that it is properly dried before storage.
8. Do not climb on the Skill set.
9. Regularly check the goal for wear and tear. Stop using if any part of it breaks. Failure to do this may result in injury.
10. Keep away from heat sources. Do not leave in a hot vehicle.
11. Not suitable for use in high winds.

PARTS WARRANTY:

This product must be disassembled after use and stored in a cool, dry place or the warranty is invalidated. Register your warranty within 15 days of purchase visit: Warranty.QuickPlaySport.com or scan this code:




SETTING UP YOUR REBOUNDER


- 1 STEP A: CONNECT PRE-ATTACHED BASE FRAME
STEP B: CONNECT PRE-ATTACHED FRONT FRAME.
ONCE YOU HAVE COMPLETED STEP A AND B, CONNECT THE FRONT FRAME TO BASE FRAME.



- 2 STEP C: CONNECT STEEL UPRIGHT TO THE CORNER JOINTS
STEP D: CONNECT LARGE UPRIGHT TO THE STEEL UPRIGHT
IF YOU ARE CHANGING FROM GOAL TO REBOUNDER, YOU MUST REMOVE THE MINI UPRIGHT.

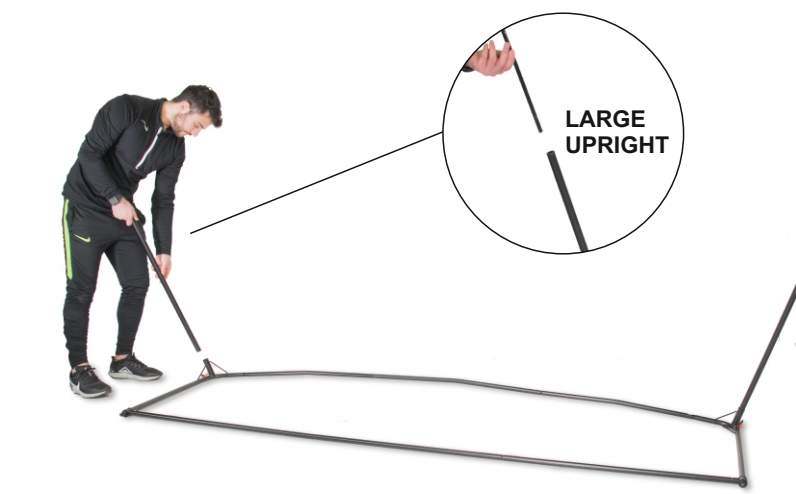


- 3 STEP E: ATTACH NET LOOP TO TOP OF UPRIGHT
STEP F: ATTACH NET TO BASE FRAME HOOK

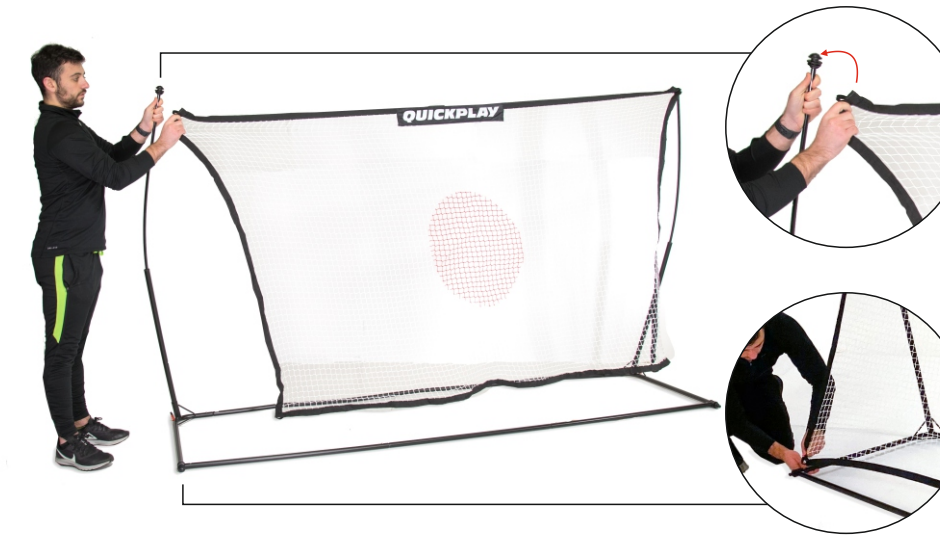


- 4 STEP G: ATTACH BUNGIES IN PLACES SHOWN BELOW




- 3 STEP D: ATTACH NET LOOP TO TOP OF UPRIGHT
STEP E: ATTACH NET TO BASE FRAME HOOK

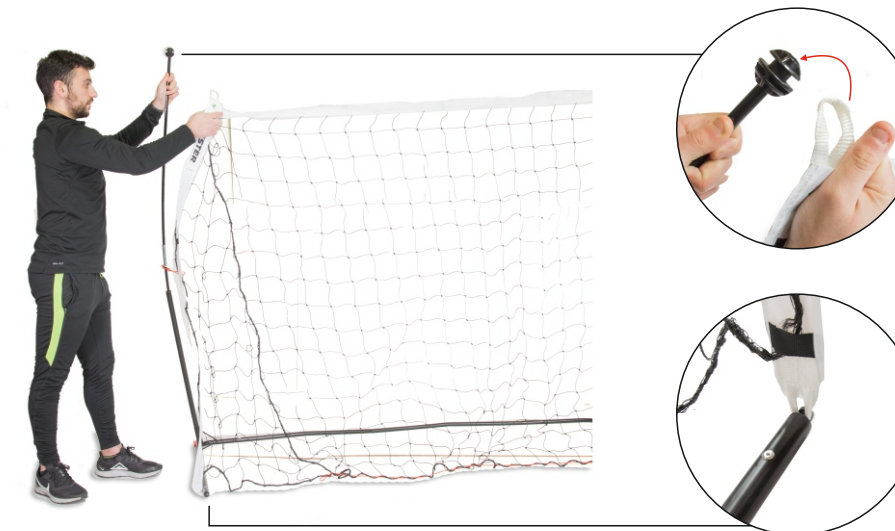

- 4 STEP F: ATTACH BUNGIES IN PLACES SHOWN BELOW

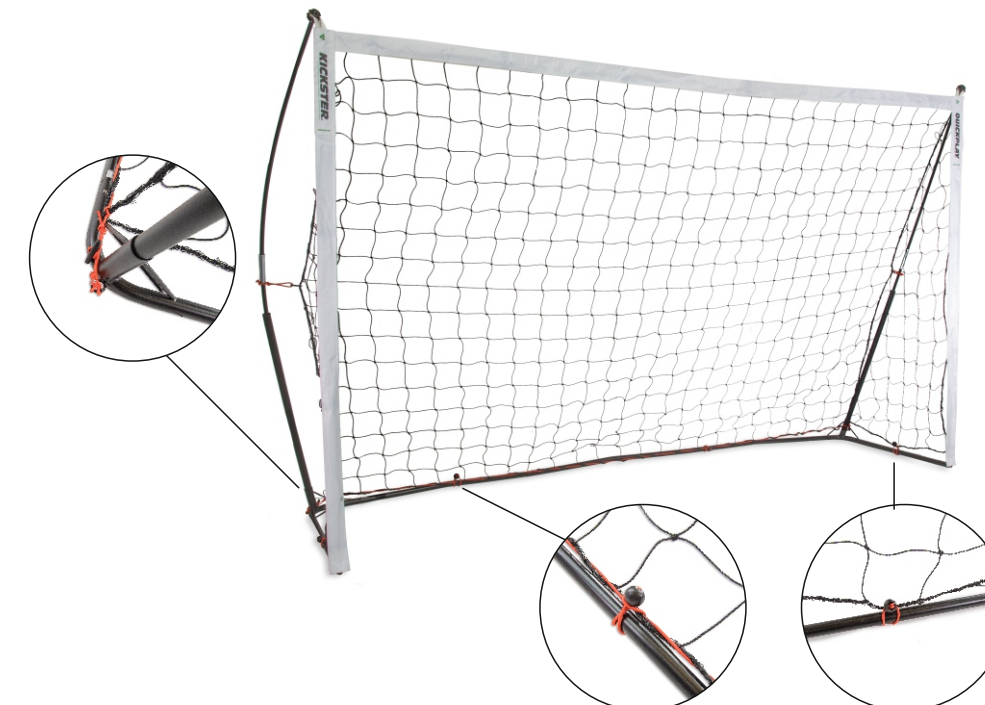

PACK CONTAINS

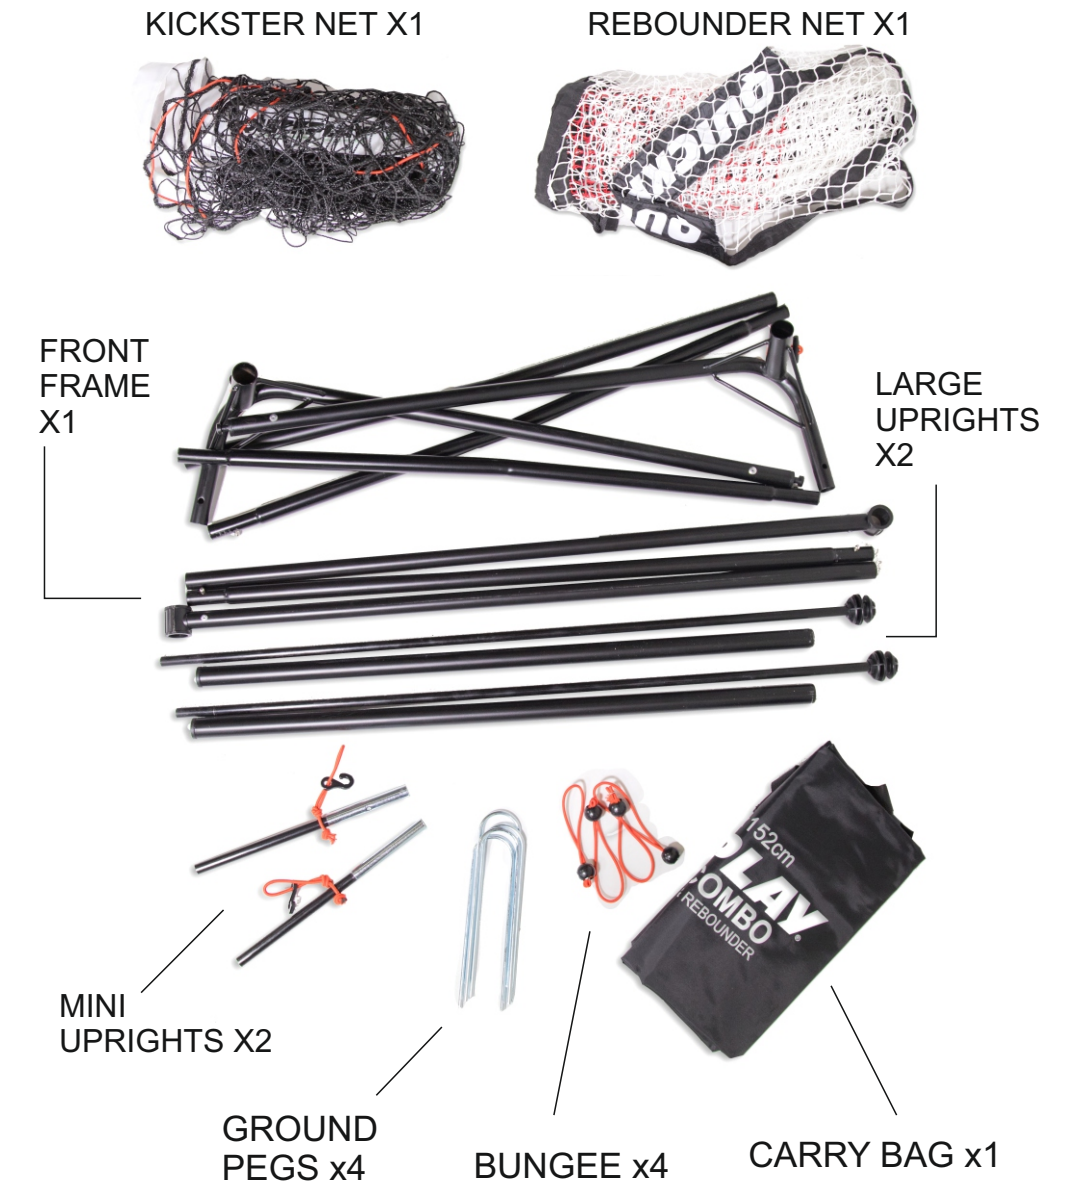

SETTING UP YOUR GOAL

- 1 STEP A: CONNECT PRE-ATTACHED BASE FRAME



- 2 STEP B: CONNECT STEEL UPRIGHT TO THE CORNER JOINTS
STEP C: FIRST CONNECT MINI UPRIGHT AND THEN CONNECT LARGE UPRIGHT



THANK YOU!

For choosing the QuickPlay Kickster Combo Goal. We hope you enjoy and get years of use out of this product.

If you have any issues, please do not return it to the store. Instead contact us directly:

info@quickplaysport.com

We promise to resolve it or your money back.

At Quick Play Sport we think sport is all about taking part. We develop innovative products that help athletes and coaches at all levels of sport, perform to the best of their ability. If you have any queries or suggestions about how we can improve our products, we'd love to hear them. Please feel free to get in touch.

info@quickplaysport.com