

osmo

 
ROBOVAC USER MANUAL




Robot Vacuum Cleaner APP Operation Guide

Scan the QRcode to download




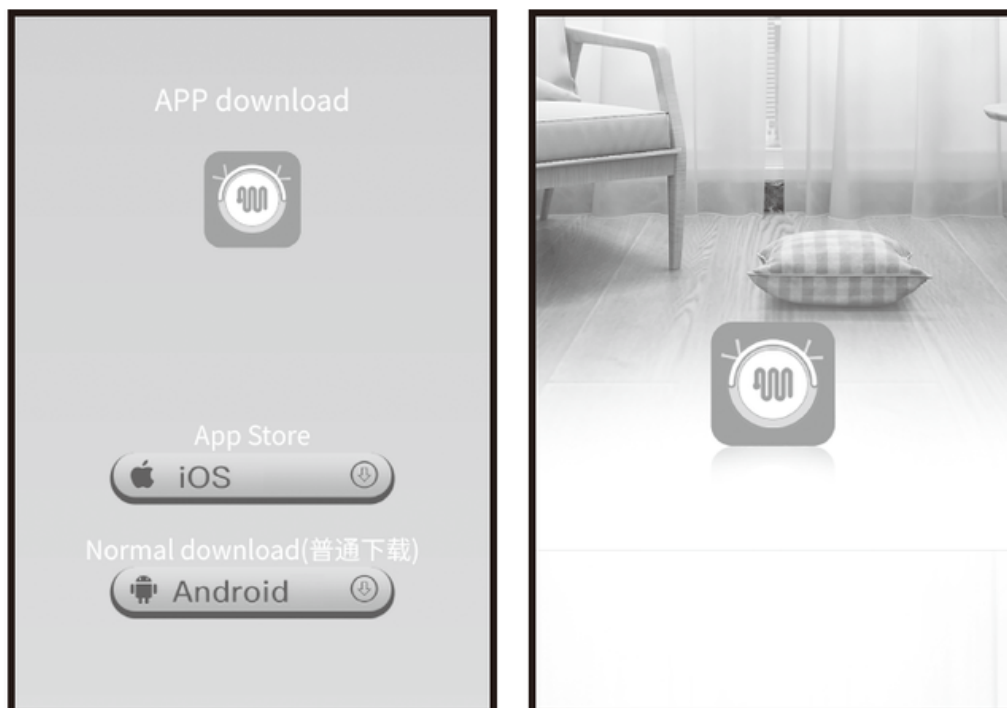

 1. Scan the QR code with your mobile phone to download the corresponding version of the APP.
2. Turn on Bluetooth and open the APP
3. Turn on the switch at the bottom of the sweeper, the indicator light will flash

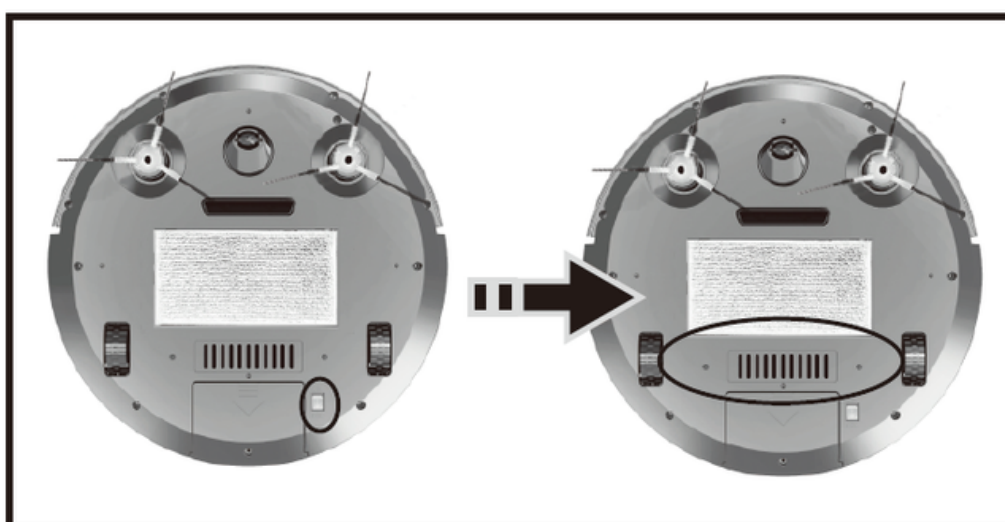


 4. Enter the Interface and Click Settings in the upper left corner.

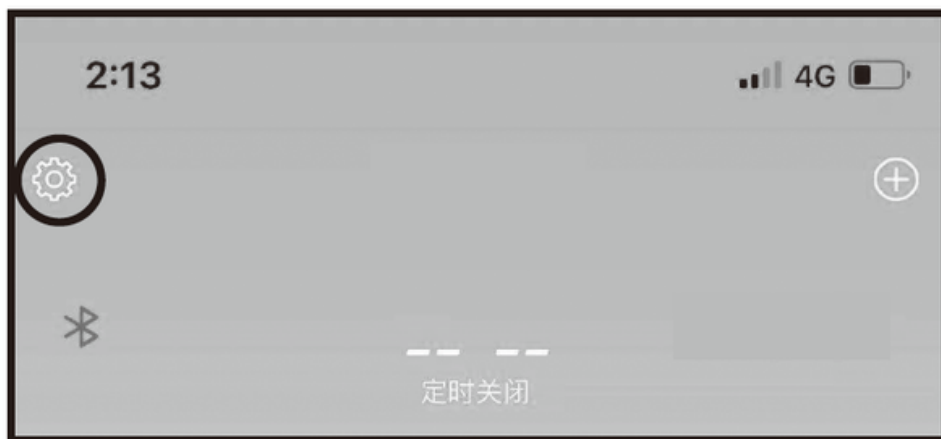

5. Enter Setting. find and click language.

 6. Language switching can be selected according to the needs

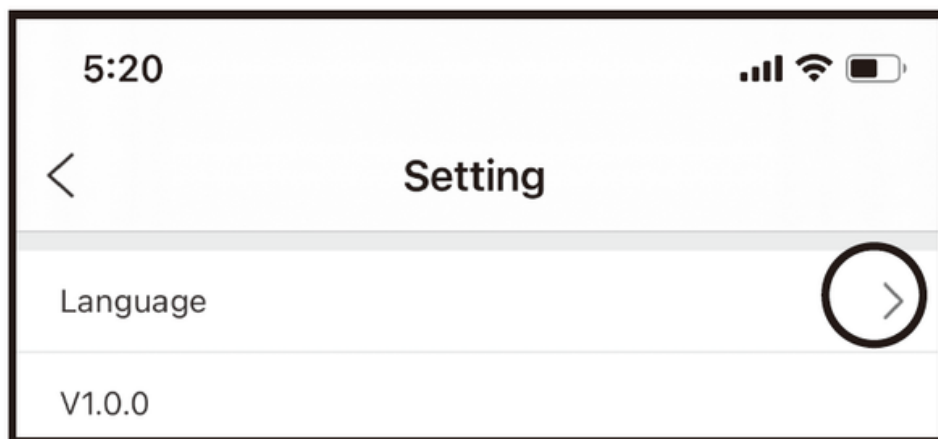

7. Enter the Interface and click on the upper right corner to add the device.

8. Try to move the mobile phone to the sweeper as closed as possible., click search.

9. Find the sweeper Icon and connect the device.

10. Enter the control interface, then you can manually control the sweeping Robot

Precautions to take:

Before using the smart sweeper, please observe the following basic safety precautions:

1. Carefully read and properly keep all contents of this operation manual, and follow this operation manual operate the product according to the instructions in.
2. Do not touch the power plug or the machine with wet hands or cotton cloth.
3. No one is allowed to disassemble, repair or modify the product except the maintenance technicians designated by the company. Otherwise, it may cause fire, electric shock or personal injury.
4. It is forbidden to use wires and wires above 150mm on the ground to prevent the brush from getting stuck.
5. In order to prolong the service life of the battery, it needs to be charged for 5-6 hours after first use or reuse after long term non use Hours. The best effect can be achieved only after the battery has 2-3 complete charge and discharge cycles. If you do not use the intelligent sweeper for a long time, please fully charge the battery, then remove the battery and put it in a cool place.

The following conditions are prohibited and cannot be used for absorption:

- Unburned soot, burning cigarette ends or matches (may cause fire)
Water or other liquids (internal humidity or water ingress may cause short circuit of the machine).
- When using and storing the machine, keep away from heat sources, such as ovens and fireplaces (this will cause deformation and aging of the machine shell).
- Do not wet the machine body, otherwise it may be damaged by short circuit of the machine.
- Please properly dispose of the old battery of this product. Do not discard it at will.

Precautions to take:

About the scope of use of the machine: Cannot be used to clean the following floors:

- Surfaces with accumulated water (including flammable liquids), such as wet floors and humid environments.
- Places with open stoves and open flames.
- Stairs

Product Parameters

Working Time: 60-90 minutes

Rated Work Rate: 15W

Voltage: 7.4V

Electric Current: 1.8A

Battery Capacity: 2000mAh

Charging Time: About 5 hours

Noise: About 55dB

Size: 30x30x4.5cm

Scope of Application:



 
Ceramic Tile





Marble Floor



Wooden Floor

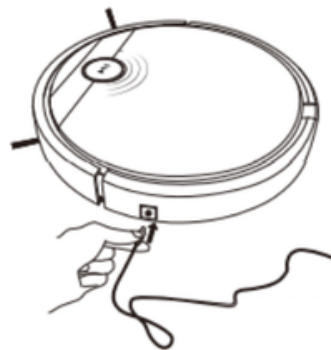


Charging: Connect the power adapter

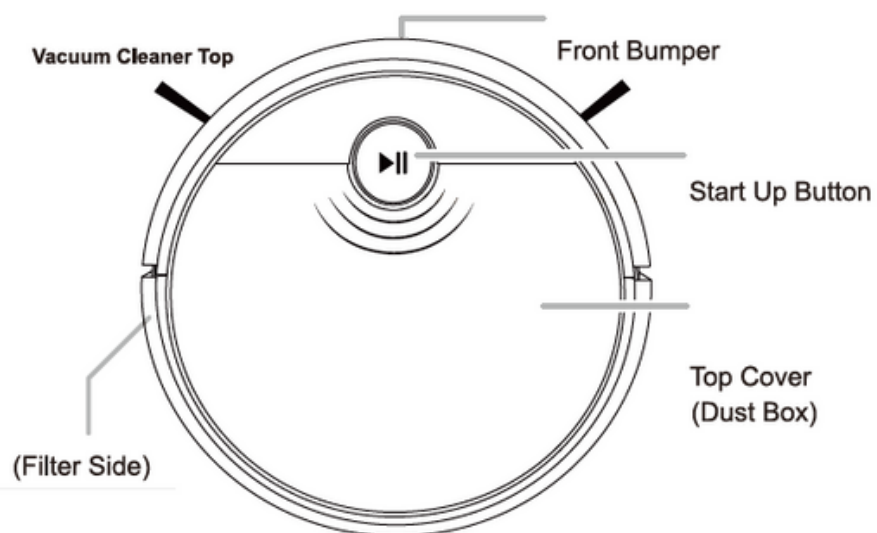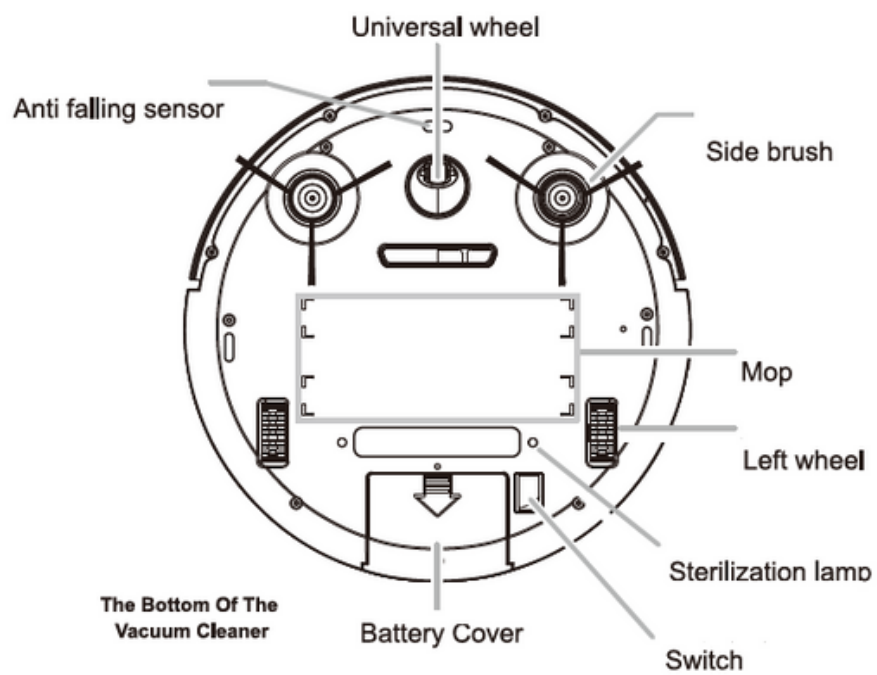  


Product Accessories

 
RoboVac or Intelligent floor sweeper is a high-tech intelligent automatic vacuum cleaner. You can clean the room even if you are not at home, so as to create a healthy and comfortable home environment for you!

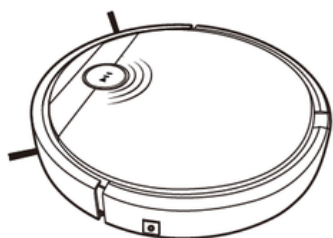

Host Computer

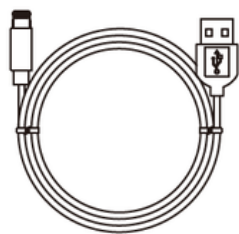 


Charging Cable

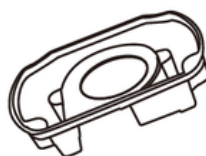 


Dust Box
(Installed in the box)



 Water Tank
(Special mop for the
water tank)

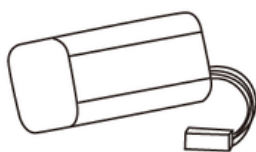

 Rechargeable
Battery Pack
(Installed in the host)

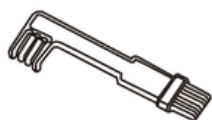

Cleaning Brush



Manual Guide



Side Sweep
Brushing



 
Mop

Note: If the product design changes, please refer to the actual product.

Operation guide

1. Turn on

- Turn on the power switch at the bottom of the machine (as shown in the figure)
- The indicator light on the front of the host is on (blue), indicating that it has been turned on and the machine is in standby mode.

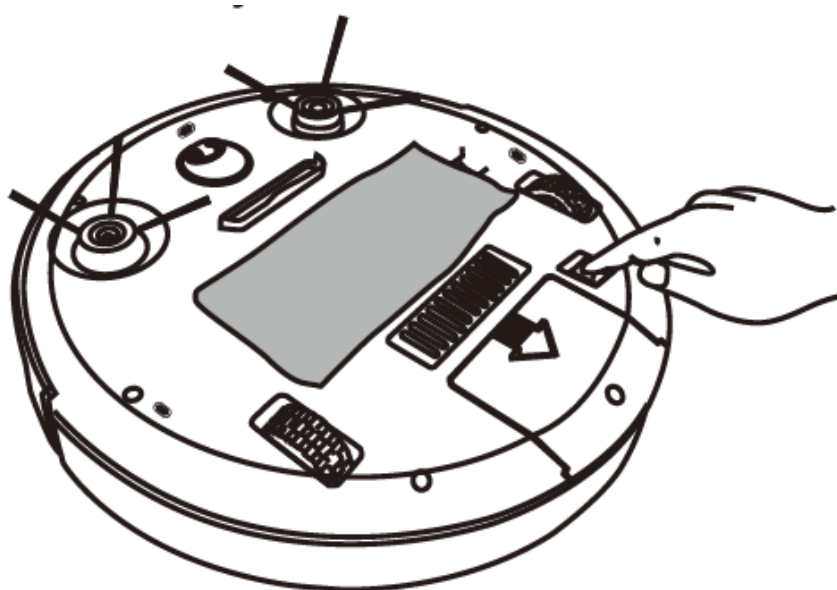

2. The cleaning route display map:



Startup default free cleaning



“Bow” cleaning mode



Fixed point surround expansion cleaning mode



Yanbian cleaning mode



Mopping mode

Instructions for use


How to use the host:

1. Turn the power switch of the host to "no", turn on the power switch, and the indicator light will always be blue. If the battery is too low, it will automatically stop working. At this time, the intelligent sweeper sounds an alarm.
2. Press the auto switch button on the machine or start it with app, and the automatic cleaning button will enter the automatic cleaning mode. The program will automatically clean according to the planned path of the system.
3. Each time you press the Auto button, switch different cleaning modes (free cleaning, bow cleaning, fixed-point cleaning, edge extension cleaning and floor dragging mode) in turn. Press and hold to enter standby mode


Cleaning and maintenance

Installation and unloading of dust box and fan assembly (must turn off the power of the host first):


- 1 Open the top cover of the main unit with your hands upwards.

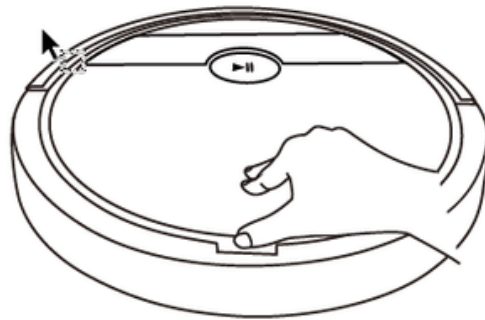

2. Take out the dust box

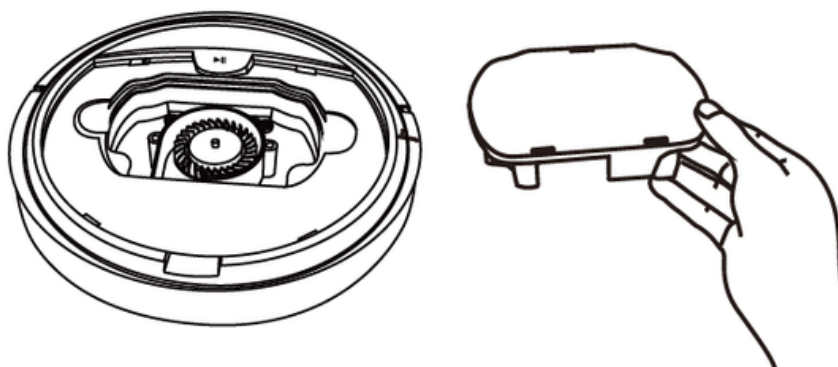


3. Open the dust box cover and take out the filter


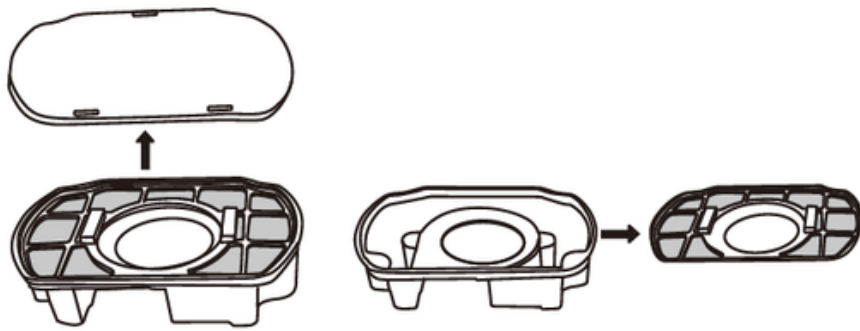


Cleaning of dust box and fan assembly:

1 First remove the dust, then take the cleaning brush to clean it.

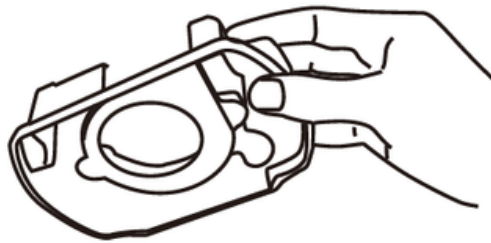

2. The filter screen can be blown clean with a hair dryer or brushed with a cleaning brush. After cleaning, it can be firmly installed in the reverse order before disassembly.

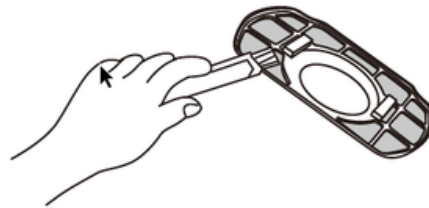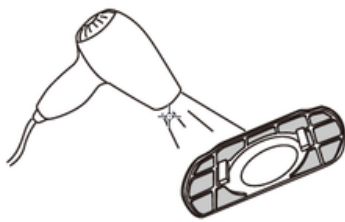


Loading and unloading of side sweeping brush:

1. Press the side sweeping brush into and out of the main shaft, and then the side sweeping brush can be installed and unloaded.

Cleaning of the brush:

1. Regularly remove the hair or large dust particles on the brush, remove the dust on the suction port, and then directly clean the paper scraps or small particles with the cleaning brush. For the involved hair or yam and other objects, please remove the front brush, cut it with scissors or pull it out by hand to improve the cleaning performance. Cleaning can be carried out according to the treatment and cleaning of the brush.
2. Cleaning of the brush: 1.

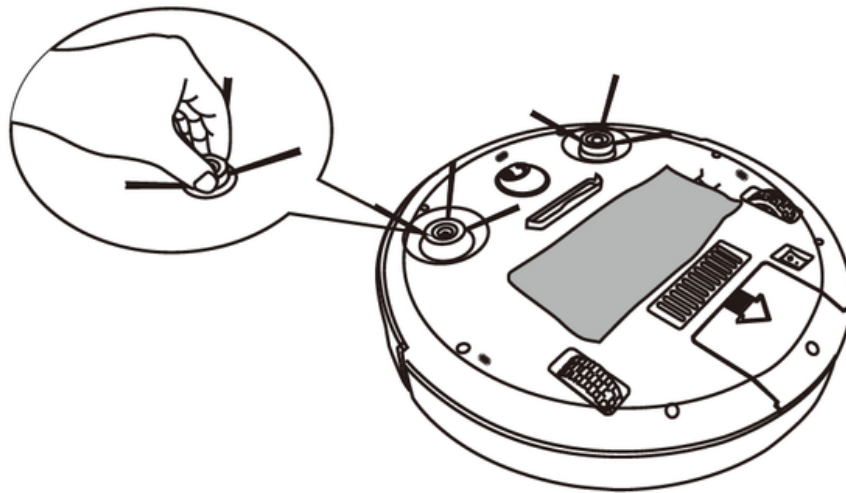

Common faults and solutions:

1. The smart sweeper cannot work or the cleaning work is weak and makes intermittent sounds.

Solution:

- Check whether the dust box, filter, suction port, etc. are clean
- Low voltage, please turn off the switch and use the USB charging cable to charge.

2. The smart sweeper cannot be charged.

Solution:

- Check whether the charging cable is properly connected to the host and whether the red light of the host is on.

3. Increased noise during cleaning.

Solution:

- Clean the dust box and filter.
- Check if the brush is too dirty

4. If the machine fails, there are the following situations:

Solution:

- The machine was entangled by wires scattered on the ground
- The machine is entangled with lower curtains or soft objects.
- There are too many obstacles in front of the machine
- If the fault still exists after cleaning according to the above steps, please contact customer service department.

How to use the water tank and matters needing attention:

How to use:

- Wet the special mop for the water tank and stick it on the bottom of the water tank.
- After filling the water tank with water, close the lid and dry the outside
- When the machine is turned off, put the machine flat in reverse, align the water tank connecting column with the two screw holes at the tail of the machine, press it tightly, turn on the main switch at the bottom of the machine, and place the machine on the horizontal ground in reverse.

4. Press the middle button on the remote control to start the sweeper, and then press the "m" button for 4 times, and the machine will "tick" for 5 times to switch to the "mopping mode". Or press "mop" directly after starting the machine with the mobile app. (other modes are not suitable for using the water tank, please do not use it illegally.)

5. Take out the water tank: after stopping the machine, press both sides of the water tank with both hands and thumbs, point to the bottom of the top machine with double food, and use vertical force to take out the water tank. Do not pull it out with one hand to avoid damaging the water tank.

Matters needing attention:

1. Please clean the water tank mop in time. If there are foreign objects at the bottom, please clean it up in time to avoid affecting the use.
2. When using the water tank to mop the floor, please do not use it with the intermediate dry mopping cloth at the same time to avoid excessive load on the machine.

Optional water tank:

