


# AUTOMATIC COOKING MODES

Automatic Cooking Modes:	TIME	TEMP	SPEED
P01 - Regular Chunky	Default = 40 mins Adjustable from 1 - 60 mins	Default = 100C (212F) Not Adjustable	Default = Speed Level 1 Adjustable speed levels 1 - 3 <small>*Spins forward 30 seconds then reverse 30 seconds</small>
P02 - Light Blend	Default = 40 mins Adjustable from 1 - 60 mins	Default = 100C (212F) Not Adjustable	Default = Speed Level 2 Adjustable speed levels 1 - 4
P03 - Medium Blend	Default = 40 mins Adjustable from 1 - 60 mins	Default = 100C (212F) Not Adjustable	Default = Speed Level 3 Adjustable speed levels 1 - 4
P04 - Fine Blend	Default = 40 mins Adjustable from 1 - 60 mins	Default = 100C (212F) Not Adjustable	Default = Speed Level 4 Adjustable speed levels 1 - 4
P05 - Self Cleaning <small>(add 1 drop of soap &amp; 1 liter of water)</small>	Default = 3 mins Adjustable from 2 - 5 mins	Default = 55C (131F) Not Adjustable	Default = Speed Level 8 Adjustable speed levels 1-12 <small>*Motor will not start until temp reaches 55C</small>

# BUTTON FUNCTIONS

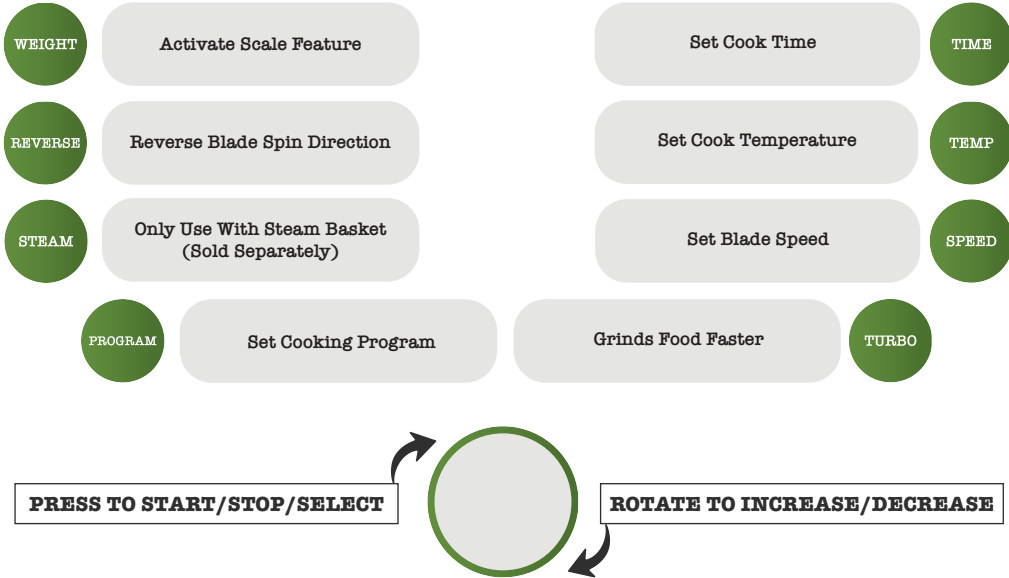

# USING THE APPLICATION

Download the ChefPaw App to get access to our nutritional calculator and recipe generator

