



Switch Tool Holder *SeaSucker*

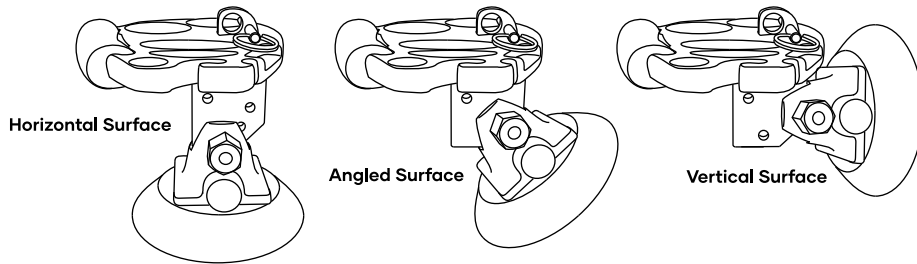


Assembling your Switch Tool Holder

The Switch Tool Holder can be set up for horizontal, vertical, or angled surfaces. When attaching the vacuum mount, line up the appropriate hole in the tool holder's spine with the nut hole in the vacuum mount's housing. Press the hex bolt through the nut hole and tool holder base, then thread the hex knob onto the bolt as it exits the bolt hole. Use the diagram to the right to determine the correct hole to push the bolt through. Tighten the hex knob by turning it clockwise until secure.

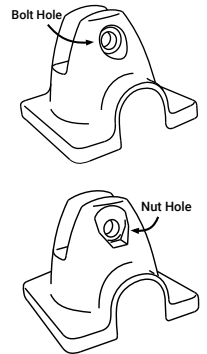

Attaching Your Switch Tool Holder

Your Switch Tool Holder attaches to a smooth, clean, unobstructed surface. It will not attach to a deck pad or highly textured surface. The vacuum mount will not attach over a seam or other surface incongruity. Do not attach over decals or on a wrapped surface.

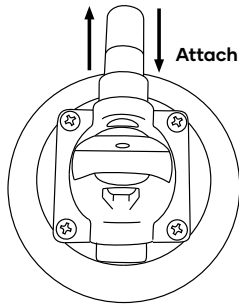


Clean the surface you're going to mount the tool holder to. Dust and dirt will affect the vacuum mount's ability to create and hold vacuum. Remove the protective cover from the vacuum mount and inspect the rubber vacuum pad for damage or dirt. Do not use a vacuum mount with any visible damage to the vacuum pad. If the vacuum pad is dirty, clean it with a mild soap and water solution and a soft cloth or sponge. It may help to moisten the bottom edge of each vacuum pad with water - do not use cleaners, lubricants or other liquids.

Press the vacuum mount against the mounting surface to make a full seal; you may need to press firmly down on the Switch Tool Holder to ensure that the vacuum pad is fully connecting with the mounting surface when pumping.

Pump the vacuum mount repeatedly until the plunger doesn't spring back and the indicator band is hidden inside the pump cylinder. If the plunger won't stay seated in the pump cylinder or continues to extend out immediately after pumping, you may need to clean the mounting surface or the vacuum pad or pump, perform basic maintenance on the vacuum pad or pump, or move to a more suitable mounting position. Do not use your Switch Tool Holder without correcting the problem!


Assembling the Optional Leader Holder

Press the bolt through the hole on the tool holder's spine (see drawing) and then through the arm and rod assembly. Thread the nut onto the end of the bolt and tighten with a 7/16 wrench and 5/32 hex key. The arm and rod assembly should be placed on the magnet side of the tool holder to prevent the leader holder from blocking the knife and pliers slots.

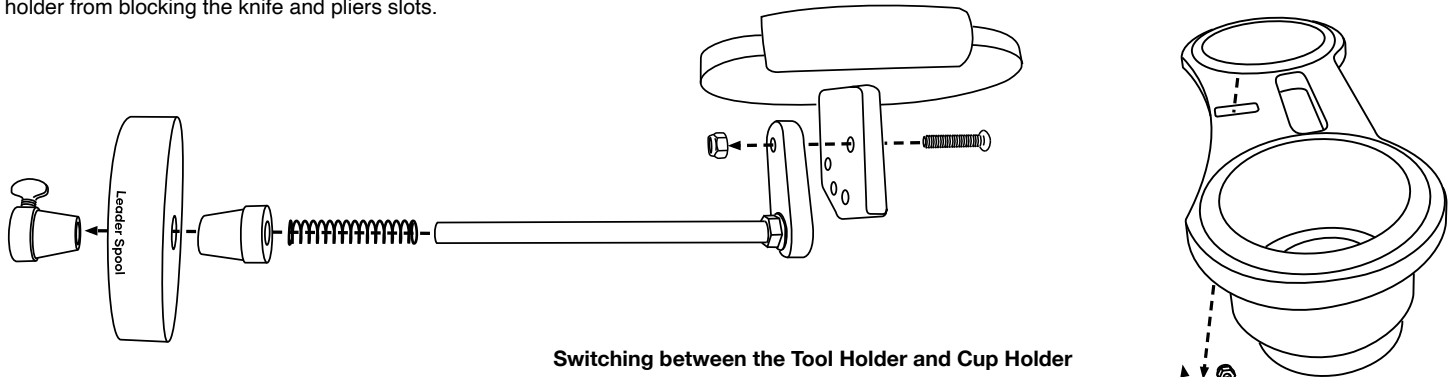



Switching between the Tool Holder and Cup Holder

Your Switch Tool Holder can be easily converted to a Switch Cup Holder by replacing the Tool Holder deck with a Cup Holder deck (sold separately). To remove the Tool Holder deck, pull the retaining pin out and lift off the deck. Replace it with the Cup Holder deck and replace the retaining pin. Attach the phone hook to the spine using the provided hardware.

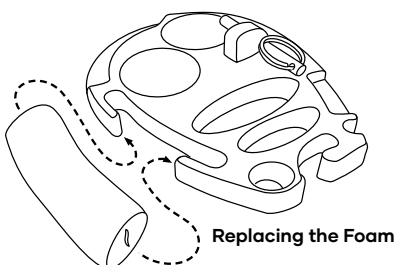

Replacing the Foam

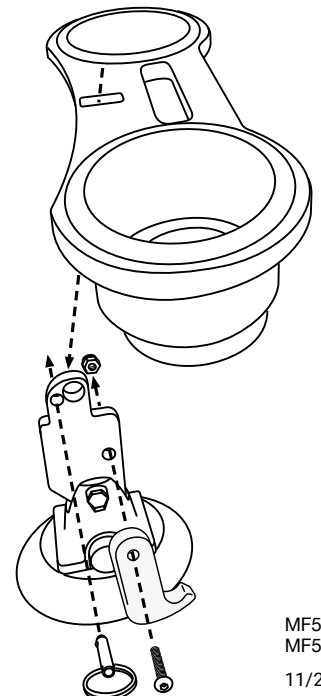

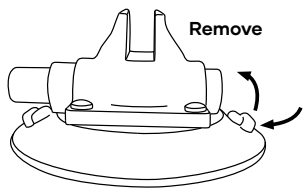


Removing Your Switch Tool Holder: Lift and Cover

With your fingertip, use one of the tabs on the vacuum pad to lift the edge of the pad up from the mounting surface and break the vacuum seal. Always put the protective cover back on when the Switch Tool Holder is not attached to protect the vacuum pad's rubber. Make sure the pad is fully seated in the protective cover before storing it. The edge of the vacuum pad could be damaged or deformed if the vacuum pad isn't fully seated in the protective cover.

Check for the Indicator Band During Use

SeaSucker vacuum mounts are not intended to be permanent fixtures - they will lose vacuum over time. When your vacuum mount loses vacuum, it will warn you by extending the pump's plunger, exposing an orange band. You are required to monitor your vacuum mounts during use. Periodically check to see if the indicator band is visible on the vacuum mount. If you see the orange band, simply pump the SeaSucker as described above.

If the indicator band appears less than four hours after being pumped to full strength, either cleaning, maintenance or repositioning may be required. Refer to the Troubleshooting Guide at the end of these instructions. If your Switch Tool Holder is mounted on a scratched surface, move it to a more suitable position. If the mounting surface or vacuum mount is dirty, clean it. If these steps don't stop the vacuum mount from losing vacuum prematurely, discontinue use until the problem is resolved. If needed, replacement parts can be purchased in the Replacement Parts section of our on-line store.

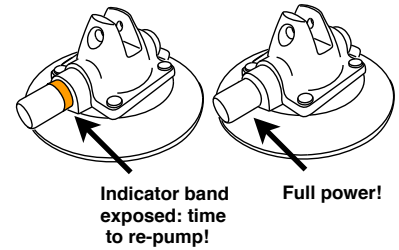

Care and Maintenance

To get the most out of your Switch Tool Holder, inspect it regularly and store it with the vacuum mount's protective cover on. Check that all screws are securely tightened, including the screws attaching the vacuum pad to the SeaSucker housing.

Clean the vacuum pad before each use with a sponge or soft cloth, mild dish soap and water. Do not use harsh solvents or abrasive cleaning pads. Inspect the sealing edge for stiffness, cracks, roughness, or cuts. A damaged vacuum pad should be replaced.

The vacuum pump should be cleaned regularly. Pull the plunger straight out of the pump cylinder. Clean the inside of the cylinder with dish soap and a soft cloth or paper towel. Dry the inside of the cylinder – water left in the cylinder may interfere with the check-valve function of the pump.

The plunger should be wiped clean and the black rubber seal at the tip of the plunger should be re-lubed with a thin layer of silicone-based gel lubricant, such as the Lube Tube. After cleaning, push the plunger back into the cylinder and pump it several times to seat it properly and distribute the lubricant.

Warranty

SeaSucker offers a lifetime, non-transferable warranty to the original purchaser covering defects in materials and workmanship. Defective products can be returned to SeaSucker for replacement or repair (at SeaSucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from SeaSucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner.

This warranty does not apply to damage or failure resulting from routine wear and tear expected in the normal use of this product, or to lack of maintenance, user error, alteration or modification of the product, accidents, misuse, abuse, or neglect.

This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty.

Purchaser's exclusive remedy under this warranty is the repair or replacement of a defective product or, at SeaSucker's option, the issuance of a refund or credit for the purchase price of the product. SeaSucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if SeaSucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law.

IMPORTANT WARNINGS

- Do not use if the indicator band is exposed on your SeaSucker's pump.
- Do not use if the vacuum mount cannot maintain a full vacuum seal for at least 4 hours.
- Clean the mounting surface before attaching.
- Clean SeaSucker vacuum mount before attaching.
- Clean and lube your SeaSucker's pump regularly.
- Inspect screws, nuts, and bolts regularly and retighten if necessary.
- Make sure the vacuum pad is fully seated in the protective cover when not in use.

TROUBLESHOOTING GUIDE

Problem	What Might Be Wrong	How To Fix It
Slow Leakage	Dry mounting surface or vacuum pad	Moisten the mounting surface or the vacuum pad
	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Dirt in pump	Clean and re-lube the plunger and pump cylinder
	Dry pump	Re-lube the plunger seal
	Dirt on vacuum pad	Clean the vacuum pad
	Dirty or uneven mounting surface	Clean the mounting surface or move to a more suitable spot
Severe Leakage	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Damaged pump	Replace the vacuum pump
	Dirty or uneven mounting surface	Clean the mounting surface or move to a more suitable spot
Jammed or Sluggish Pump	Dry pump	Re-lube the plunger seal
	Obstructed valve stem	Remove the obstruction; clean and re-lube the pump
	Dirt in pump	Clean and re-lube the plunger and pump cylinder

Designed and manufactured by:

SeaSucker, LLC * Bradenton, Florida, USA * www.SeaSucker.com