

Care and Maintenance

To get the most out of your SeaSucker product, inspect it regularly and store it with the vacuum mount's protective cover on. Check that all screws, bolts, and nuts are securely tightened.

Clean the vacuum pads before each use with a sponge or soft cloth, mild dish soap and water. Do not use harsh solvents or abrasive cleaning pads. Inspect the sealing edge for stiffness, cracks, roughness, or cuts. A damaged vacuum pad should be replaced.

The vacuum pump should be cleaned regularly. Pull the plunger straight out of the pump cylinder. Clean the inside of the cylinder with dish soap and a soft cloth or paper towel. Dry the inside of the cylinder – water left in the cylinder may interfere with the check-valve function of the pump. Wipe the plunger clean. Apply a thin layer of silicone-based gel lubricant, such as Lube Tube, to the black rubber seal at the tip of the plunger. Push the plunger back into the cylinder and pump it several times to seat it properly and distribute the lubricant.

One replacement SeaSucker vacuum pump comes with your product. Additional tubes of Lube Tube, pumps, and vacuum pads can be found on-line in the Replacement Parts section at www.seasucker.com.

**The Lube Tube supplied with your rack is for vacuum pump maintenance only -
DO NOT apply lube to the vacuum pad.**

Warranty

SeaSucker offers a lifetime, non-transferable warranty to the original purchaser covering defects in materials and workmanship. Defective products can be returned to SeaSucker for replacement or repair (at SeaSucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from SeaSucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner.

This warranty does not apply to damage or failure resulting from routine wear and tear expected in the normal use of this product, or to lack of maintenance, user error, alteration or modification of the product, accidents, misuse, abuse, or neglect.

This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty.

Purchaser's exclusive remedy under this warranty is the repair or replacement of a defective product or, at SeaSucker's option, the issuance of a refund or credit for the purchase price of the product. SeaSucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if SeaSucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law.

TROUBLESHOOTING GUIDE

Problem	What Might Be Wrong	How To Fix It
Slow Leakage	Dirt on vacuum pad	Clean the vacuum pad
	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Dirt in pump	Clean and re-lube the plunger and pump cylinder
	Dry pump	Re-lube the plunger seal
	Dirty or uneven mounting surface	Clean the mounting surface or move to a new spot
	Dry mounting surface or vacuum pad	Moisten the mounting surface or the vacuum pad
Severe Leakage	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Damaged pump	Replace the vacuum pump
	Dirty or uneven mounting surface	Clean the mounting surface or move to a new spot
Jammed or Sluggish Pump	Dry pump	Re-lube the plunger seal
	Obstructed valve stem	Remove the obstruction; clean and re-lube the pump
	Dirt in pump	Clean and re-lube the plunger and pump cylinder

PRO SERIES Rod Holders

MF5081 (Single Rod Holder)
MF5082 (2-Rod Holder)
MF5083 (3-Rod Holder)
4/20




Designed and manufactured by:

SeaSucker, LLC
Bradenton, Florida

www.SeaSucker.com





To Attach Your Rod Holder: Make sure the mounting surface is clean and clear of any obstructions. The mounting surface should be non-porous; smoother and flatter is better. Press firmly against the rod holder so the vacuum pad is making a seal against the mounting surface. Pump the plunger until the orange indicator band is no longer visible.

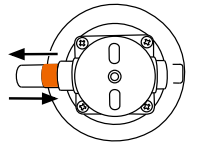

To Remove Your Rod Holder: With your fingertip, use one of the tabs on top of the SeaSucker's vacuum pad to lift the edge of the pad and break the vacuum.

Using Your Rod Holder: These rod holders are for storage and transport only. Insert rod butt into rod holder. For rod with longer butts, gimbal pin at the bottom of the holder can be removed and stored in one of the holes on the collar.

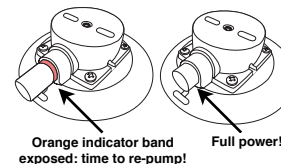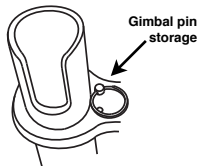

Check the Indicator Band During Use:

Monitor your rod holder during use. If you see the orange band on the plunger, pump as described above. If the orange band appears less than two hours after being pumped to full strength, maintenance may be required.

TROUBLESHOOTING GUIDE

Problem	What Might Be Wrong	How To Fix It
Slow Leakage	Dirt on vacuum pad	Clean the vacuum pad
	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Dirt in pump	Clean and re-lube the plunger and pump cylinder
	Dry pump	Re-lube the plunger seal
Severe Leakage	Dirt or uneven mounting surface	Clean the mounting surface or move to a new spot
	Dry mounting surface or vacuum pad	Moisten the mounting surface or the vacuum pad
	Nicks or cuts on vacuum pad	Replace the vacuum pad
	Damaged pump	Replace the vacuum pump
Jammed or Sluggish Pump	Dirt or uneven mounting surface	Clean the mounting surface or move to a new spot
	Dry pump	Re-lube the plunger seal
	Obstructed valve stem	Remove the obstruction; clean and re-lube the pump
	Dirt in pump	Clean and re-lube the plunger and pump cylinder

Seasucker offers a lifetime, non-transferable warranty to the original purchaser covering defects in materials and workmanship. Defective products can be returned to Seasucker for replacement or repair (at Seasucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from Seasucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner.

This warranty does not apply to damage or failure resulting from routine wear and tear expected in the normal use of this product, or to lack of maintenance, user error, alteration or modification of the product, accidents, misuse, abuse, or neglect.

This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty.

Purchaser's exclusive remedy under this warranty is the repair or replacement of a defective product or, at Seasucker's option, the issuance of a refund or credit for the purchase price of the product. Seasucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if Seasucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law.

Warranty

Seasucker offers a lifetime, non-transferable warranty to the original purchaser covering defects in materials and workmanship. Defective products can be returned to Seasucker for replacement or repair (at Seasucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from Seasucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner.

The Lube Tube supplied with your rack is for vacuum pump maintenance only - DO NOT apply lube to the vacuum pad.

Care and Maintenance


To get the most out of your Seasucker product, inspect it regularly and store it with the vacuum mounts' protective cover on. Check that all screws, bolts, and nuts are securely tightened.

Clean the vacuum pads before each use with a sponge or soft cloth, mild dish soap and water. Do not use harsh solvents or abrasive cleaning pads. Inspect the sealing edge for stiffness, cracks, roughness, or cuts. A damaged vacuum pad should be replaced.


The vacuum pump should be cleaned regularly. Pull the plunger straight out of the pump cylinder. Clean the inside of the cylinder with dish soap and a soft cloth or paper towel. Dry the inside of the cylinder – water left in the cylinder may interfere with the check-valve function of the pump. Wipe the plunger clean. Apply a thin layer of silicone-based gel lubricant, such as Lube Tube, to the black rubber seal at the tip of the plunger. Push the plunger back into the cylinder and pump it several times to seat it properly and distribute the lubricant.

One replacement Seasucker vacuum pump comes with your product. Additional tubes of Lube Tube, pumps, and vacuum pads can be found on-line in the Replacement Parts section at www.seasucker.com.


PRO SERIES Rod Holders

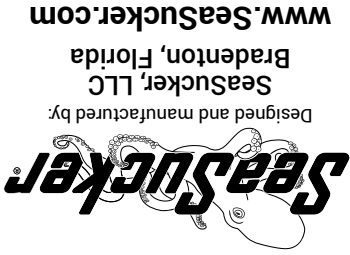

 MF5081 (Single Rod Holder)
MF5082 (2-Rod Holder)
MF5083 (3-Rod Holder)
4/20




To Remove Your Rod Holder: With your fingertip, use one of the tabs on top of the Seasucker's vacuum pad to lift the edge of the pad and break the vacuum.

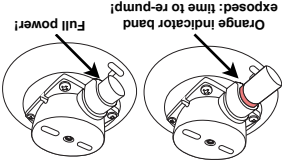

Using Your Rod Holder: These rod holders are for storage and transport only. Insert rod butt into rod holder. For rod with longer butts, gimbal pin at the bottom of the holder can be removed and stored in one of the holes on the collar.

Check the Indicator Band During Use: Monitor your rod holder during use. If you see the orange band on the plunger, pump as described above. If the orange band appears less than two hours after being pumped to full strength, maintenance may be required.

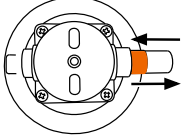

To Attach Your Rod Holder: Make sure the mounting surface is clean and clear of any obstructions. The mounting surface should be non-porous, smoother and flatter is better. Press firmly against the rod holder so the vacuum pad is making a seal against the mounting surface. Pump the plunger until the orange indicator band is no longer visible.

