

Hogg

Front Wheel Holder

- A revolutionary way to hold your front wheel when using a fork-mount bike rack.
- For use with front and rear quick-release axle only.



SeaSucker, LLC
Bradenton, Florida

Instructions

Set Up:

Replace the skewer nut on your bike's rear wheel with the threaded skewer nut included with the Hogg. Tighten and tension the rear skewer securely as you would with a standard skewer nut.


Attaching the Front Wheel:

1. Screw the Hogg onto the threaded skewer nut and hand tighten. **Note that the Hogg and skewer nut have reverse threads - turn the Hogg counter-clockwise to attach and clockwise to remove.** See Diagram 1.
2. Attach your front wheel to the Hogg by inserting the wheel's skewer nut into the Hogg cavity. Tighten the skewer as you would normally to secure the wheel to the Hogg. See Diagram 2.
3. Thread the Anti-Rotation Strap around and through both the front and rear wheels to stabilize your front wheel and to prevent it from spinning while driving. See Diagram 3.

Removing the Front Wheel:


1. Remove the Anti-Rotation Strap and store it in a safe place.
2. Unclamp your front wheel and remove it from the Hogg
3. Unscrew the Hogg from the rear skewer nut (**clockwise**) and store it in a safe place.

1

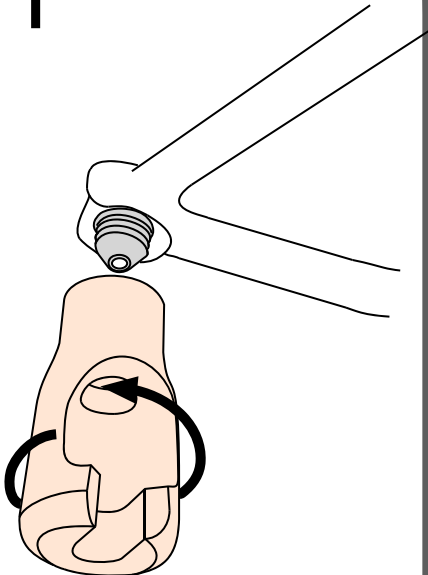


Attach

2

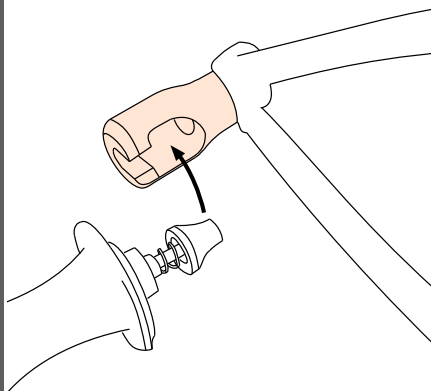

3

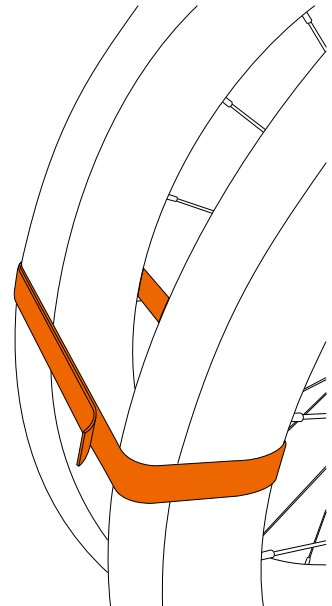 

Warranty

SeaSucker offers a lifetime, non-transferable warranty to the original purchaser covering defects in materials and workmanship. Defective products can be returned to SeaSucker for replacement or repair (at SeaSucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from SeaSucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner.

This warranty does not apply to damage or failure resulting from routine wear and tear expected in the normal use of this product, or to lack of maintenance, user error, alteration or modification of the product, accidents, misuse, abuse, or neglect.

This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty.

Purchaser's exclusive remedy under this warranty is the repair or replacement of a defective product or, at SeaSucker's option, the issuance of a refund or credit for the purchase price of the product. SeaSucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if SeaSucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law.

It is the user's responsibility to ensure that the use of this product is not prohibited by any applicable local or state law.

Your Responsibilities

You must read and follow the instructions in this user manual. You must attach the Hogg correctly to your vehicle, check it before each use, and perform any necessary maintenance. You must attach your wheel correctly to the Hogg. The correct attachment of the Hogg to your bicycle and your wheel to the Hogg is critical and is in your exclusive control.

You must obey all posted speed limits and traffic conditions; if there is no posted speed limit, we recommend not driving above 85 miles per hour. You must adapt your driving style and speed to road conditions and weather conditions.



Designed and manufactured by:
SeaSucker, LLC
Bradenton, Florida
www.SeaSucker.com

