



# Starlink<sup>®</sup> Mini Mount

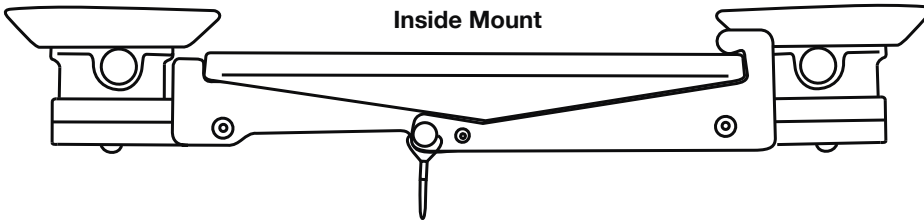

Inside Mount

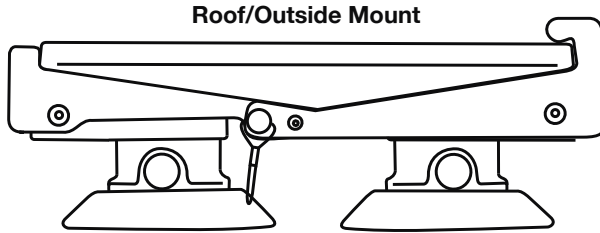

Roof/Outside Mount


## Configuring your Starlink Mini Mount

Your Starlink Mini Mount can be configured in multiple ways: Inside Mount; Roof/Outside Mount; and Wall Mount.

For the Inside Mount, pivot the vacuum mounts so that the vacuum pads are pointing in the same direction as the antenna - in this configuration the vacuum mounts are extended out past the edges of the antenna mount. See diagram.

For the Roof/Outside Mount, pivot the vacuum mounts so that the vacuum pads are pointing in the opposite direction as the antenna - in this configuration the vacuum mounts are positioned under the antenna mount. See diagram.

## Loading Your Antenna into the Mount

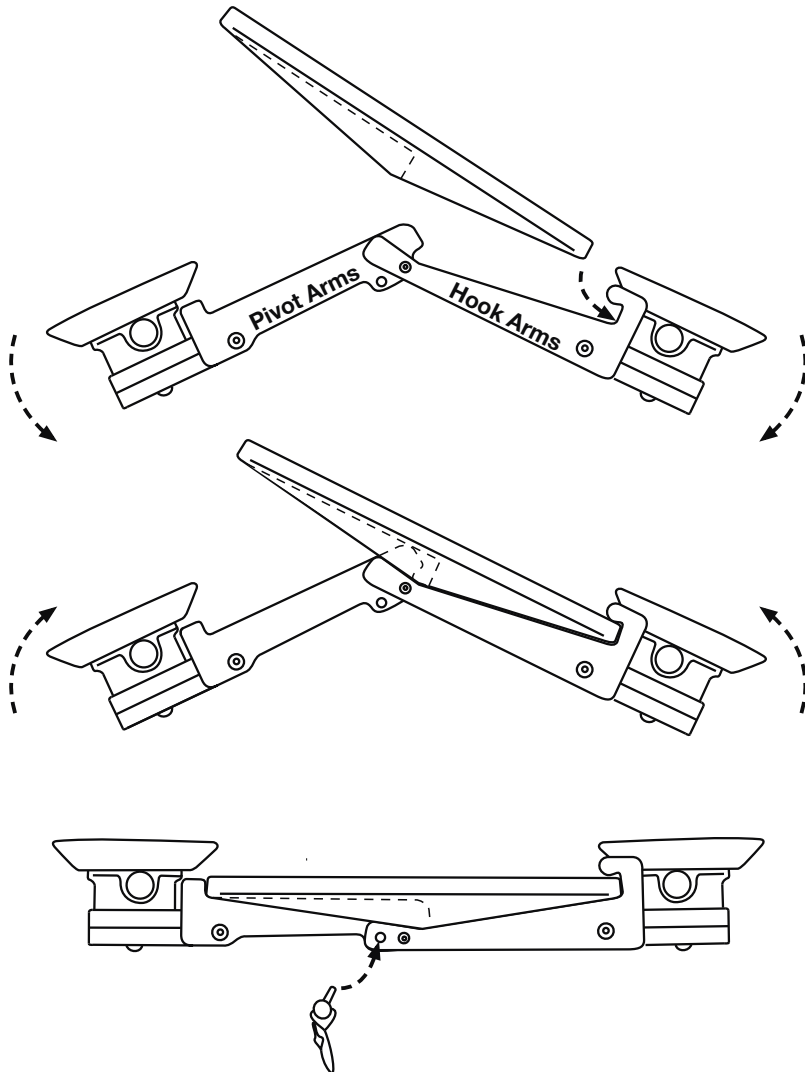

## Loading Your Starlink Mini Antenna into the Mount

Remove the locking pins from both sides of the mount.

Pivot the two sides of the mount in the position shown in the first loading diagram.

Slide the top of your antenna under the hooks on the hook arms, with the back of the antenna flat against the top of the hook arms.

Pivot the pivot arms up towards the antenna so that the nubbins on the end of the pivot arms sit on the rim of the cable access port on the bottom of the antenna and the open holes on the pivot arms and hook arms arm align.

Press and secure a locking pin through the holes on each side.


### Attaching Your Starlink Mini Mount

Your Starlink Mini Mount attaches to a smooth, clean, unobstructed surface. The vacuum mount will not attach over a seam or other surface incongruity or to a highly textured surface. Do not attach over decals or on a wrapped surface.

Clean the surface to which you're going to mount the Starlink Mini Mount. Dust and dirt will affect the vacuum mounts' ability to create and hold vacuum. Remove the protective covers from the vacuum mounts and inspect the rubber vacuum pads for damage or dirt. Do not use a vacuum mount with any visible damage to the vacuum pad. If a vacuum pad is dirty, clean it with a mild soap and water solution and a soft cloth or sponge. It may help to moisten the bottom edge of each vacuum pad with water - do not use cleaners, lubricants or other liquids.


Press each vacuum mount against the mounting surface to make a full seal; you may need to press firmly down on the Starlink Mini Mount to ensure that the vacuum pads are fully connecting with the mounting surface when pumping.

Pump the vacuum mounts repeatedly until the plungers don't spring back and the indicator bands are hidden inside the pump cylinders. If a plunger won't stay seated in the pump cylinder or continues to extend out immediately after pumping, you may need to clean the mounting surface or the vacuum pad or pump, perform basic maintenance on the vacuum pad or pump, or move to a more suitable mounting position. Do not use your Starlink Mini Mount without correcting the problem!

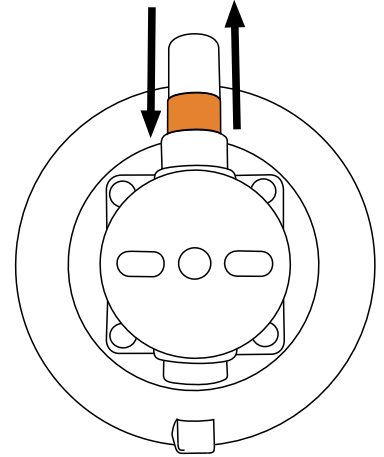

### Removing Your Starlink Mini Mount: Lift and Cover

With your fingertip, use one of the tabs on the vacuum pad to lift the edge of the pad up from the mounting surface and break the vacuum seal. Always put the protective covers back on when the Starlink Mini Mount is not attached to protect the vacuum pads' rubber. Make sure the pads are fully seated in the protective covers before storing it. The edge of a vacuum pad could be damaged or deformed if the vacuum pad isn't fully seated in its protective cover.

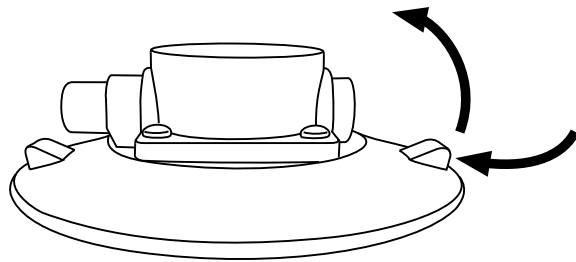


### Check for the Indicator Band During Use


SeaSucker vacuum mounts are not intended to be permanent fixtures - they will lose vacuum over time. When your vacuum mount loses vacuum, it will warn you by extending the pump's plunger, exposing an orange band. You are required to monitor your vacuum mounts during use. Periodically check to see if the indicator

band is visible on the vacuum mount. If you see the orange band, simply pump the SeaSucker as described above.

If the indicator band appears less than four hours after being pumped to full strength, either cleaning, maintenance or repositioning may be required. Refer to the Troubleshooting Guide at the end of these instructions. If your Starlink Mini Mount is mounted on a scratched surface, move it to a more suitable position. If the mounting surface or vacuum mount is dirty, clean it. If these steps don't stop the vacuum mount from losing vacuum prematurely, discontinue use until the problem is resolved.

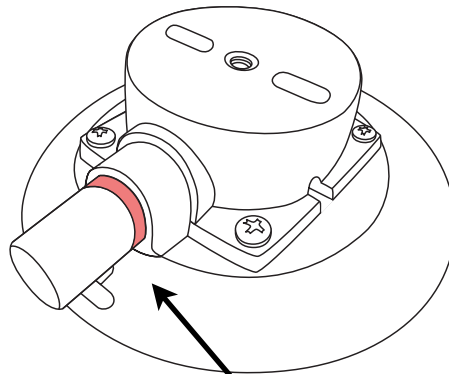

Indicator band exposed: time to re-pump!

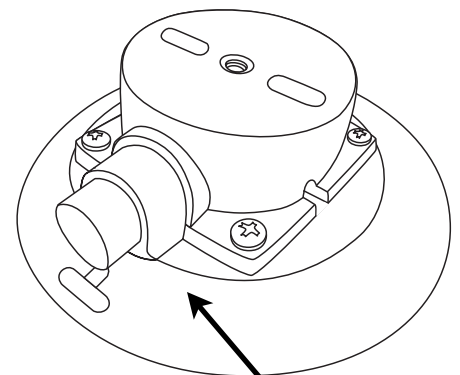

Full power!

### Care and Maintenance

To get the most out of your Starlink Mini Mount, inspect it regularly and store it with the vacuum mounts' protective covers on. Check that all screws are securely tightened, including the screws attaching the vacuum pads to the housings and the screws attaching the vacuum mounts to the body.

Clean the vacuum pads before each use with a sponge or soft cloth, mild dish soap and water. Do not use harsh solvents or abrasive cleaning pads. Inspect the sealing edges for stiffness, cracks, roughness, or cuts. A damaged vacuum pad should be replaced.

The vacuum pumps should be cleaned regularly. Pull the plunger straight out of the pump cylinder. Clean the inside of the cylinder with dish soap and a soft cloth or paper towel. Dry the inside of the cylinder – water left in the cylinder may interfere with the check-valve function of the pump.

The plunger should be wiped clean and the black rubber seal at the tip of the plunger should be re-lubed with a thin layer of silicone-based gel lubricant. After cleaning, push the plunger back into the cylinder and pump it several times to seat it properly and distribute the lubricant.

### Warranty

SeaSucker offers a lifetime, non-transferable warranty to the original purchaser covering defects in materials and workmanship. Defective products can be returned to SeaSucker for replacement or repair (at SeaSucker's option). Warranty claims must be accompanied by a sales receipt or other proof of purchase document. The cost of transportation to and from SeaSucker for the repair or replacement of any defective part or accessory is not covered by this warranty and is to be paid by the owner.

This warranty does not apply to damage or failure resulting from routine wear and tear expected in the normal use of this product, or to lack of maintenance, user error, alteration or modification of the product, accidents, misuse, abuse, or neglect.

This warranty is given in lieu of all other written or oral warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, and are limited to the duration and specifications of this warranty.

Purchaser's exclusive remedy under this warranty is the repair or replacement of a defective product or, at SeaSucker's option, the issuance of a refund or credit for the purchase price of the product. SeaSucker's liability for any damages relating to any allegedly defective product, whether arising from the use or the inability to use the product and whether claimed under tort, contract or any other legal theory, shall be limited to the actual price paid for such product and shall in no event include loss of use, loss of time, incidental, consequential, special, or indirect damages of any kind, even if SeaSucker is aware of the possibility of such damages, to the full extent as such may be disclaimed by law.

### IMPORTANT WARNINGS

- Do not use if the indicator band is exposed on any of your vacuum mounts' pumps.
- Do not use if all of the vacuum mounts cannot maintain a full vacuum seal for at least 4 hours.
- Clean the mounting surface before attaching.
- Clean the vacuum mounts before attaching.
- Clean and lube the vacuum mounts' pumps regularly.
- Inspect screws, nuts, and bolts regularly and retighten if necessary.
- Make sure the vacuum pads are fully seated in the protective covers when not in use.

TROUBLESHOOTING GUIDE	Problem	What Might Be Wrong	How To Fix It
	Slow Leakage	Dry mounting surface or vacuum pad	Moisten the mounting surface or the vacuum pad
		Nicks or cuts on vacuum pad	Replace the vacuum pad
		Dirt in pump	Clean and re-lube the plunger and pump cylinder
		Dry pump	Re-lube the plunger seal
		Dirt on vacuum pad	Clean the vacuum pad
		Dirty or uneven mounting surface	Clean the mounting surface or move to a more suitable spot
	Severe Leakage	Nicks or cuts on vacuum pad	Replace the vacuum pad
		Damaged pump	Replace the vacuum pump
		Dirty or uneven mounting surface	Clean the mounting surface or move to a more suitable spot
Jammed or Sluggish Pump	Dry pump	Re-lube the plunger seal	
	Obstructed valve stem	Remove the obstruction; clean and re-lube the pump	
	Dirt in pump	Clean and re-lube the plunger and pump cylinder	