




1. Align wheel(B) to each leg and press firmly into base(A). Fit gas lift(C) into base.

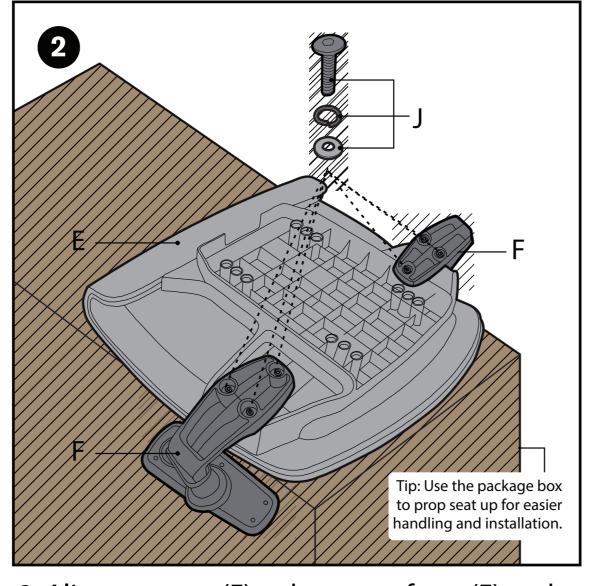


2. Align armrests(F) to bottom of seat(E) and secure with armrest hardware(J). Ensure armrest indicated "L" and "R" are matched and installed to left and right of seat.

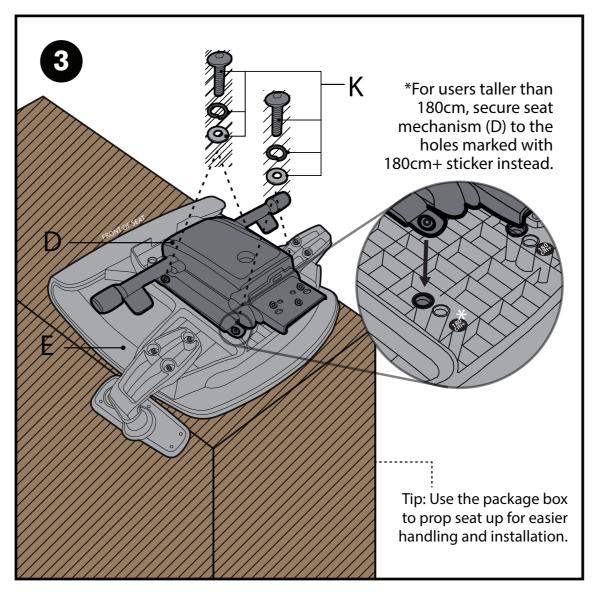


3. Align seat mechanism(D) to the first holes from front of seat(E) and secure with seat mechanism hardware(K).

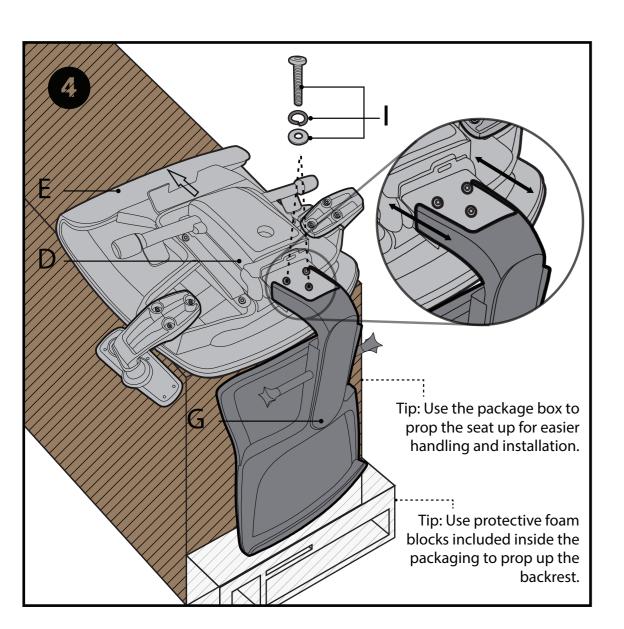

4. Fit the backrest(G) onto the bottom of seat(E). Loosely install backrest hardware (I), then ensure that backrest is properly aligned with the seat mechanism (D) before fully fastening the backrest hardware.

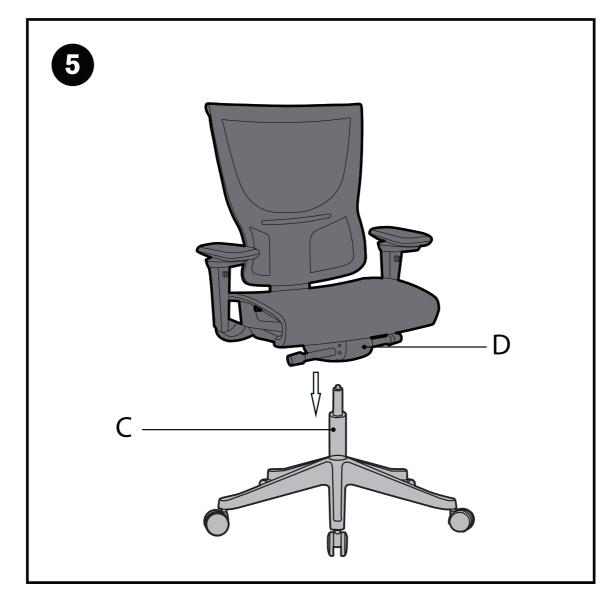

5. Align the opening on the seat mechanism (D) onto the gas lift (C), and hold it down firmly till tight. This step is easier completed with two people.

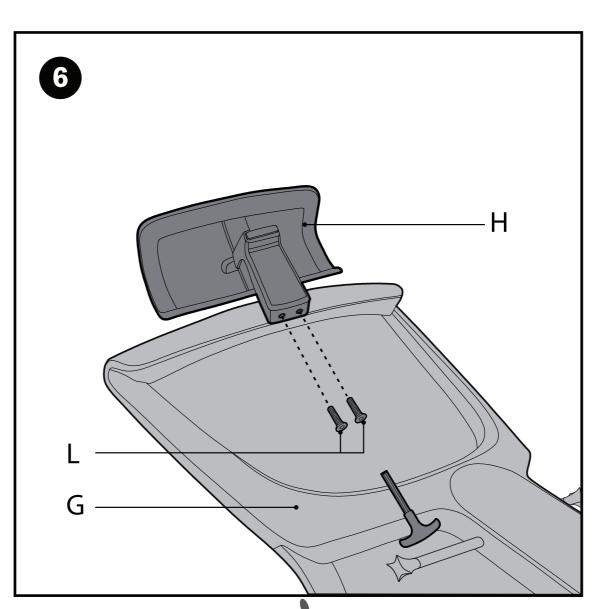


6. Secure neckrest(H) to backrest(G) with the neckrest hardware(L) and hex key.











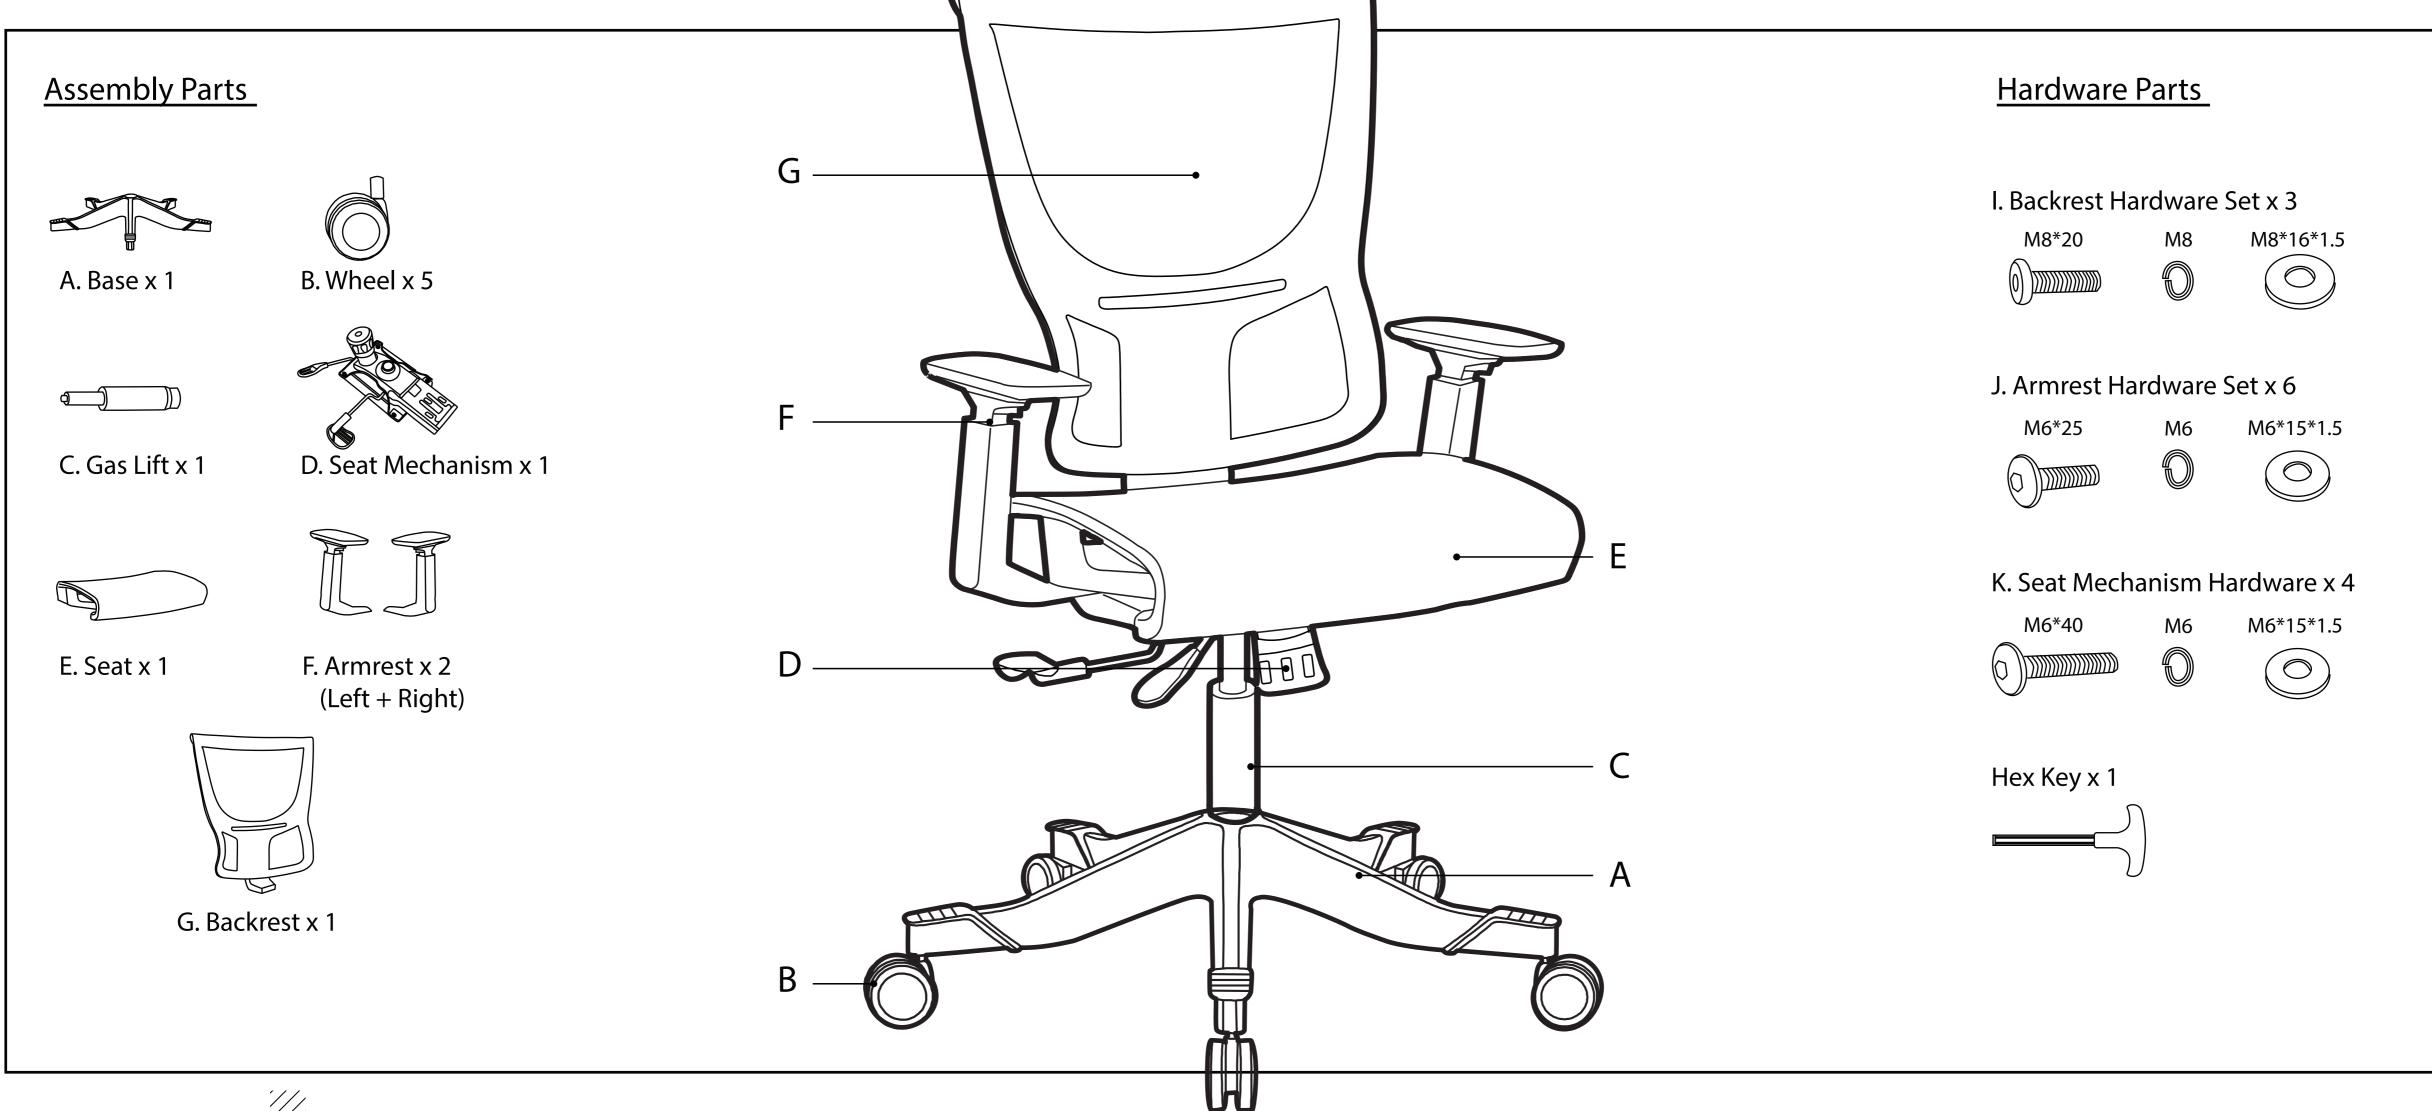


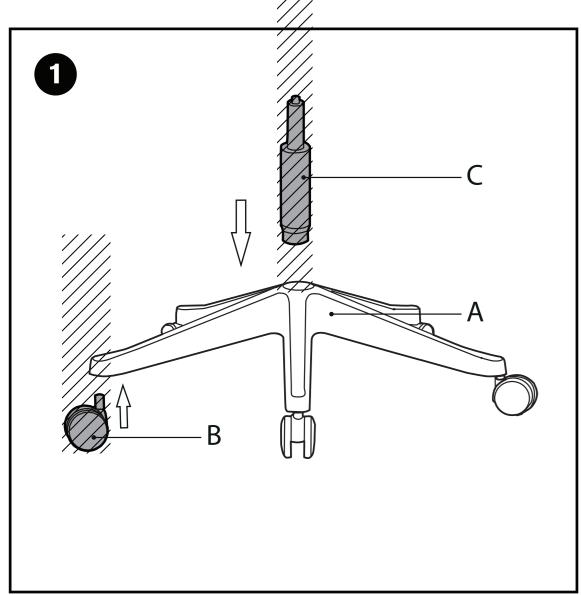


1. Align wheel(B) to each leg and press firmly into base(A). Fit gas lift(C) into base.

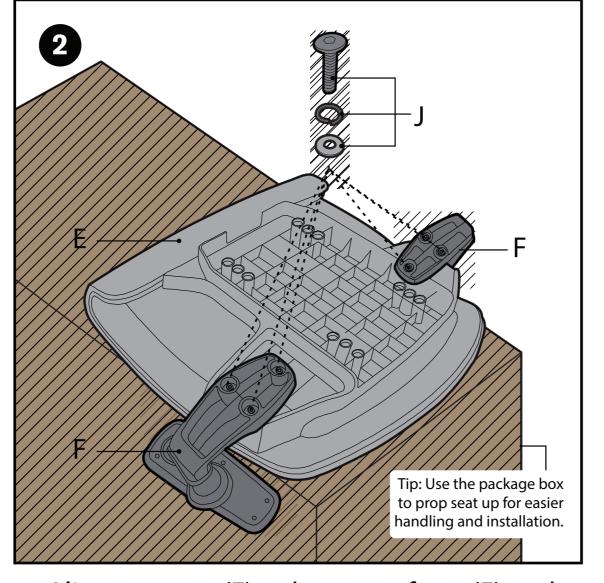


2. Align armrests(F) to bottom of seat(E) and secure with armrest hardware(J). Ensure armrest indicated "L" and "R" are matched and installed to left and right of seat.

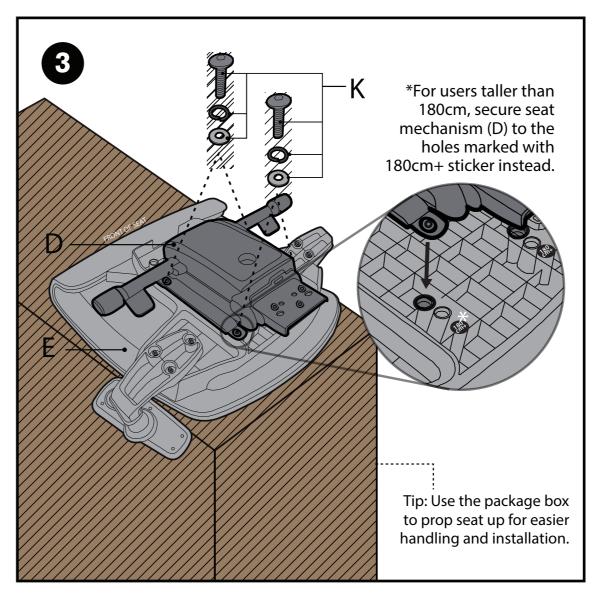

3. Align seat mechanism(D) to the first holes from front of seat(E) and secure with seat mechanism hardware(K).

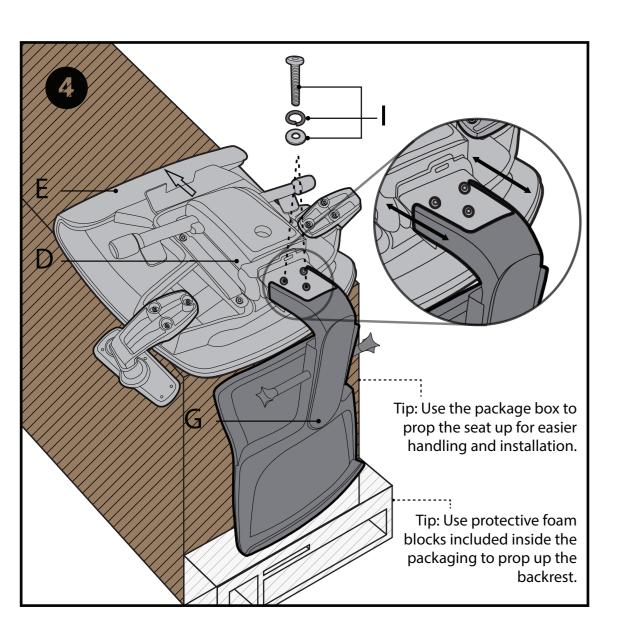

4. Fit the backrest(G) onto the bottom of seat(E). Loosely install backrest hardware (I), then ensure that backrest is properly aligned with the seat mechanism (D) before fully fastening the backrest hardware.

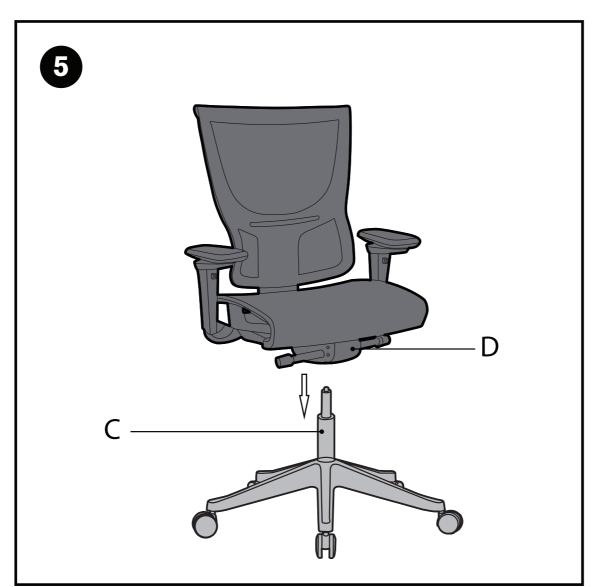

5. Align the opening on the seat mechanism (D) onto the gas lift (C), and hold it down firmly till tight. This step is easier completed with two people.

