


QUICKPLAY
GS REBOUNDER WALL
INSTRUCTIONS
12X6FT

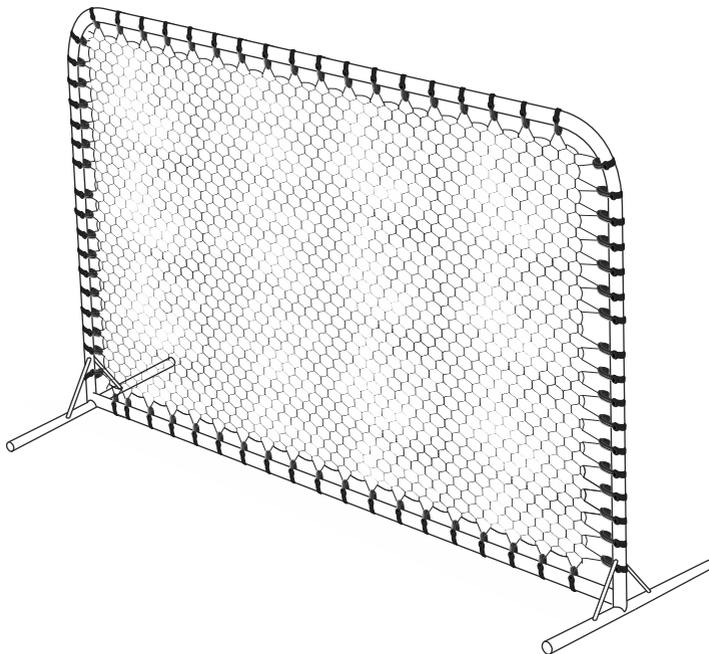


GOT AN ISSUE?
DON'T RETURN
TO THE STORE

please contact us instead:
support@quickplaysport.com


STEP 1

FRAME ASSEMBLY

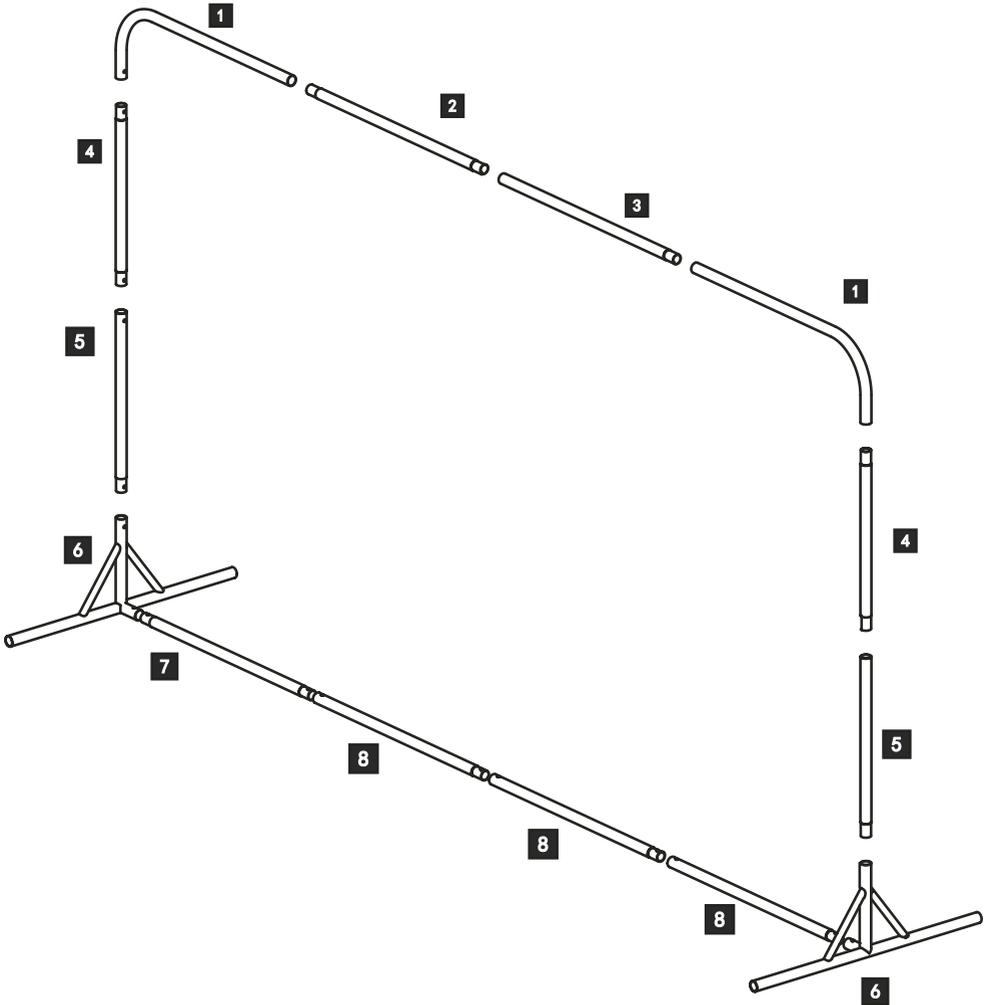


Slot the numbered parts of the frame together as per the diagram above.

NET ATTACHMENT

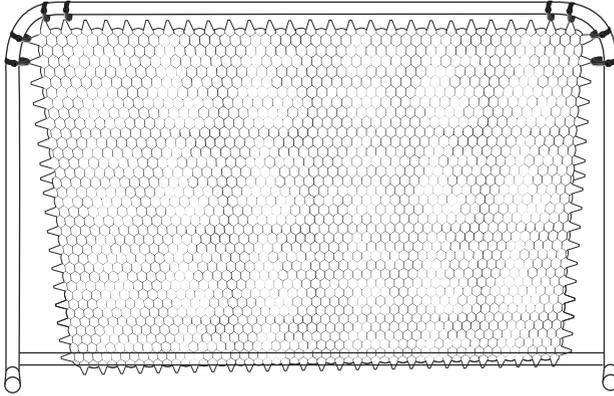


Start by attaching 4 bungees to each of the top corners.

Then attach 4 bungees to each of the bottom corners of the

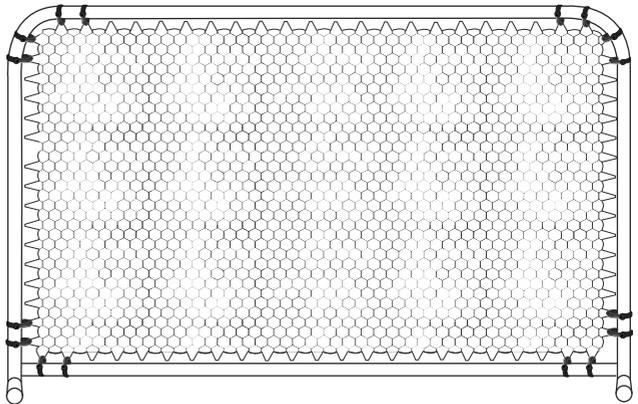


STEP 3


NET ATTACHMENT

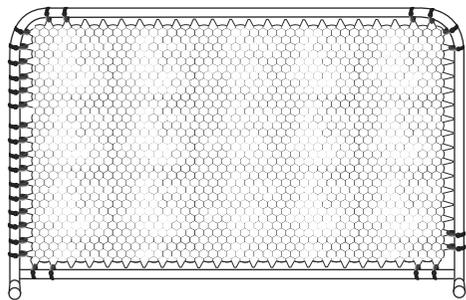


1

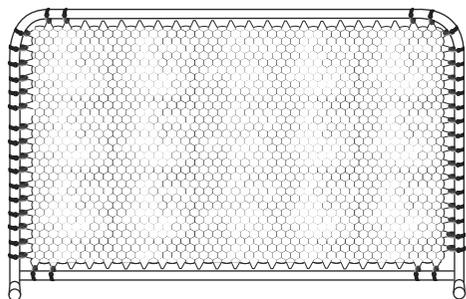


2

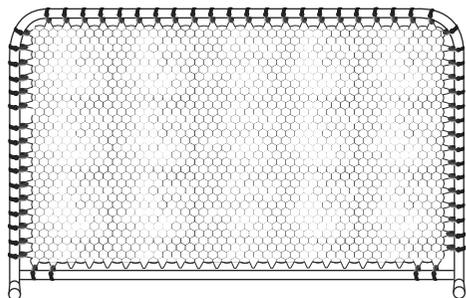

3

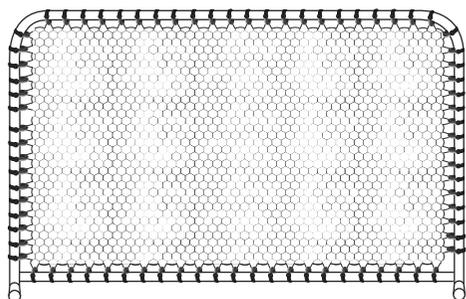

4

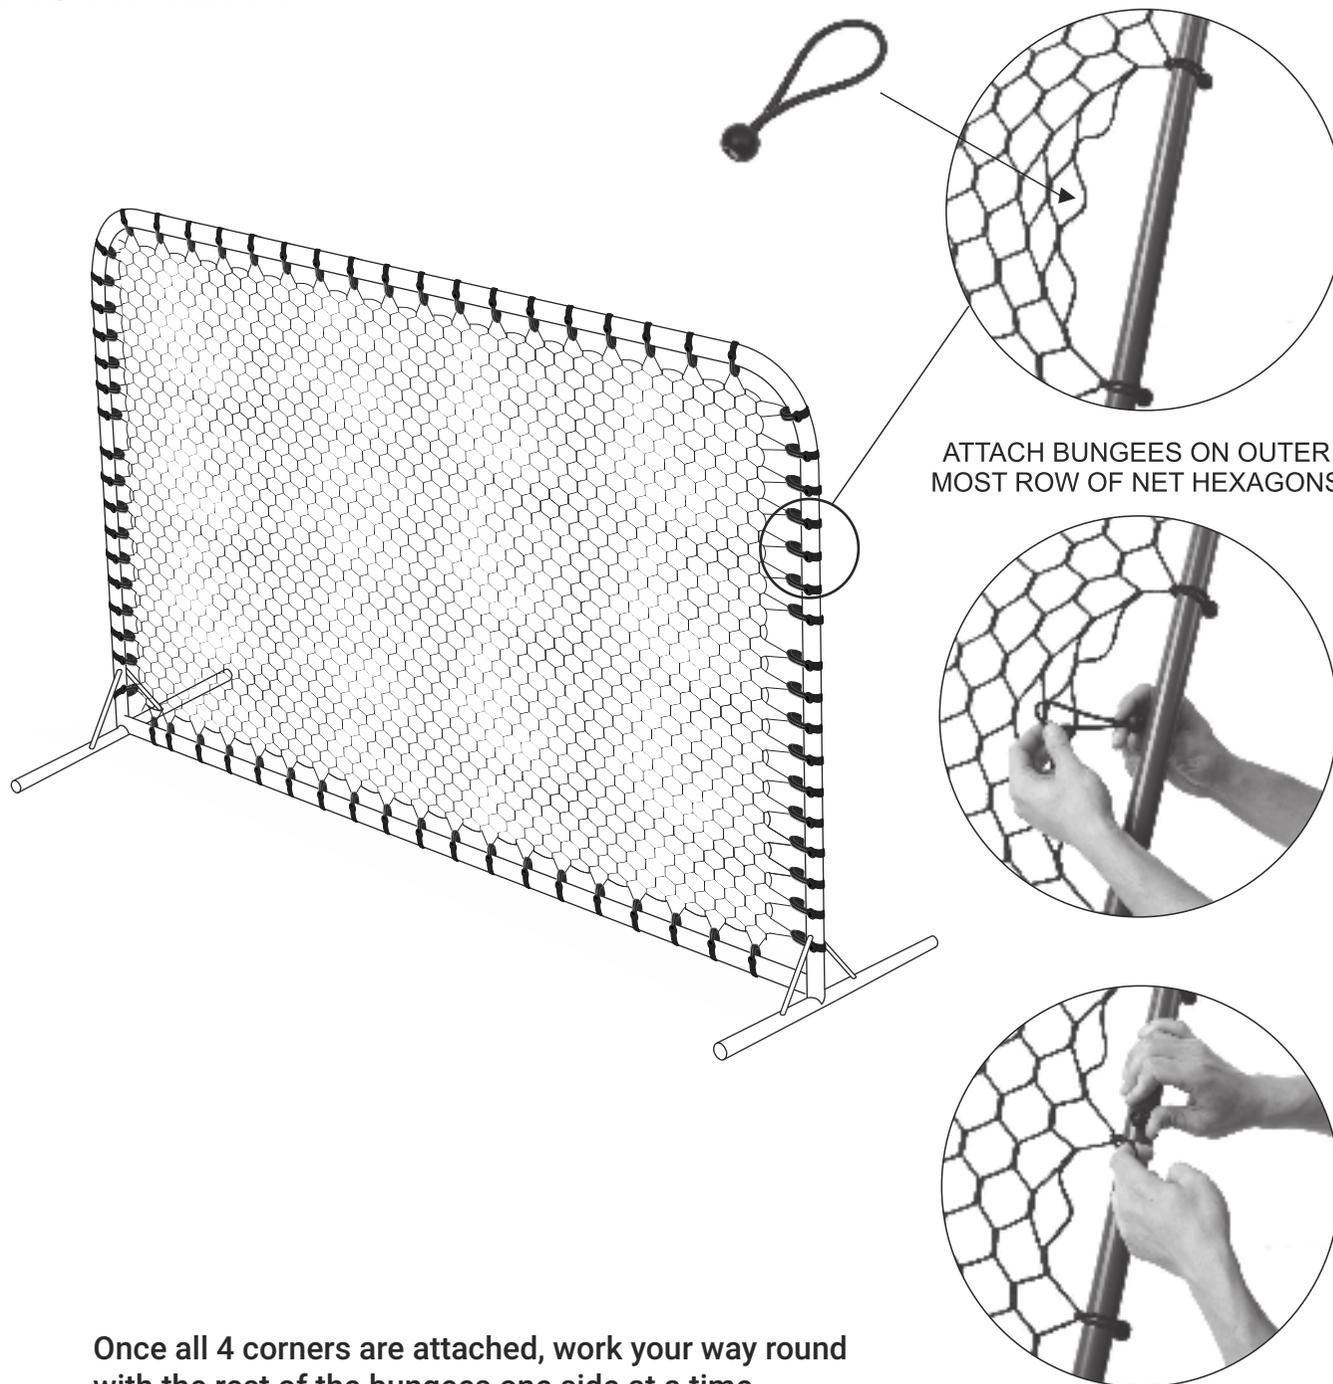



ATTACH BUNGEEES ON OUTER MOST ROW OF NET HEXAGONS

Once all 4 corners are attached, work your way round with the rest of the bungees one side at a time.

STEP 4

GROUND PEGS

When using on grass, use the ground pugs over the base poles towards the ends away from the net for best balance.

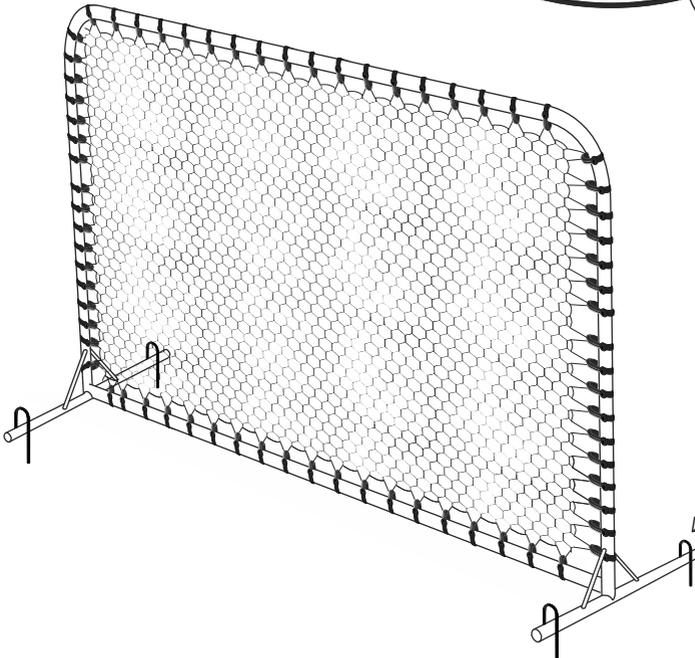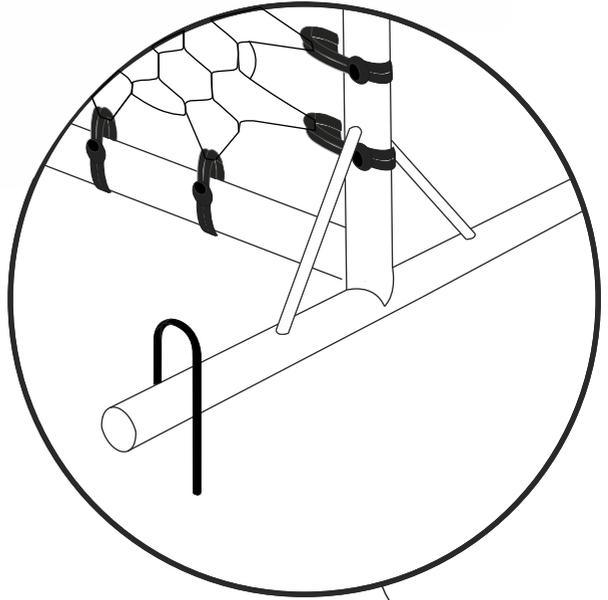

GS REBOUNDER WALL

WARNINGS & USAGE GUIDELINES:

- 1. Must be assembled by an adult.**
- 2. This product is not suitable for children under 5 yrs of age.**
- 3. Only use on a flat surface.**
- 4. Check the product is fully assembled before use.**
- 5. Always exercise caution when moving the product.**
- 6. Ensure the product is secured to the ground with the provided U-pegs before use.**
- 7. If using on hard surfaces, anchor with sandbags or goal weights (sold separately).**
- 8. Do not climb or hang on the product.**
- 9. Regularly check the goal for wear and tear. Stop using if any part of it breaks. Failure to do so may result in injury.**
- 10. Not suitable for use in high winds.**

1YR PARTS WARRANTY AS STANDARD:

Warranty covers manufacturing defects and workmanship, but excludes nets, bungees, weather wear (e.g rust / rot) and general wear and tear. Please note, non-compliance with the above Warnings & Guidelines will invalidate your warranty. Register your warranty within 15 days of purchase & see full warranty terms at:

Warranty.QuickPlaySport.com

or scan this code:

