


2022 Maverick Cordless Instructions

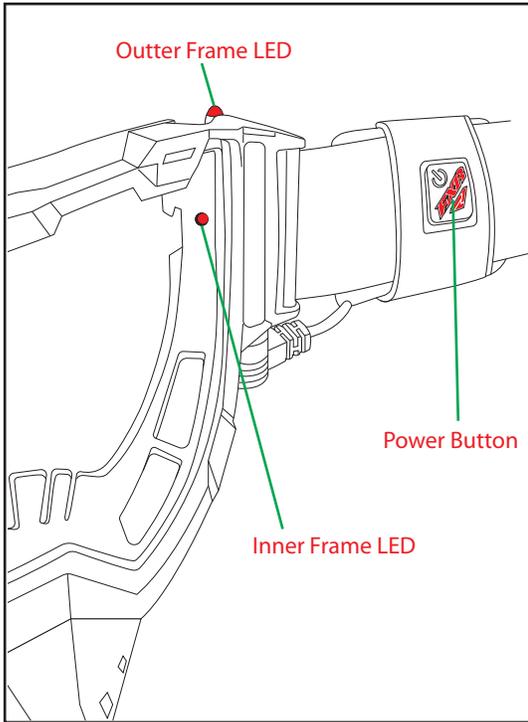

MAVERICK CORDLESS ELECTRIC INSTRUCTIONS

The Maverick Cordless Electric Battery Pack has 4 heat settings.

- **Power Shot** Continuous heat for 2 minutes, then automatically shuts off
- **High** Continuous heat
- **Medium** Power cycles for best combination of heat and battery life
- **Low** Power cycles for maximum battery life

Power Shot - Press and hold Power Button for 1 second to turn on and activate the Power Shot setting.


- The light in the Power Button will continually flash for 2 minutes until the system automatically shuts off
- Once the unit is turned on, pressing the Power Button again will switch to additional heat settings

- **High** Power button light is solid red
- **Medium** Power button light is solid blue
- **Low** Power button light is solid green

NOTE:

- The inner and outer **FRAME** LED lights will not change color under different heat settings. The only light that will change color is located in the Power Button
- When you make a new heat selection, the LED lights on the frame will flash once to indicate that the selection has changed.

To **Power-Off** on any of the heat settings, press and hold Power Button for one second.

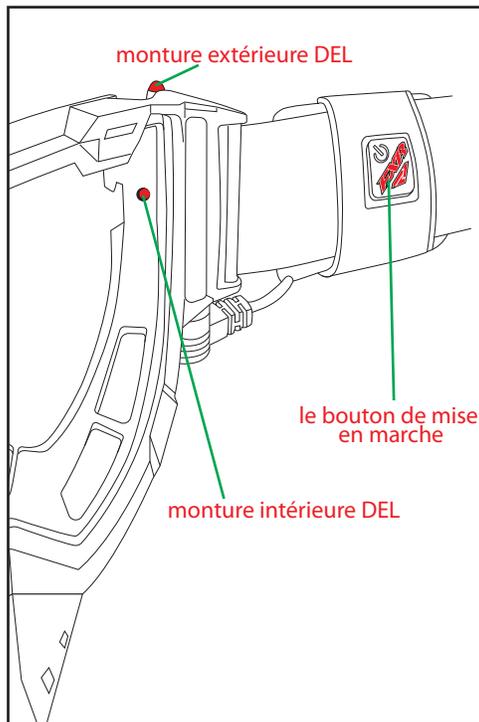

MAVERICK ÉLECTRIQUE SANS FIL MODE D'EMPLOI

Le bloc d'alimentation Maverick électrique sans fil offre 4 niveaux de chaleur.

- **Coup de pouvoir** Offre un maximum de chaleur pendant 2 minutes avant de s'éteindre.
- **Haut** Le courant reste allumé pour une chaleur continue.
- **Moyen** Le courant fluctue pour conserver la chaleur et le niveau de charge de la batterie.
- **Bas** Le courant fluctue pour maximiser le niveau de charge de la batterie.

Coup de pouvoir – Appuyez et maintenez le bouton de mise en marche pendant 1 seconde pour allumer et activer la fonction Coup de pouvoir.

- La lumière de la touche de mise en marche clignotera pendant 2 minutes jusqu'à ce que le système s'éteigne automatiquement. Lorsque le système est en marche, appuyez le bouton pour passer aux autres niveaux de chaleur.

- **Haut** Lumière rouge et solide
- **Moyen** Lumière bleue et solide
- **Bas** Lumière verte et solide

NOTE:

- Les lumières DEL extérieures et intérieures sur la **monture** ne changent pas de couleur selon le niveau de chaleur. Seule la lumière de la touche de mise en marche change de couleur.
- En passant d'un niveau de chaleur au prochain, les lumières DEL sur la monture clignotent une fois pour indiquer le changement.

Pour éteindre (peu importe le niveau), appuyez et maintenez le bouton de mise en marche pendant une seconde.