EN

DYNAMIC®

CLEAN | LUBE | ASSEMBLE | PROTECT

# CLEAN MACHINE

**MOBILE PRESSURE WASHER**




Please read this manual carefully before use.
Keep manual for future reference.

# TABLE OF CONTENT


Intro ..... 4

Inside the box ..... 4

Instructions for use ..... 4

Spray settings ..... 5

Foam pot ..... 5

Charging Instructions ..... 5


Maintenance ..... 5

Safety Precautions ..... 6


Troubleshooting ..... 6

Specifications & warranty ..... 8

# INSIDE THE BOX

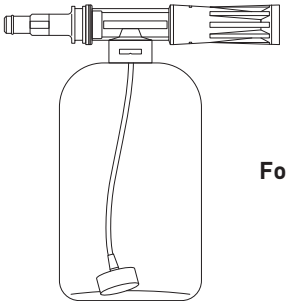


7 Foam Pot





6-in-1 Spray Head 6

Mobile Pressure Washer 1

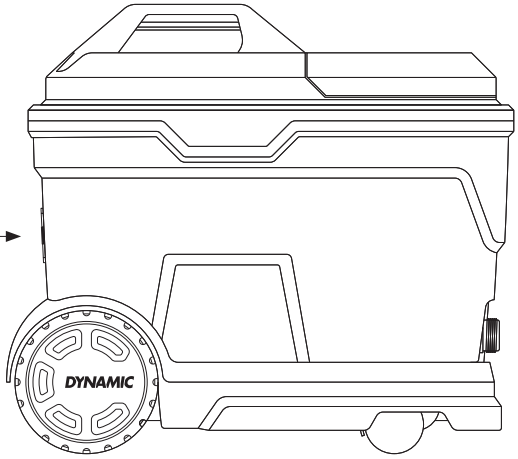



Battery 2






3 Charger

Trigger Gun 4

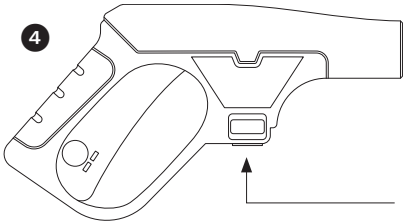

5 m Water Hose 5

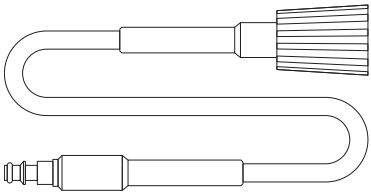

## Clean Machine Mobile Pressure Washer

The Clean Machine is a powerful, mobile pressure washer developed specifically for bike cleaning. It is powerful enough to blast away dirt while being safe for bearings and other sensitive components. The rechargeable battery gives the Clean Machine full freedom of movement - perfect for balconies, tap-free gardens or forest-side parking spots after a muddy ride. With one-handed control, full mobility and all the tools you need onboard, the Clean Machine is built to make cleaning fast, safe and hassle-free.

CE, UKCA and RCM certified and includes a 2-year warranty.
The Dynamic The Clean Machine guarantees convenient, fast and professional cleaning - wherever you are.

## Inside the Box

1. Mobile Pressure Washer
2. Battery
3. Charger
4. Trigger Gun
5. 5 m Water Hose
6. 6-in-1 spray Head
7. Foam Pot
8. User Manual

## Instructions for Use

Set up your Clean Machine

1. Make sure the battery is fully charged before inserting it into the Clean Machine.
2. Connect the hose to the Clean Machine tap and attach the trigger gun to the other end. Make sure the trigger gun and hose are locked in tight.
3. Attach the 6-in-1 spray head or the foam pot to the gun, depending on your cleaning task.
4. Fill the tank with clean water.
5. Turn on the Clean Machine using the [ON] button. Select [+] to switch between water pressure modes.
6. Pull the trigger to start cleaning.
    - Keep at least 1 m distance from the bike or its components.
    - Avoid spraying directly onto bearings, suspension seals and electrical components.
7. Release the trigger to stop water flow.
8. After use, empty the tank and allow all components to dry before storage. All items can be stored inside the tank.
9. Always lock the safety pin before transport or storage.

## Spray settings

Attach the 6-in-1 spray head (push and turn) to the trigger gun. The 6-in-1 spray head offers six spray options, ranging from a gentle rinse for soaking your bike to a concentrated jet for tackling stubborn, hard-to-reach dirt. Twist the 6-in-1 spray head to switch between the spray options. Important: do not twist the 6-in-1 spray head while pulling the trigger, as this may damage the mechanism or affect spray performance.

## Foam pot

Attach the foam pot (push and turn) to the trigger gun to coat your entire bike with a thick layer of cleaning foam.

Fill the foam pot with one of the following Dynamic Bike Care products:
- Dynamic Badass Bubbles: diluted with water.
- Dynamic Bio Filth Fighter: undiluted.

Spray the bike evenly with foam, covering all surfaces.
Let the foam sit for 2-3 minutes, but don't let it dry.

## Charging Instructions

The Clean Machine is powered by a Makita-compatible battery, allowing full interchangeability between The Clean Machine and Makita batteries.

1. Remove the battery from the Clean Machine.
2. Connect the charger to the battery.
3. Plug the charger into a power source.
4. Allow the battery to fully charge before using.

## Maintenance

- Always remove the battery before performing any maintenance.
- Check the Clean Machine and accessories for visible damage before each use.
- After use, disconnect all attachments (hose, 6-in-1 spray head, foam pot), rinse them with clean water, and let them dry completely.
- Rinse the internal filter with clean water if clogged.
- Clean the exterior with a soft brush or cloth, do not use aggressive cleaning agents.
- Store the Clean Machine and all accessories in a dry, frost-free environment, away from children and direct sunlight.
- For easy transport, store all components inside the dry tank.

## Safety Precautions

- The Clean Machine is not a toy. Keep out of reach of children.
- The Clean Machine may only be used by persons with reduced physical, sensory, or mental capabilities if they are supervised or instructed in safe use and understand the risks.
- Do not direct the spray at people, animals, electrical equipment, or the machine itself.
- Only fill the tank with clean water. Do not use chemicals, detergents, or additives in the tank. Never spray flammable liquids.
- Only use approved cleaning agents in the foam pot. Using other chemicals may compromise safety and damage the machine.
- Do not use the Clean Machine if any parts are damaged, including battery, charger, 6-in-1 spray head, trigger gun, or hose.
- Be aware of the kickback force when pulling the trigger. Always hold the trigger gun securely.
- Always lock the safety pin when the machine is not in use, and during transport or storage.
- Only use original hose, couplings, and trigger gun to ensure safety and compatibility.
- Do not expose the battery and charger to water.
- The Clean Machine is water-resistant during normal use but must never be submerged. Do not spray water on the Clean Machine directly.
- The Clean Machine starts when the trigger is pressed and stops automatically when released.
- Do not place any objects on top of the Clean Machine.
- Always empty the tank before transport.

## Troubleshooting

**The Clean Machine won't switch on:**
- Battery not properly connected → Reinsert battery correctly
- Battery is empty → Recharge or replace battery
- Battery is defective → Replace battery

**The Clean Machine is on but not drawing water:**
- Blocked water filter → Remove and rinse with clean water
- Hose not connected properly → Check and reconnect
- Pump, hose or parts are frozen → Let ice melt completely
- Hose is kinked → Straighten the hose

**Inconsistent water pressure:**
- Loose or faulty connection → Check all hose connections
- The Clean Machine is in low pressure mode → Slight fluctuations are normal; switch to higher mode for consistent pressure
- Battery is empty → Recharge or replace battery

**No foam dispensed:**
- Foam pot is blocked → Rinse foam pot thoroughly by hand

**The Clean Machine suddenly stopped:**

- Blocked or damaged spray head or foam pot → Remove and test The Clean Machine without it; clean or replace if needed
- Battery is empty → Recharge or replace battery

**Water comes out after switching off the Clean Machine:**

- Water remaining in the Clean Machine or hose → Let the unit drain fully before storing

**The Trigger gun and water hose are difficult to disconnect:**

- Trapped air pressure → Press the trigger once after switching off to release air and allow easy removal

DYNAMIC®

## Specifications

**Model:** Clean Machine DY-146
**Water Output:** 3.0 – 4.0 L/min
**Pressure:** 30 – 65 bar
**Motor:** 400 W brushless
**Battery Pack:** 21 V, 4000 mAh Lithium-Ion
**Runtime:** 17 – 25 minutes
**Water Tank Capacity:** 20 litres
**Hose Length:** 5 metres
**Cleaning Capacity:** 3 to 5 bicycles per charge

## Certifications & Warranty

CE, UKCA and RCM certified, 2-year warranty.

You can find this manual in **EN, NL, DE, FR,** and **ES** via this QR code →

Designed in the Netherlands | Made in China | Dynamic Bike Care B.V.
Lulofsstraat 55 Unit 25 | 2521 AL | The Hague | NL | +31 (0) 85 022 03 62
www.dynamicbikecare.com | info@dynamicbikecare.com