

SPACETEK

IN-MOTION MOUNT

Quick Start Guide



Vehicle Ready



Secure



Australian Made

WHAT'S INCLUDED

IN-MOTION MOUNT BASE

Mount body



TWO SIDE RAILS

Fit to the left and right edge of the Starlink Mini.



Mounting hardware varies between roof rack systems and is not included.

BEFORE YOU BEGIN



PREPARE THE MOUNTING AREA

Before installation, clean and dry the vehicle surface where the magnets will sit. Make sure the surface is flat, suitable and free from dust, sand or debris.

After positioning the mount, check that it sits firmly and securely before driving.

CHOOSE YOUR INSTALLATION METHOD

OPTION 1

ROOF RACK INSTALLATION



OPTION 2

MAGNETIC INSTALLATION

Compatible magnets are purchased separately.



INSTALLATION CHECKLIST

- ✓ Choose the correct installation method for you vehicle.
- ✓ Prepare all the components.
- ✓ Clean the vehicle surface thoroughly before placing the magnets, then confirm the mount is secure before driving.

ROOF RACK INSTALLATION

Follow these steps to securely install your In-Motion Mount to your rack.



1 Secure the base mount using hardware appropriate for your roof rack (not included).



2 Position one side rail on the mount base. Align the rail holes with the mounting holes, Then insert the bolts and hand tighten



3 Plug the cable into your Starlink Mini before placing it into the mount.



4 Place Starlink mini into the second rail, and place it in.



5 Tighten all bolts with the Allen key. Do not overtighten them as this may damage the threads.



6 Installation is complete. Check that the mount is secure and all fasteners are tight before driving.



FINAL INSPECTION:

Verify that all screws are secure and all components are properly installed before driving.

MAGNETIC INSTALLATION

For use with compatible magnets purchased separately.




Fasten one compatible magnet to each corner of the mount base.
Note: you may need multiple washers.



Position one side rail on the mount base. Align the rail holes with the mounting holes, Then insert the bolts



Plug the cable into your Starlink Mini before placing it into the mount.

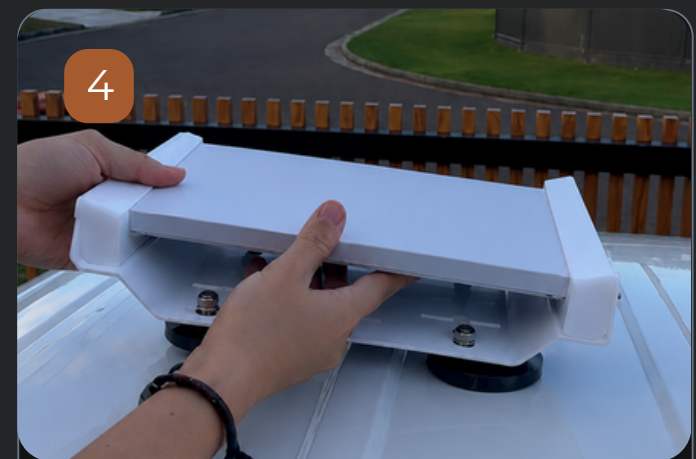

Place Starlink mini into the second rail, and place it in.



Tighten all bolts with the Allen key. Do not overtight them as this may damage the threads.



Position the magnetic mount on the vehicle surface.



SAFETY CHECK:

Always ensure the mounting surface is suitable, clean and capable of securely holding the magnetic mount before driving.


SPACETEK

BUILT FOR LIFE ON THE ROAD



VEHICLE READY

Designed for a clean vehicle-mounted setup.

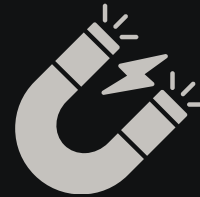

POWERFUL MAGNETS

Strong magnetic feet help hold the mount securely to the vehicle surface.



NEED HELP?



Scan the QR code or visit
[help.spacetek.com.au](https://www.spacetek.com.au)
for installation tips, FAQs
and support



<https://www.spacetek.com.au>
<https://www.spacetek.com.nz>

THANK YOU FOR CHOOSING SPACETEK.

06