


SPACETEK

ROBUST MAGNETIC ROOF MOUNT

Quick Start Guide

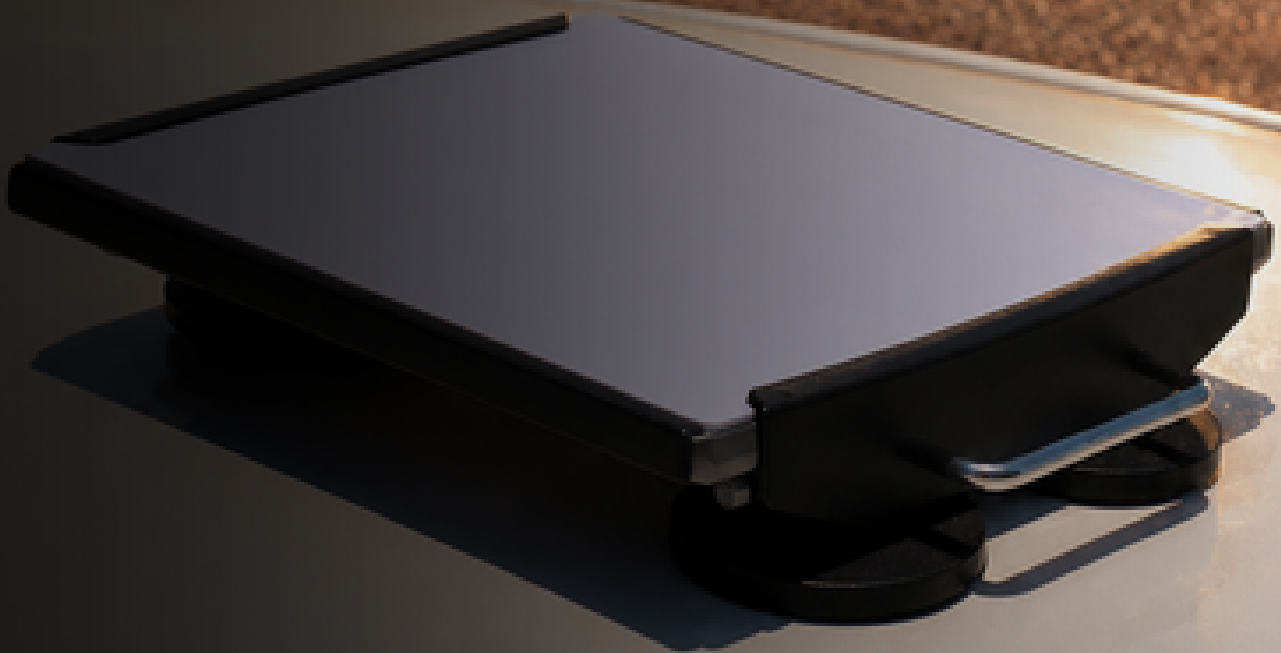

Vehicle Ready



Secure




Australian Made

WHAT'S INCLUDED

MOUNT BASE

Robust magnetic mount base and handle

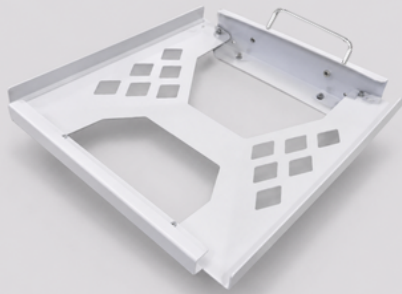

MAGNETS

Four circular magnets



BOLT PACK

use the supplied bolts to secure the rails evenly.



REMINDER:

Mounting hardware varies between roof rack systems and is not included.

BEFORE YOU BEGIN



RECOMMENDATION

For best performance, choose a smooth, clean metal area on the vehicle before positioning the mount. Wipe away dust, moisture, or debris so the magnets can make full contact with the surface. Avoid placing the mount on non-metal, curved, damaged, or unstable areas, as this may affect magnetic grip.

MAGNETIC INSTALLATION

For best results, install the mount on a clean, flat metal vehicle surface. Make sure all circular magnets are firmly attached to the mount base before placing it on the vehicle. Avoid plastic, glass, dirty, uneven, or weak surfaces, as these may reduce magnetic hold. Always check that the mount is secure before driving.



INSTALLATION CHECKLIST

- ✓ Lay out all parts before starting.
- ✓ Check that all magnets are firmly attached to the mount base.
- ✓ Confirm the Starlink Mini, cover, handle, and screws are secure.
- ✓ Place the mount only on a clean, flat metal vehicle surface.
- ✓ Check that all magnets sit firmly before driving.

MAGNETIC INSTALLATION

For use with compatible magnets purchased separately.



PREPARE ALL THE COMPONENTS

Lay out the mount base, cover, handle, circular magnets, screws, and hardware before starting.



ATTACH THE FOUR CIRCULAR MAGNETS

Fasten one circular magnet to each corner of the mount base. Tighten each magnet until secure.



FIX THE HANDLE TO THE COVER

Attach the handle to the cover using the supplied screws. Tighten both screws evenly.



SLIDE IN THE STARLINK MINI

Slide the Starlink Mini into the metal tray until it sits flat and properly aligned.

MAGNETIC INSTALLATION



ATTACH THE COVER

Place the cover onto the tray and align it with the mounting holes.



TIGHTEN THE SCREWS

Adjust the cover position if needed, then tighten the screws to secure the Starlink Mini.



SECURE ON VEHICLE

Place the mount on a clean, flat metal surface and check that all magnets sit firmly.



CARRY WITH HANDLE

Use the handle to lift and carry the mount safely when moving or storing it.


SPACETEK

BUILT FOR LIFE ON THE ROAD




VEHICLE READY

Designed for a clean vehicle-mounted setup.

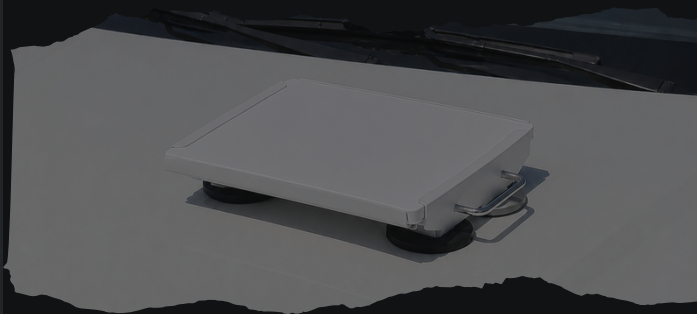

POWERFUL MAGNETS

Strong magnetic feet help hold the mount securely to the vehicle surface.

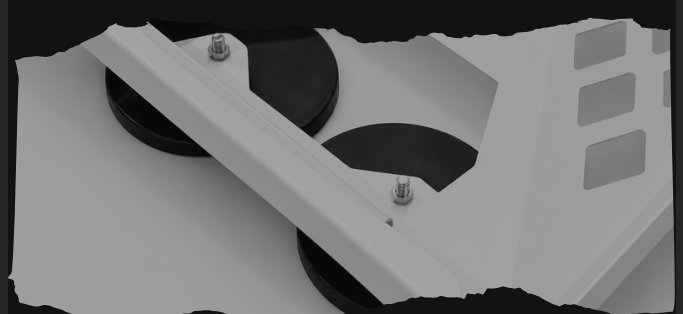

NEED HELP?



Scan the QR code or visit
[help.spacetek.com.au](https://www.spacetek.com.au)
for installation tips, FAQs
and support



<https://www.spacetek.com.au>
<https://www.spacetek.com.nz>

THANK YOU FOR CHOOSING SPACETEK.

06