


REPLACEMENT TRIM PLATE

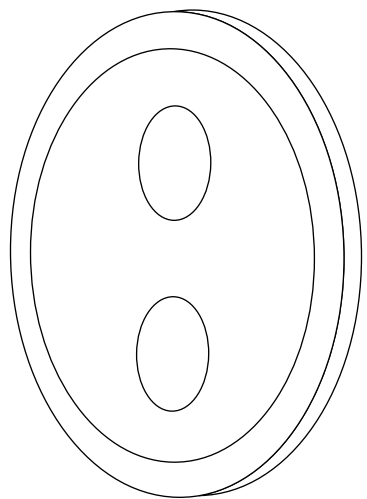

INSTALLATION GUIDE




REMOVAL INSTRUCTIONS

Begin by removing the decorative cover buttons (1) from the underside of the handles then use the Allen wrench (2) to loosen the handle set screws.

Then slide the main valve handle (3) off the square cartridge stem (4).


Next, slide the diverter handle (5) off the splined cartridge stem (6).

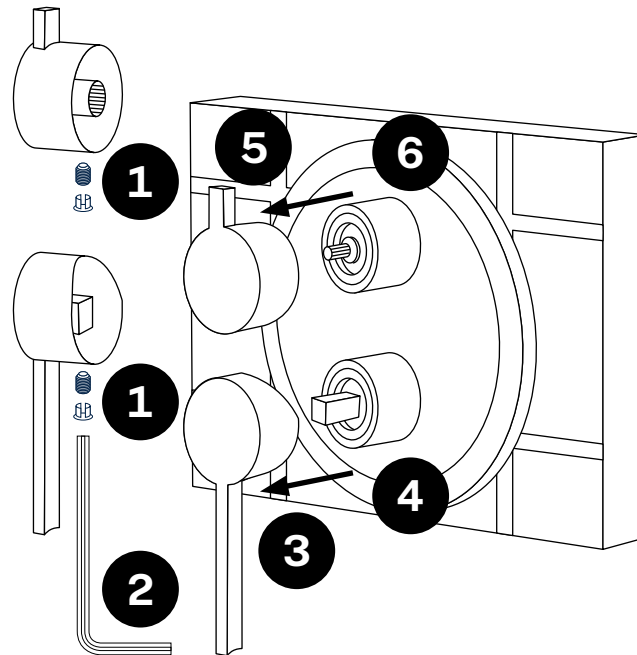

Note: These instructions apply to all of our trims even if different from the model shown.

REMOVAL INSTRUCTIONS


With both handles removed, pull the escutcheon plate (7) away from the wall. Start by releasing the top edge of the escutcheon, then pull it straight off the two valve bodies.

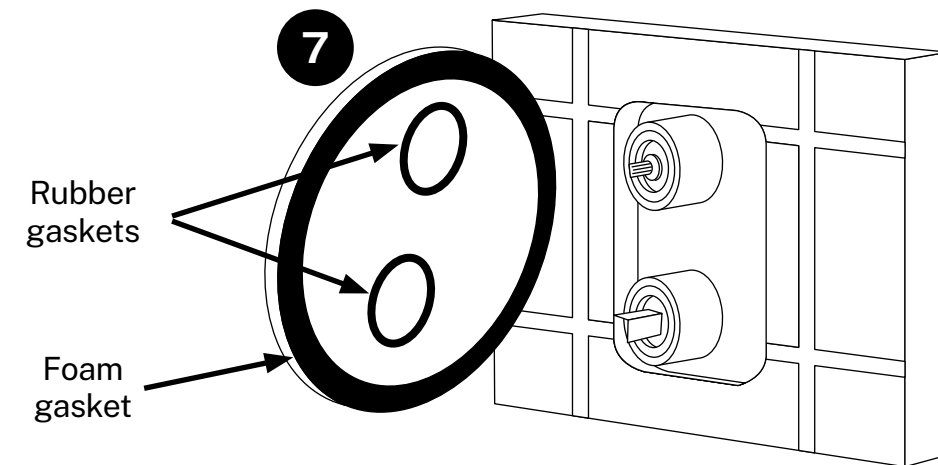

If the rubber gaskets remain on the wall, remove them and set them aside.

INSTALLATION INSTRUCTIONS

Confirm the 2 rubber gaskets are firmly attached to the rear of the escutcheon (8). Align the escutcheon plate with the smaller hole at the top, and angle the escutcheon plate top edge toward the wall (9) before pressing in and onto the two valve bodies.

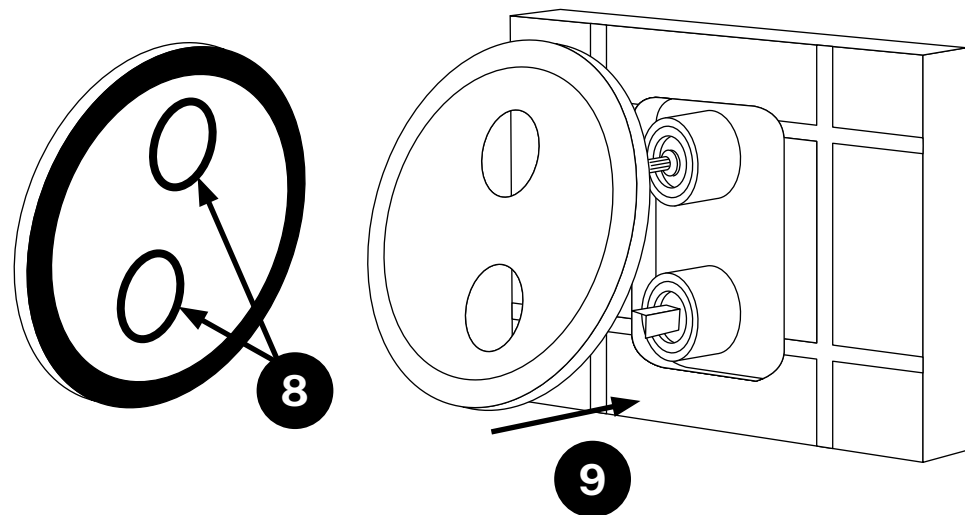


INSTALLATION INSTRUCTIONS

Next, slide the diverter handle (10) onto the splined cartridge stem (11).


Then slide the main valve handle (12) onto the square cartridge stem (13).

Finish by inserting the decorative cover buttons (14) into the underside of the handles then use the Allen wrench (15) to tighten the handle set screws.

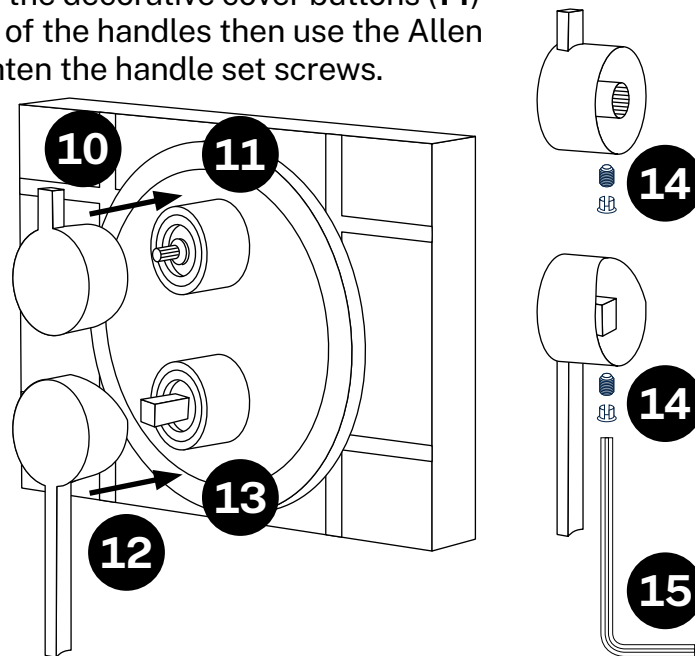

INSTALLATION INSTRUCTIONS

Then press the escutcheon plate firmly against the wall surface to ensure a snug fit and moisture seal (16).

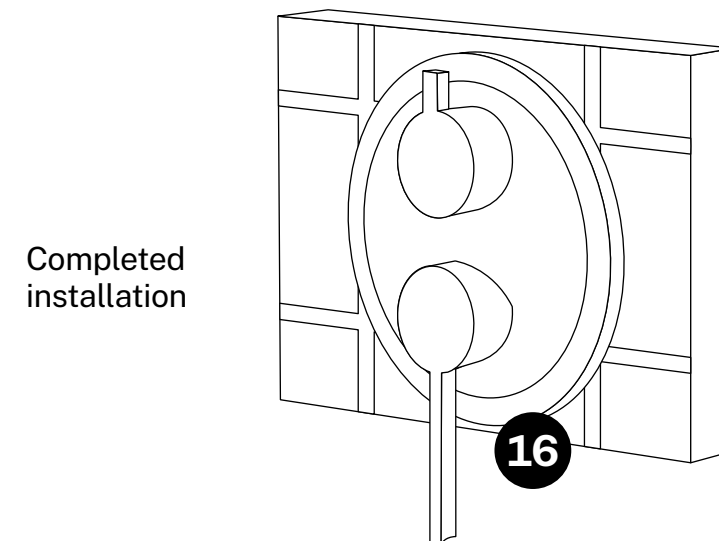

Completed installation

Need a hand? We're here to help.
Support available Mon-Fri, 9am-5pm ET
Call us: **(854) 888-9231**
Email us: contact@hammerheadshowers.com
Visit: help.theshowerheadstore.com