

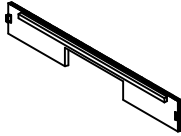





















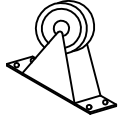



## ASSEMBLY INSTRUCTIONS

Amber

### PARTS LIST


<b>A</b> HEADBOARD (1 PC) 	<b>B</b> FOOTBOARD (1 PC) 	<b>C</b> SIDE RAIL (2 PCS) 	<b>D</b> METAL CENTER (1 PC) RAIL 2040mm 	<b>E</b> SIDE RAIL (4PCS) SUPPORT 265 x 60 x 15mm 	<b>F</b> LEGS (2 PCS) 600 x 50Hmm 
<b>G</b> SIDE RAIL (2 PCS) FRONT PANEL ( WITH LABEL 1) 	<b>H</b> SIDE RAIL (2 PCS) BACK PANEL ( WITH LABEL 2) 	<b>I</b> SIDE RAIL SIDE PANEL (4 PCS) ( WITH LABEL 3) 	<b>J</b> SIDE RAIL (2 PCS) BOTTOM PANEL ( WITH LABEL 4) 	<b>K</b> BOTTOM PANEL (4 PCS) BIG SUPPORT ( WITH LABEL 5) 	<b>L</b> BOTTOM PANEL (2 PCS) SMALL SUPPORT ( WITH LABEL 6) 
<b>M</b> SLAT (17 PCS) 1537mm 					

### HARDWARE LIST


<b>1</b> JCBC M6 X 30mm (4 PCS) 	<b>2</b> JCBC M6 X 50mm (8 PCS) 	<b>3</b> JCBB M8 x 20 mm (8 PCS) 	<b>4</b> ALLEN KEY M4 X 100mm (1 PC) 	<b>5</b> ALLEN KEY M5 X 70mm (1 PC) 
<b>6</b> CSK M3.5 x 16mm (32 PCS) 	<b>7</b> CSK M4 x 28mm (8 PCS) 	<b>8</b> CSK M4 x 32mm (54 PCS) 	<b>9</b> CSK M4 x 50mm (16 PCS) 	<b>10</b> ROLLER (8 PCS) 
<b>11</b> WOOD DOWEL 20MM (8 PCS) 	<b>12</b> M6 SPRING WASHER (4 PCS) 	<b>13</b> M6 FLAT WASHER (4 PCS) 		

## ASSEMBLY INSTRUCTIONS


Step 1 : Tighten the legs (F) to both footboard (B) as shown.

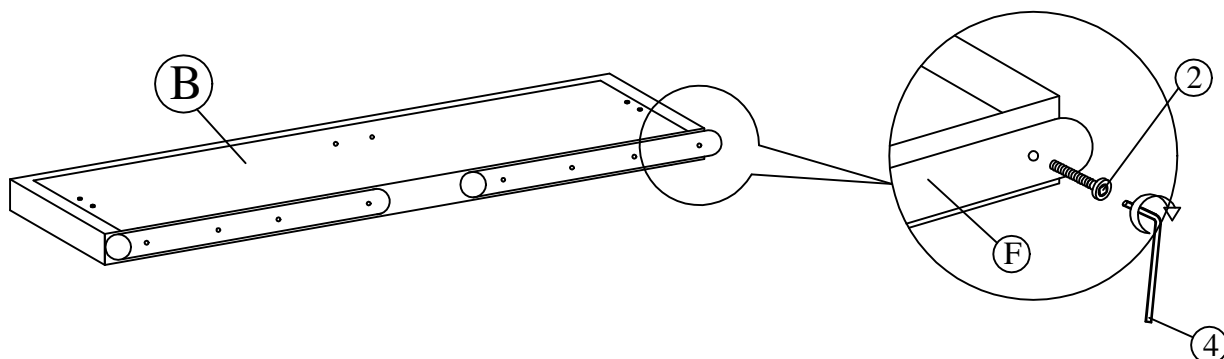

Step 2 : Attach wood dowel (11) to side rail (C). Tighten the side rail support (E) to the side rail (C) with screws (7) using screw driver (not included).

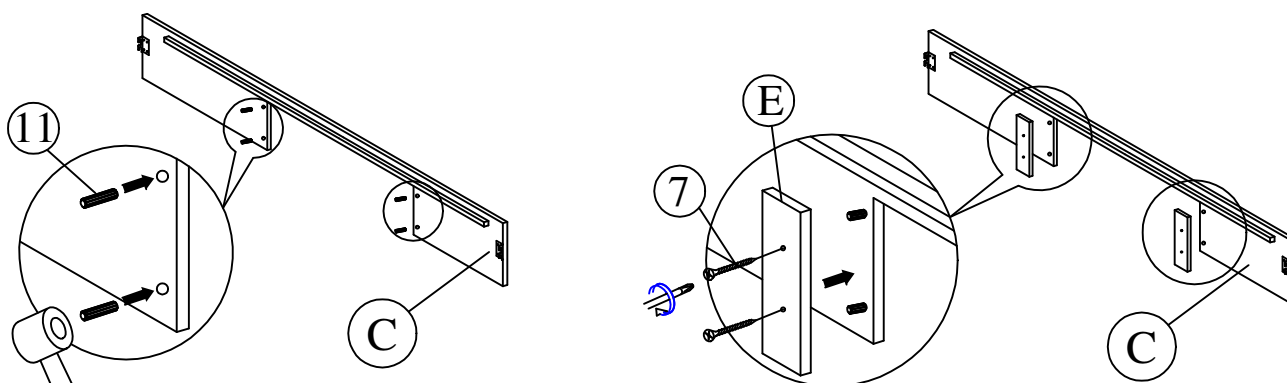


Step 3 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

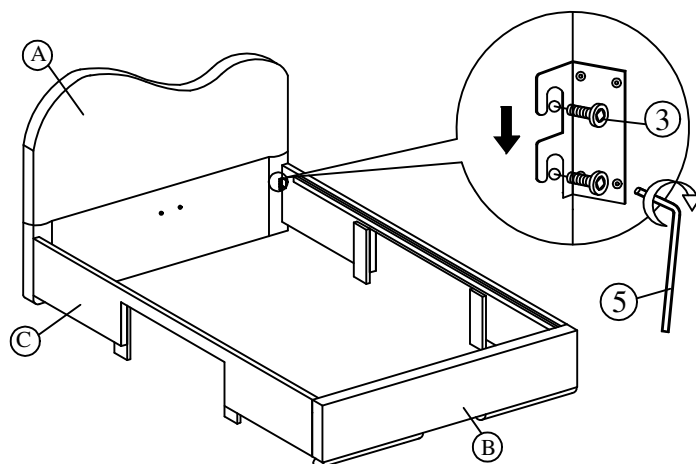


## ASSEMBLY INSTRUCTIONS


Step 4 : Attach the center rail (D) to headboard (A) and footboard (B).

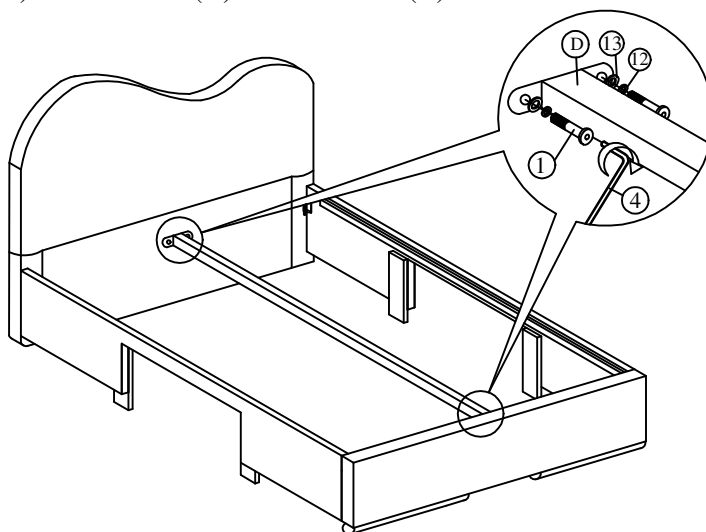

Step 5 : Tighten the side rail side panel (I) to the side rail front panel (G) and side rail back panel (H) with screws (9) using screwdriver (not included).

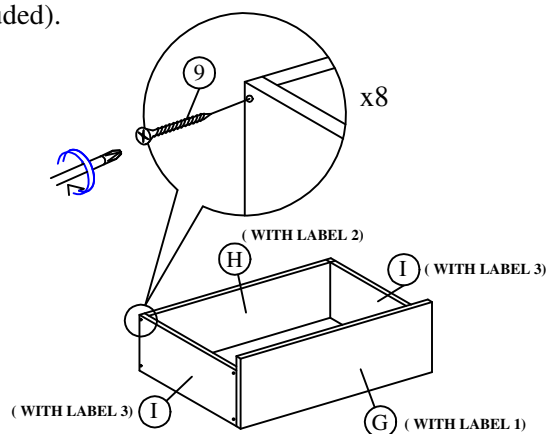


Step 6 : Slide the side rail bottom panel (J) to the set up drawer.

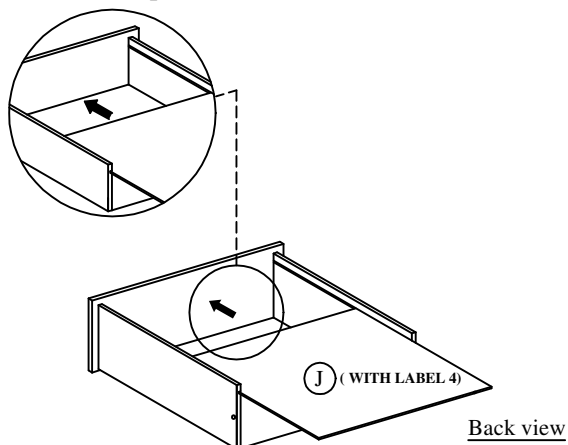


## ASSEMBLY INSTRUCTIONS


Step 7 : Tighten the bottom panel support (K & L) with screws (8) using screw driver (not included).

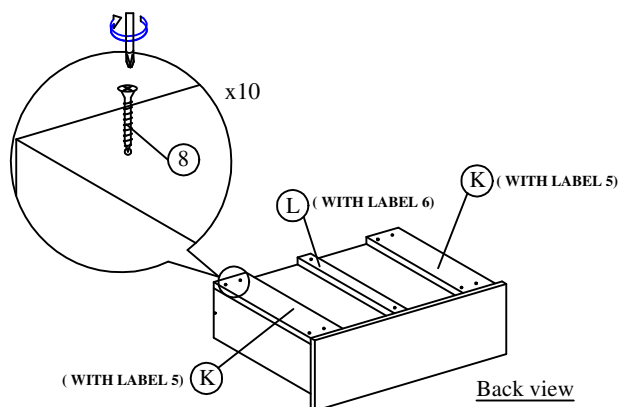

Step 8 : Tighten the roller (10) with screws (6) using screw driver (not included).

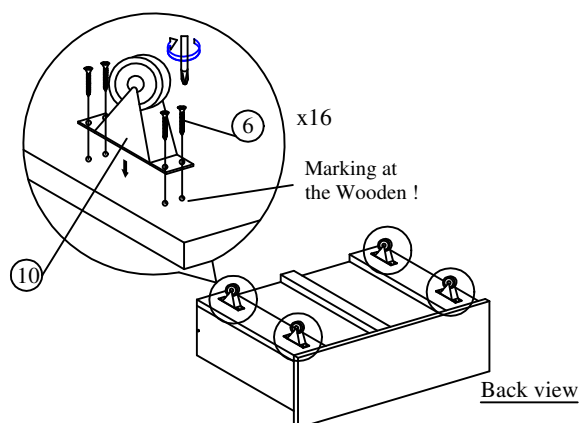

Step 9 : Affix the Slat (M) to the side rail support wood and the center rail (D). Tighten all the 4 corner.

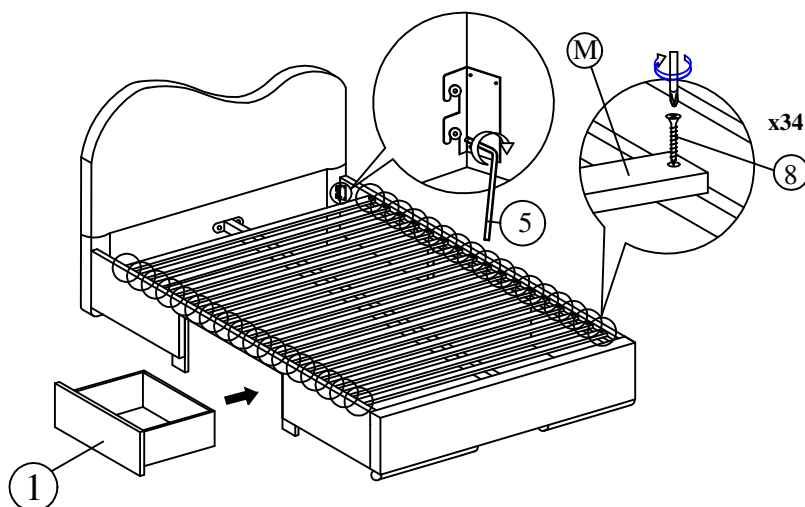

Please follow all AI instructions to ensure the bed is assembled correctly