


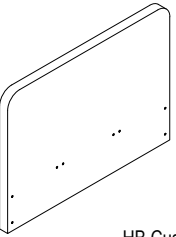
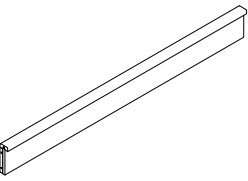
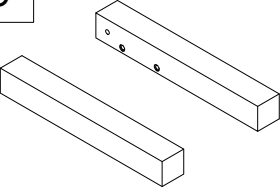
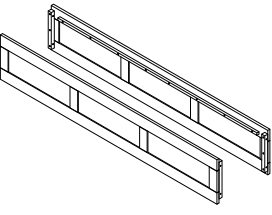
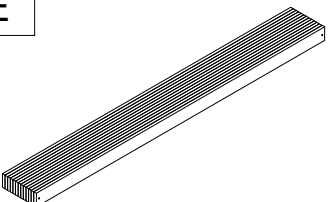
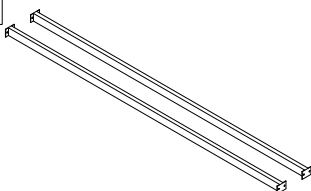
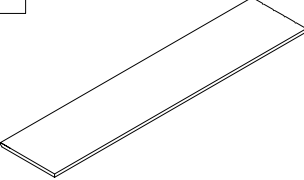
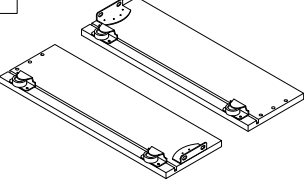
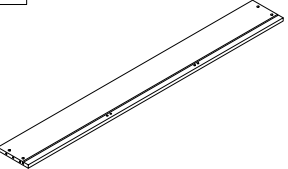
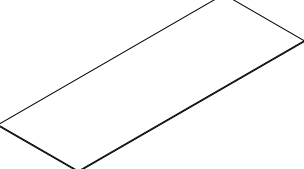
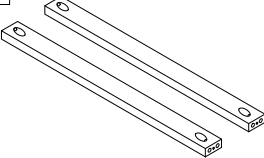
MODEL : HIDEAWAY QUEEN BED

ASSEMBLY INSTRUCTION










ASSEMBLY TIPS : Remove hardware from box and sort by size. Check that all hardware and parts are present before assembling. Following instruction below in proper sequence to ensure fast, easy and correct assembly.

 WARNING : DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ALL PARTS IN PLACE. FAILURE TO FOLLOW THIS INSTRUCTION MAY CAUSE THE BOLTS TO BE MISALIGNED DURING THE ASSEMBLY.


PART LIST

<div>A</div>  <div>HB Cushion x 1</div>	<div>B</div>  <div>FB Panel x 1</div>	<div>C</div>  <div>FB Post x 2</div>	<div>D</div>  <div>Side Panel x 2</div>
<div>E</div>  <div>Slat x 13</div>	<div>F</div>  <div>Center Metal x 2</div>	<div>G</div>  <div>Drawer Panel x 1</div>	<div>H</div>  <div>Drawer Side x 2</div>
<div>I</div>  <div>Drawer Back x 1</div>	<div>J</div>  <div>Drawer Btm x 1</div>	<div>K</div>  <div>Drawer Btm Support x 2</div>	


HARDWARE LIST

<div>a</div>  <div>JCBC M6 x 15 mm = 12 pcs</div>	<div>b</div>  <div>JCBC M6 x 50 mm = 12 pcs</div>	<div>c</div>  <div>JCBC M6 x 70 mm = 4 pcs</div>	<div>d</div>  <div>Flat Washer M6 = 12 pcs</div>	<div>e</div>  <div>Wood Dowel 10 x 30 mm = 2 pcs</div>
<div>f</div>  <div>Wood Dowel 8 x 30 mm = 10 pcs</div>	<div>g</div>  <div>Barrel Nut = 4 pcs</div>	<div>h</div>  <div>CSK M4 x 25 mm = 30 pcs</div>	<div>i</div>  <div>Allen Key M4 = 1 pc</div>	


Step 01

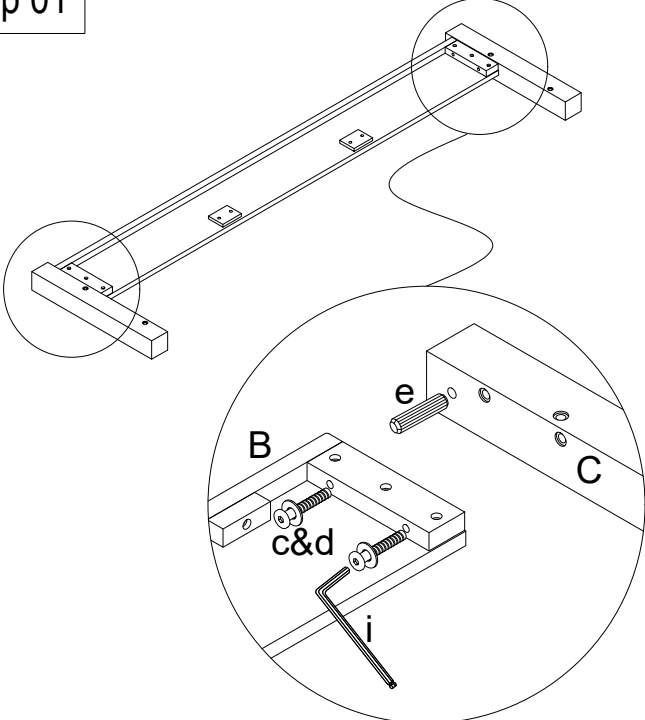


Step 02

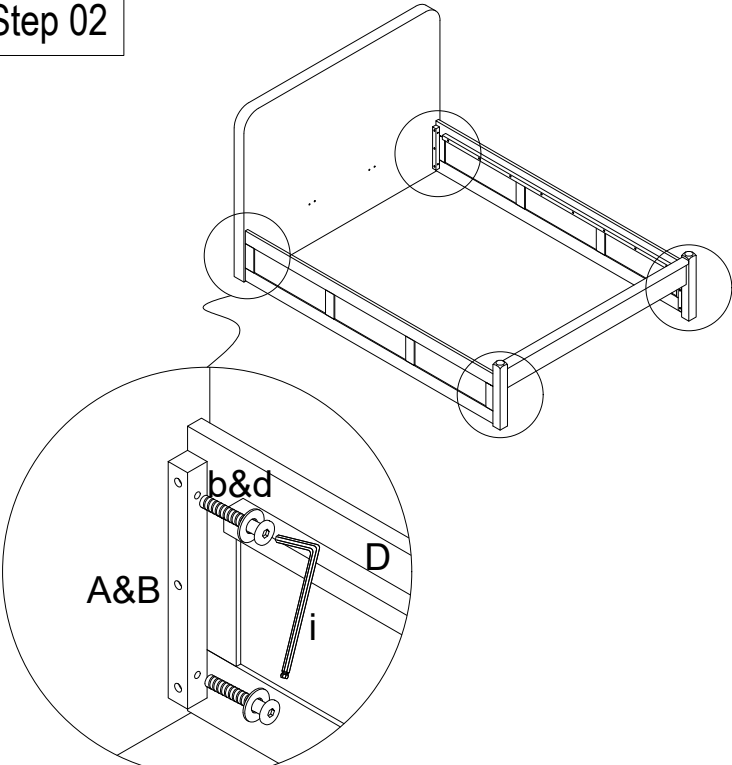


Step 03

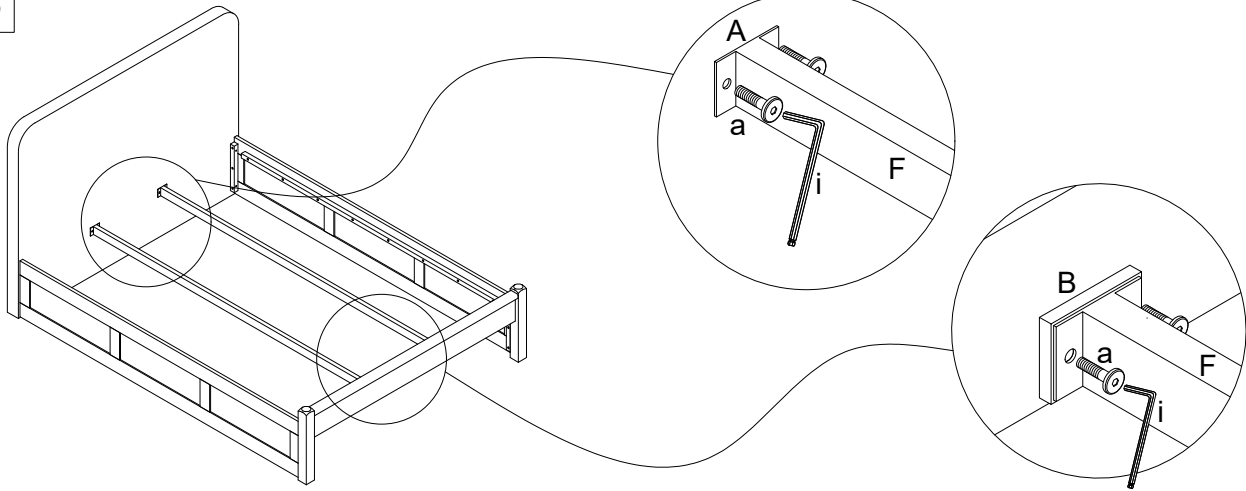


Step 05

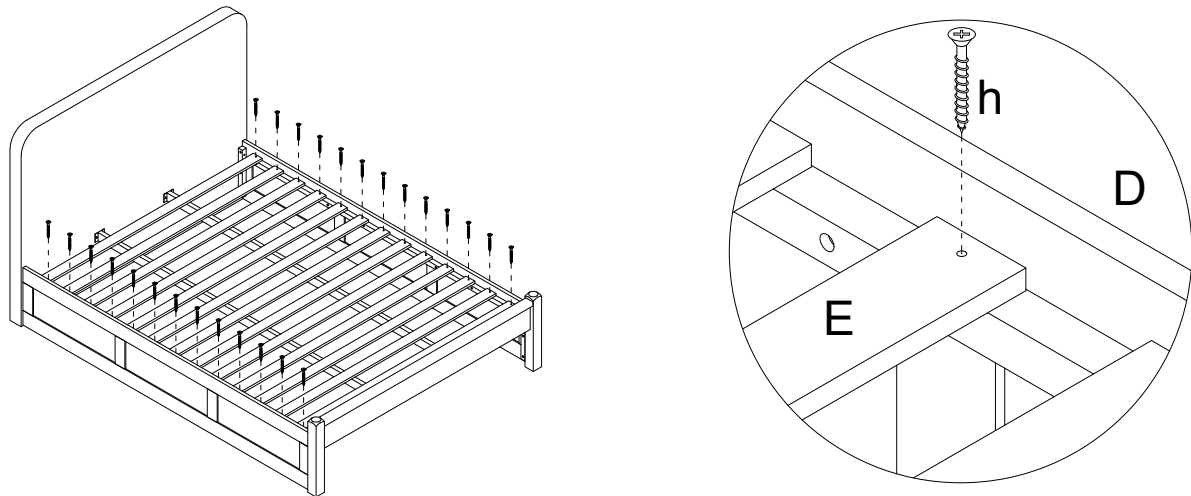



Step 07

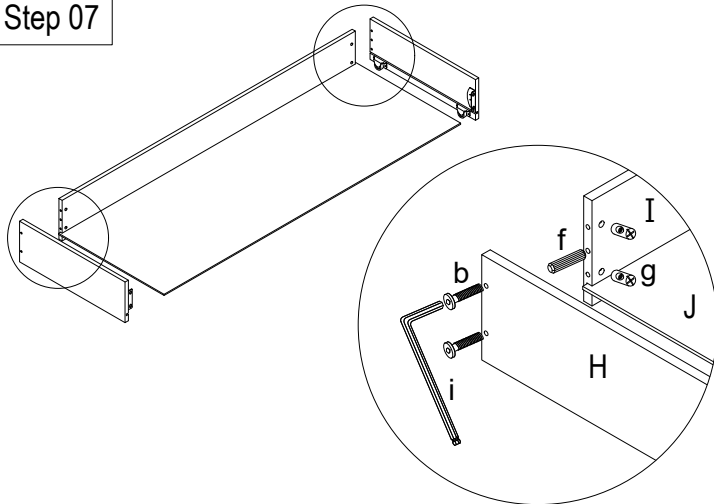

Step 08

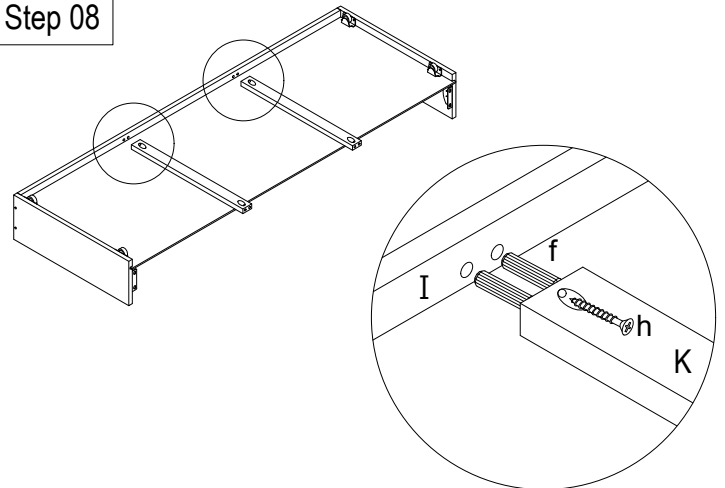

Step 09

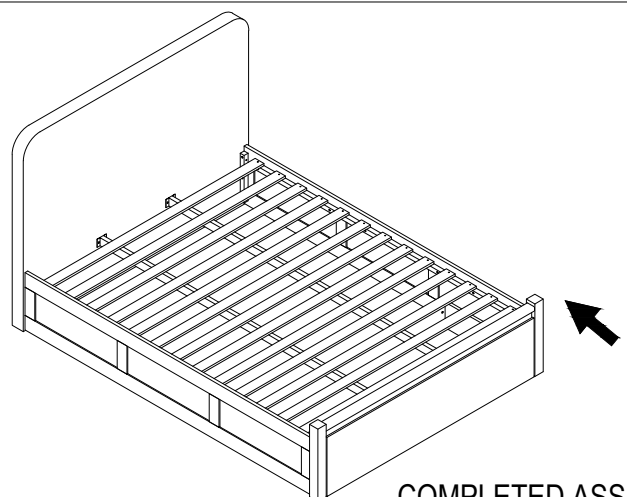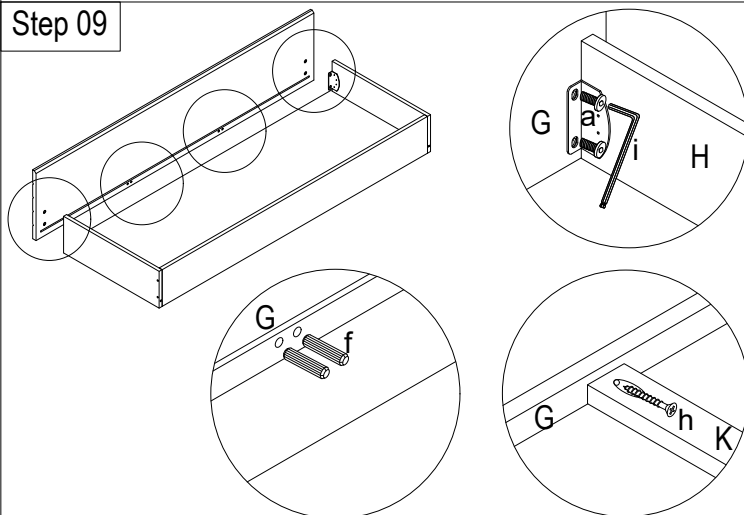

COMPLETED ASSEMBLY