

ASSEMBLY TIPS : Remove hardware from box and sort by size. Check that all hardware and parts are present before assembling. Following instruction below in proper sequence to ensure fast, easy and correct assembly.




WARNING : DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ALL PARTS IN PLACE. FAILURE TO FOLLOW THIS INSTRUCTION MAY CAUSE THE BOLTS TO BE MISALIGNED DURING THE ASSEMBLY.

Part List


Step 01

A

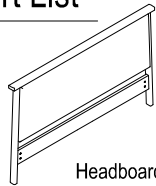


Headboard x 1 pc

B

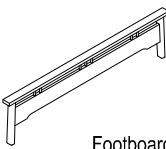


Footboard x 1 pc

C

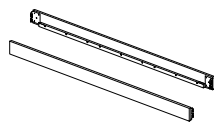


Side Rail x 2 pcs

D

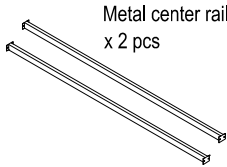

Metal center rail  
x 2 pcs

E

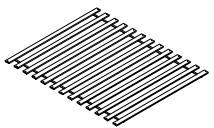

Slat x 1 pack

Hardware List

1



x 8

JCBB M8 x 20 mm


2



x 8

JCBC M6 x 20 mm

3



x 26

CSK M4 x 25 mm

4



x 1

Allen Key M4

5



x 1

Allen Key M5

