



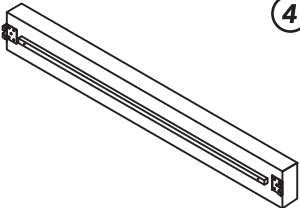
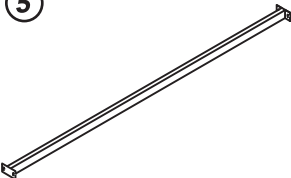
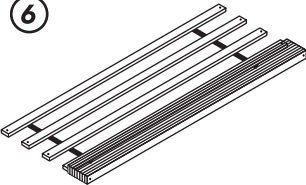
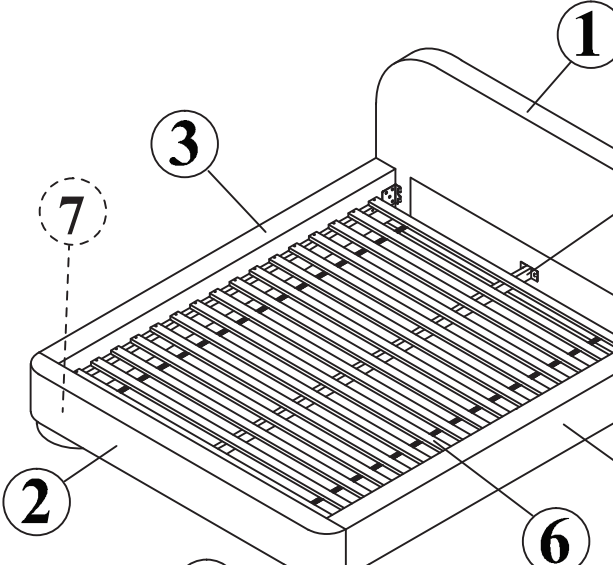

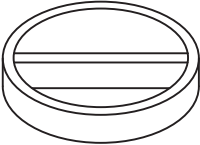





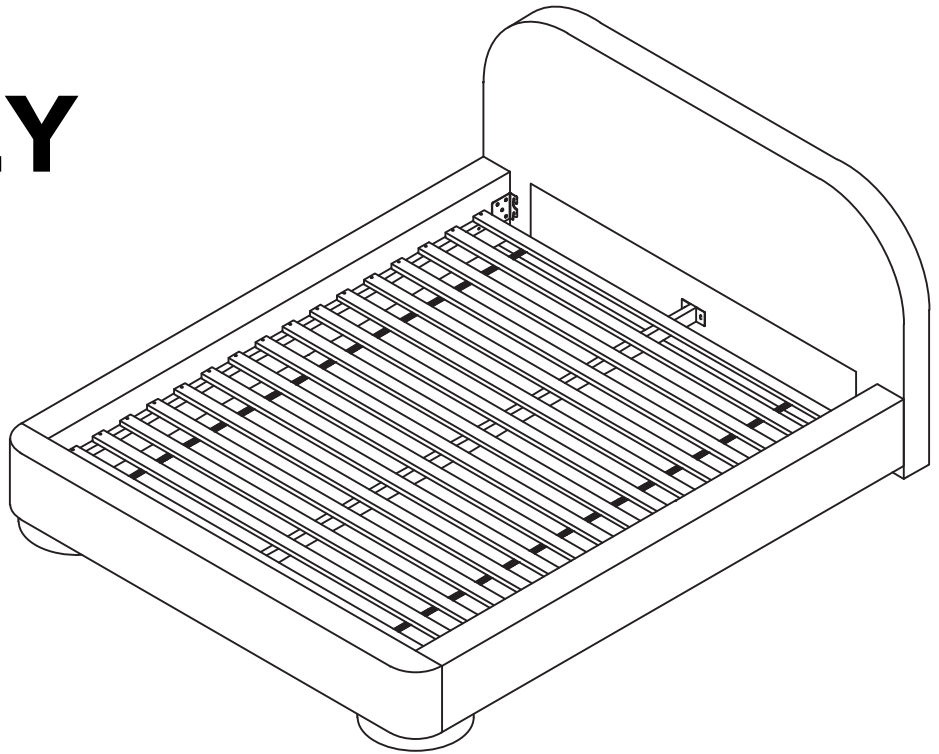

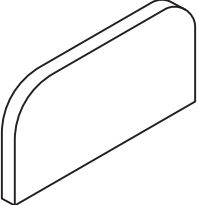

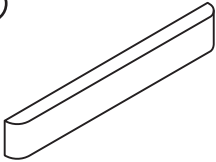


## SYDNEY




- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at [customercare@b2cfurniture.com.au](mailto:customercare@b2cfurniture.com.au) We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!

# SYDNEY


 <b>Headboard (1)</b>	 <b>Footboard (1)</b>	 <b>Siderail Left (1)</b>	 <b>Siderail Right (1)</b>
 <b>Metal Center Support (1)</b>	 <b>Slats (1)</b>		
 <b>L Bracket (2)</b>	 <b>Bed Leg (2)</b>		

 <b>M8 x 20mm A (8)</b>	 <b>M6 x 25mm B (6)</b>	 <b>M8 x 25mm C (2)</b>	 <b>M8 x 18mm D (8)</b>	 <b>M8 x 13mm E (8)</b>
 <b>M6 x 19mm F (6)</b>	 <b>M6 x 12mm G (6)</b>	 <b>CSK M4 x 38mm H (32)</b>	 <b>M4 I (1)</b>	 <b>M5 J (1)</b>


M6  
M8  
M10



## 1.

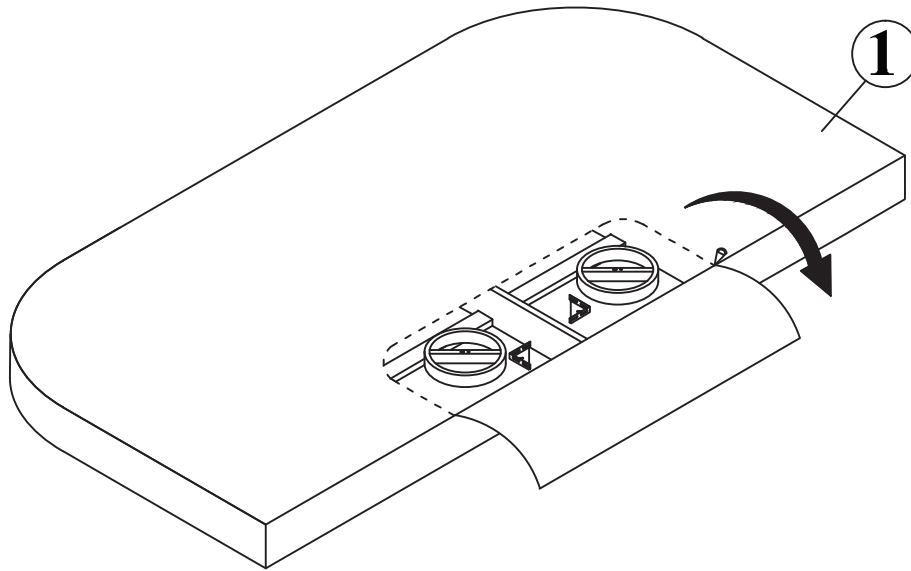



## 2.

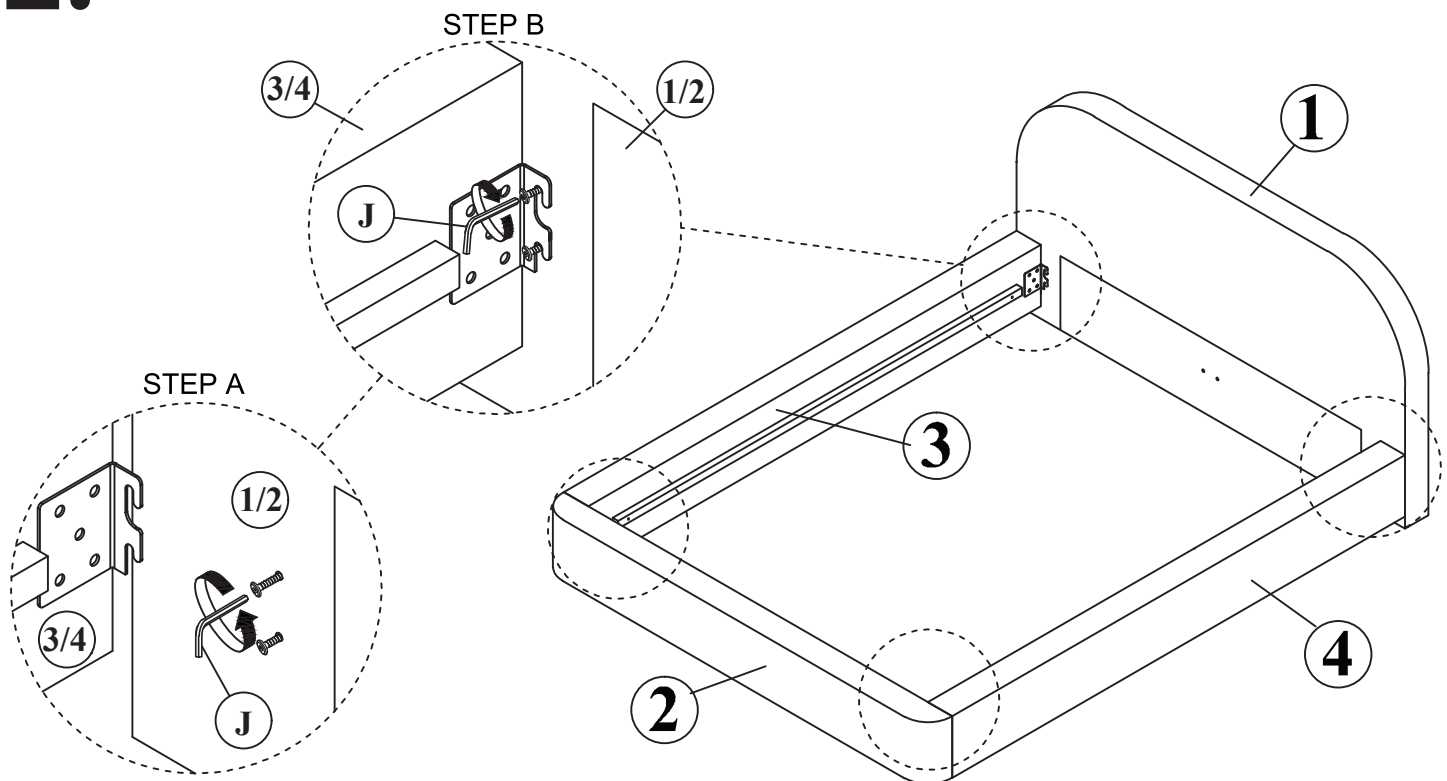


Upzip the black non woven fabric on the back of headboard and take out all the parts.

**Attention: Zip the black non woven fabric after take out the parts.**


Use the **Allen Key M5 (J)** to turn loose all the **JCBB Bolt** prefix at **Headboard (1) & Footboard (2)** and don't pull out. Hang the **Siderail Left & Right (3 & 4)** to **Headboard (1) & Footboard (2)**. Tighten then after assembly the **Siderails**.

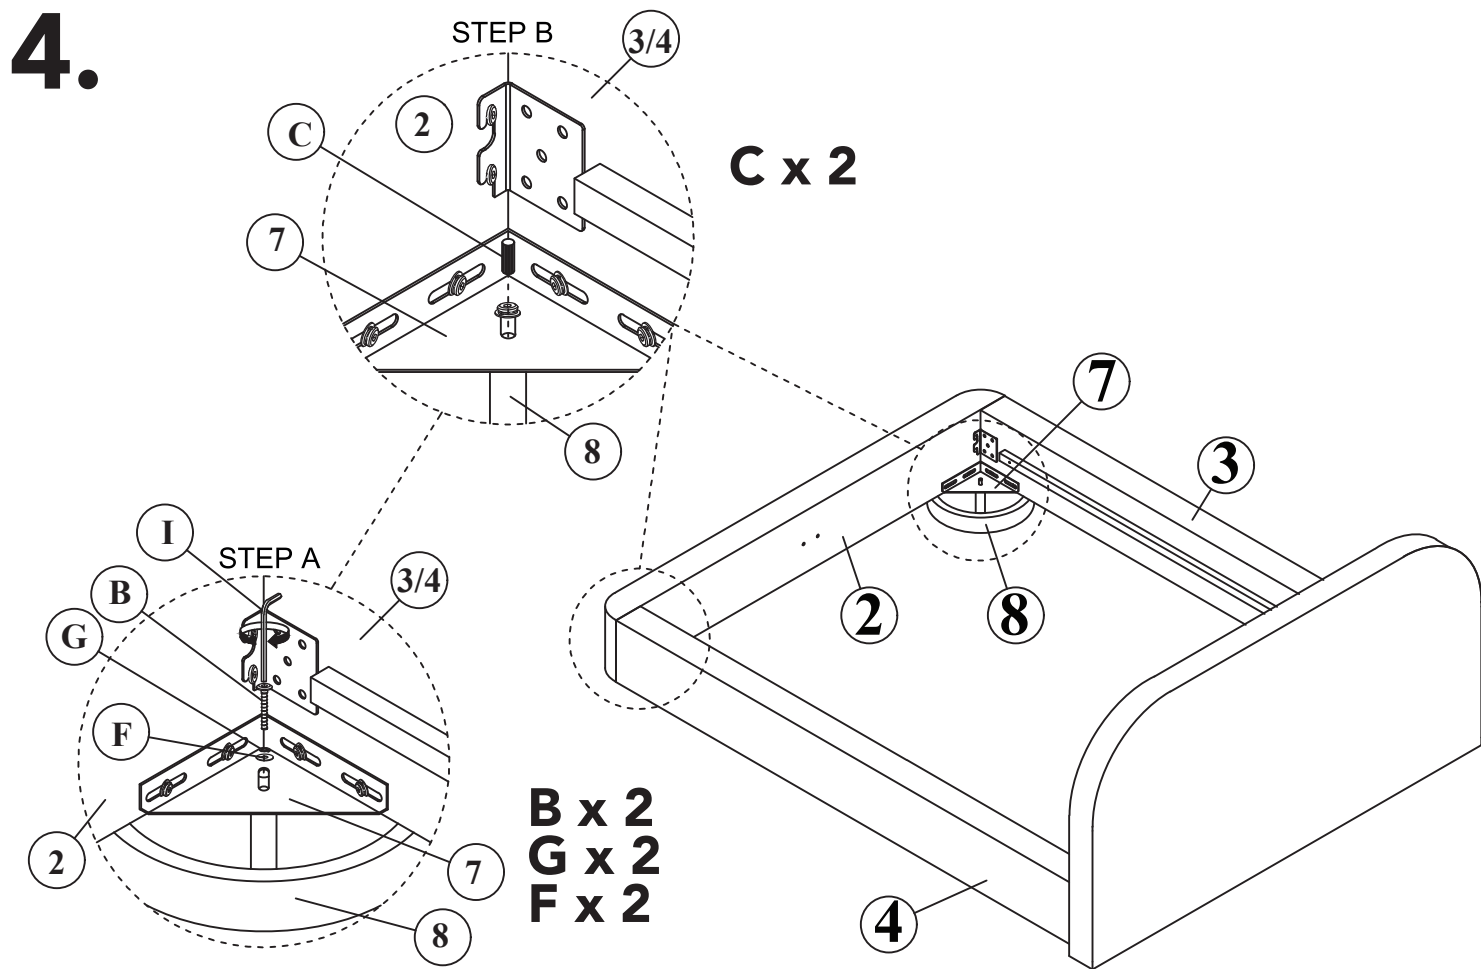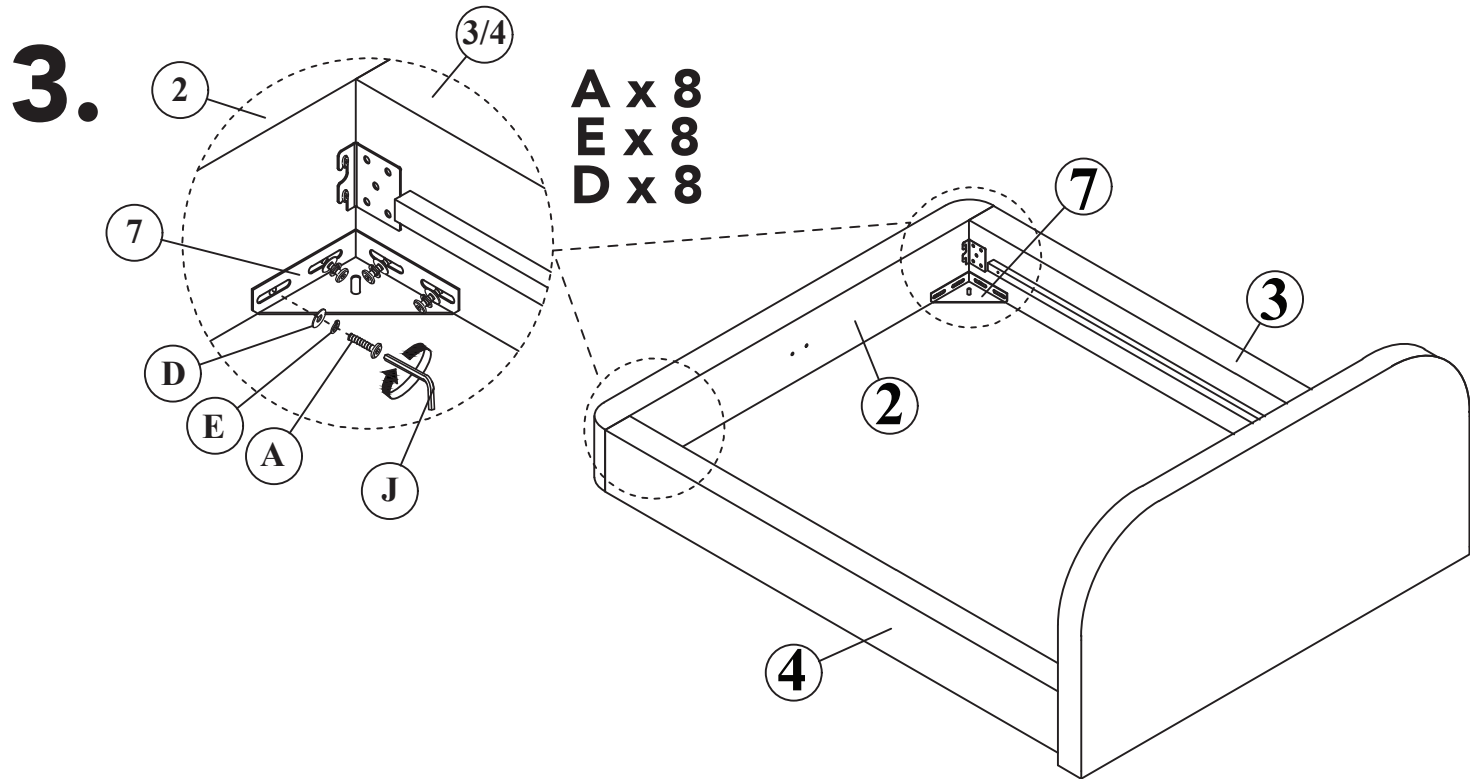


5.

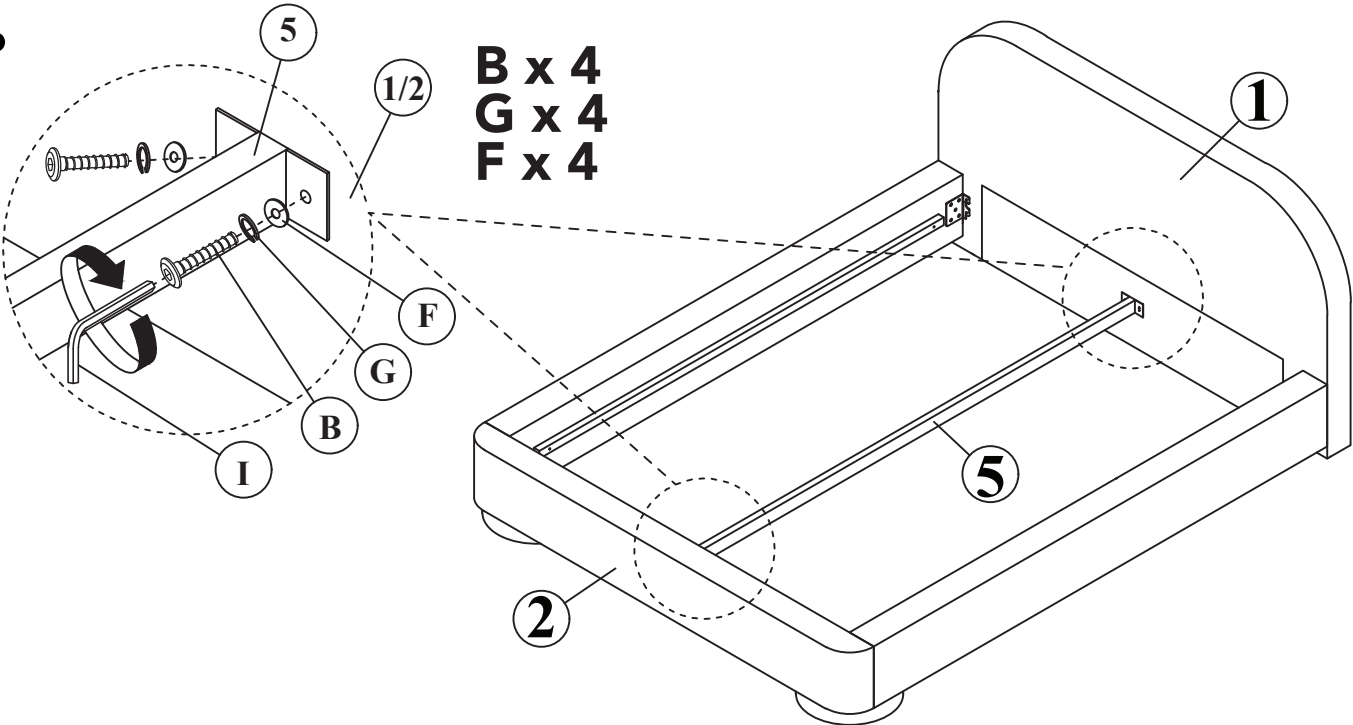

6.

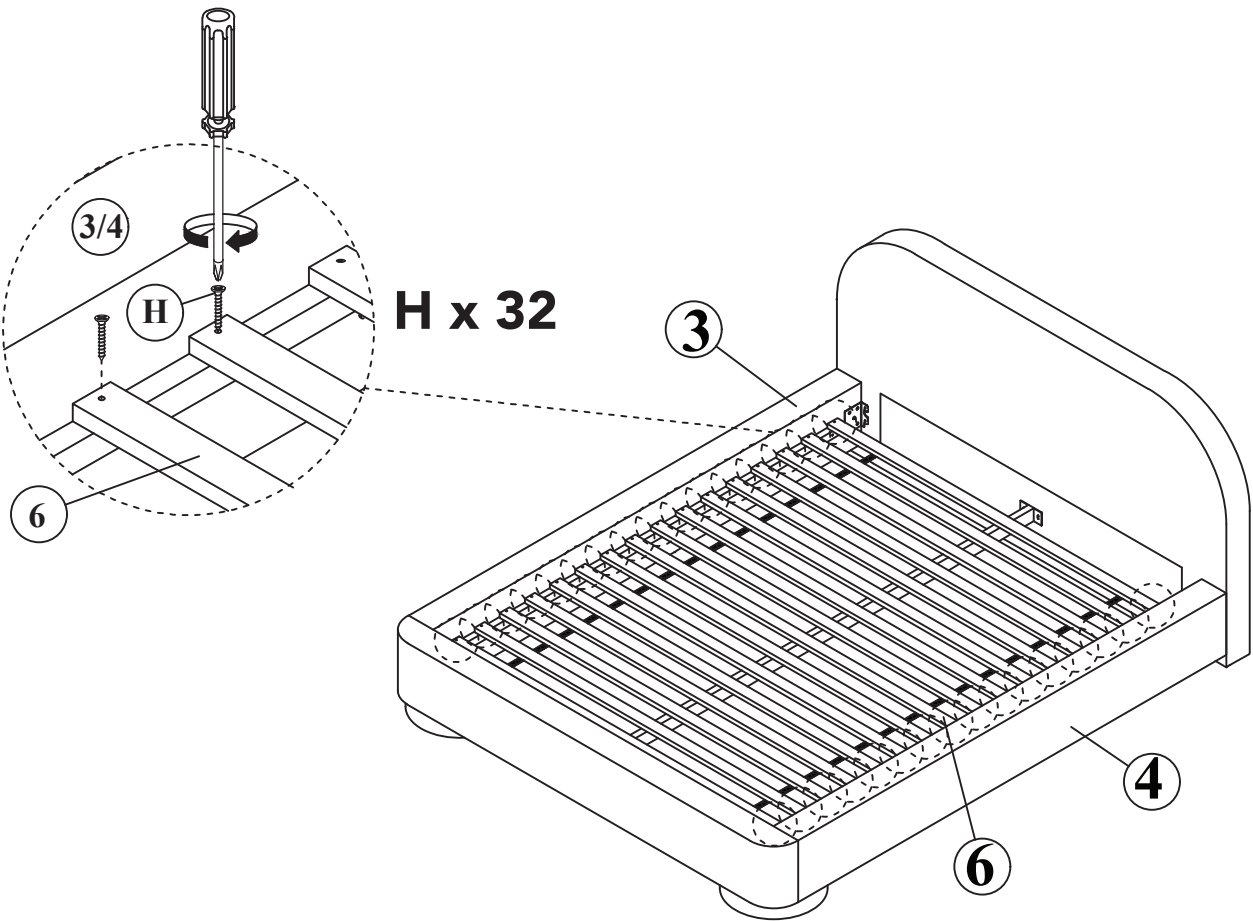

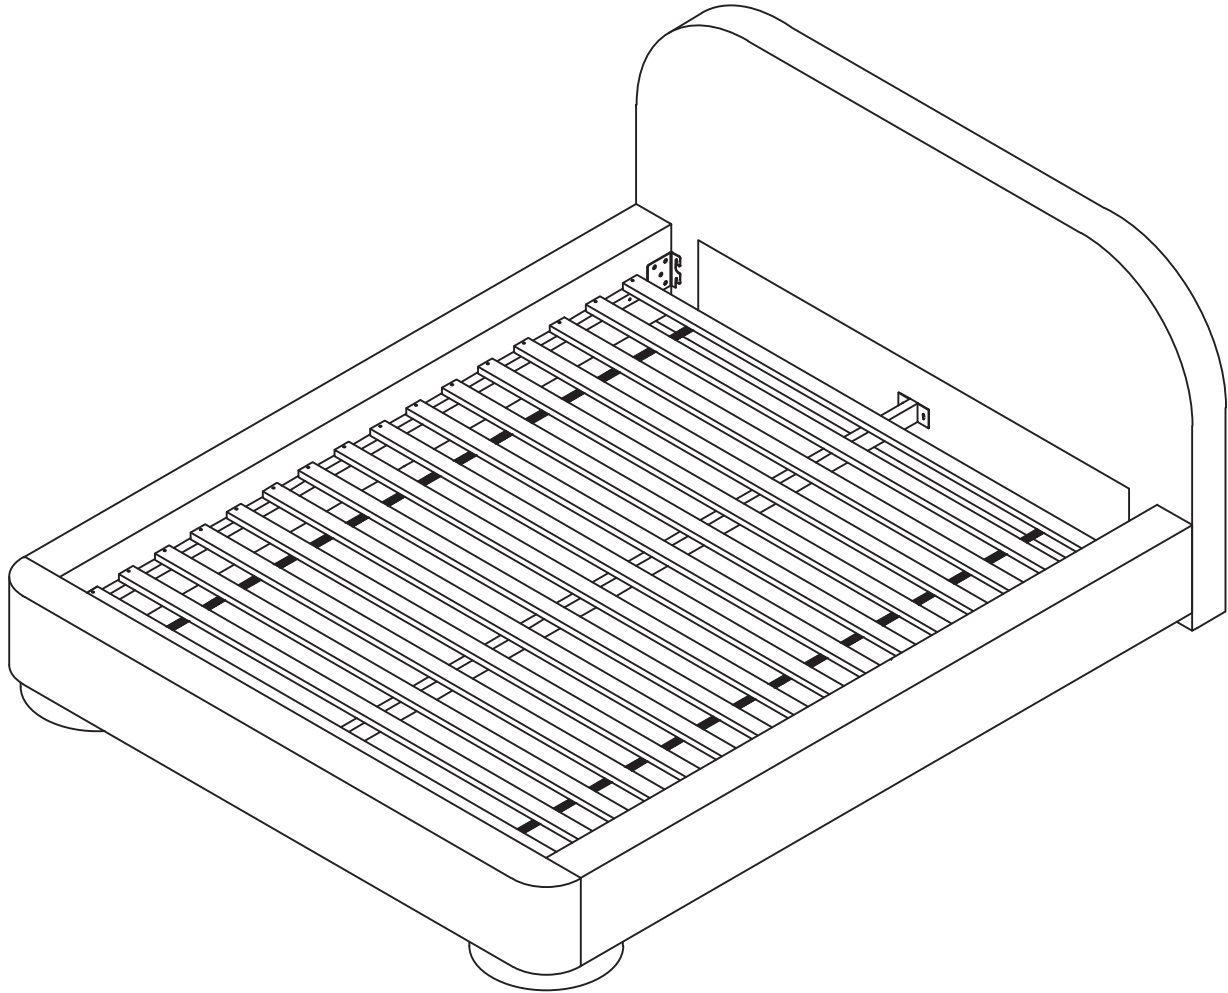

Assembled Completed

**Reminder: Please ensure all bolts and screw are tightened and secure before you use it.**