



MYER

Triple Bunk Bed

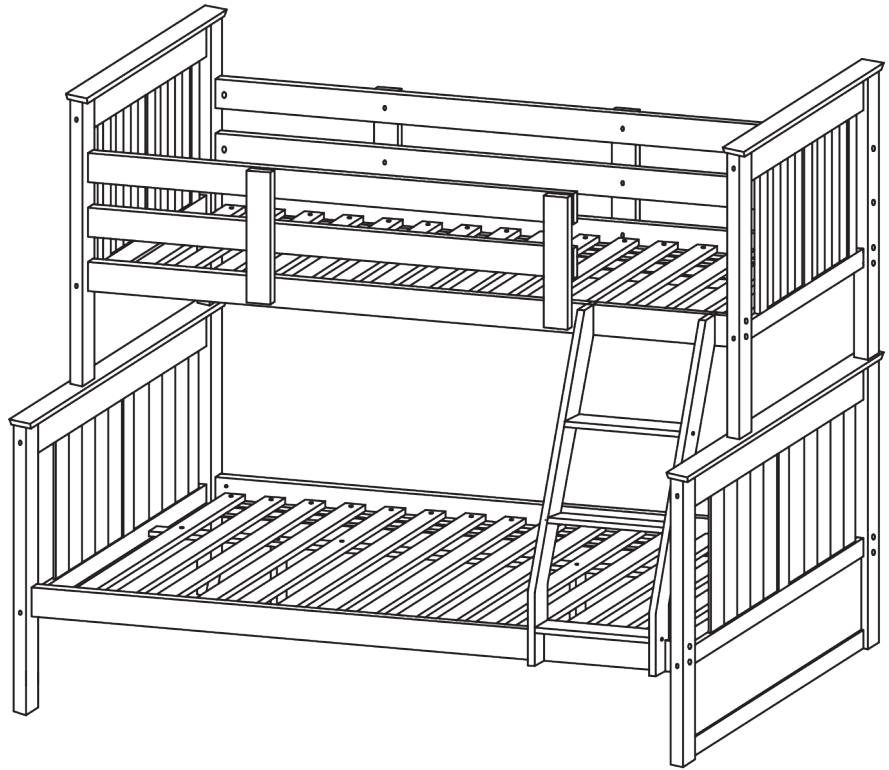

- Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and have successfully completed the assembly
- Before starting the assembly, please spend a short time looking through this leaflet.
- We suggest building your item on a soft surface such as a rug or carpet, or even the packaging this item arrived in. This will help protect the product and your floor!
- Please only use the appropriate tools needed for each task as indicated or mentioned.
- Ensure you have 2 people if your product is heavy or large, or awkward for you.
- Assemble all components loosely until the final stages.
- Keep the assembly tools with the instructions. depending on use, it will be necessary to perform maintenance or upkeep on your product.
- Please keep small pieces out of reach of small children
- If you encounter any issues or concerns before, during or after assembly, be they large, small or strange, please let us know at customercare@b2cfurniture.com.au We have a dedicated support team with solutions and remedies ready to put them into action for you.
- Final step, enjoy your furniture!

MYER Triple Bunk Bed

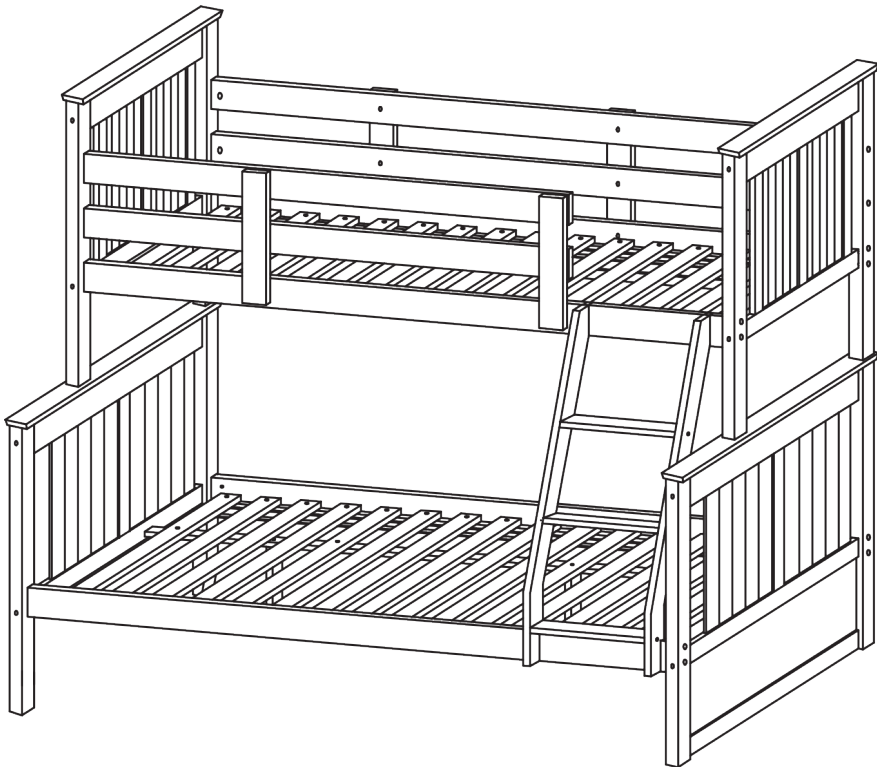

- M6
- M8
- M10



M6 x 90mm

1(38)



M6 x 35mm

2(14)



Allen Key

3(1)



M6 x 13mm

4(38)




M8 x 30mm

5(44)



M9.5 x 105mm

6(4)



M3.5 x 16mm

7(2)



M6 x 50mm

8(8)



M4 x 32mm

9(60)

























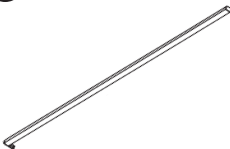



M6 x 16mm

10(4)

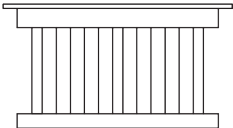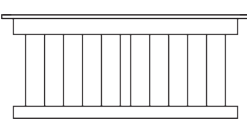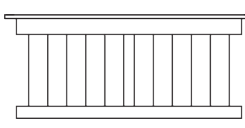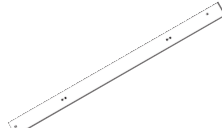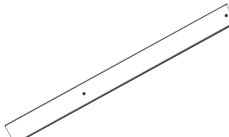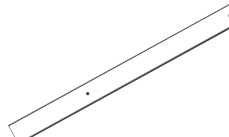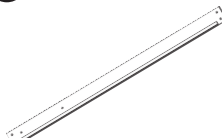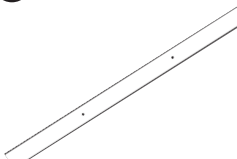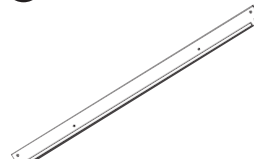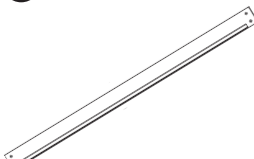


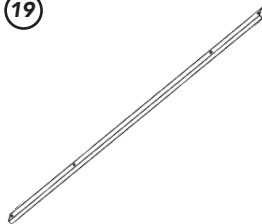MYER Triple Bunk Bed

<div>1</div>  <div>A(2)</div>	<div>2</div>  <div>B - Footboard(2)</div>	<div>3</div>  <div>B - Headboard(2)</div>	<div>4</div>  <div>C(1)</div>	<div>5</div>  <div>D(2)</div>
<div>6</div>  <div>E(1)</div>	<div>7</div>  <div>F(2)</div>	<div>8</div>  <div>G1(1)</div>	<div>9</div>  <div>G2(1)</div>	<div>10</div>  <div>H(2)</div>
<div>11</div>  <div>I(2)</div>	<div>12</div>  <div>J(1)</div>	<div>13</div>  <div>K(1)</div>	<div>14</div>  <div>L(1)</div>	<div>15</div>  <div>M(1)</div>
<div>16</div>  <div>N(4)</div>	<div>17</div>  <div>O(2)</div>	<div>18</div>  <div>P(3)</div>	<div>19</div>  <div>Q(1)</div>	<div>20</div>  <div>R(2)</div>
<div>21</div>  <div>S(1)</div>	<div>22</div>  <div>T(1)</div>	<div>23</div>  <div>U(2)</div>	<div>24</div>  <div>V(2)</div>	<div>25</div>  <div>W(1)</div>




1.

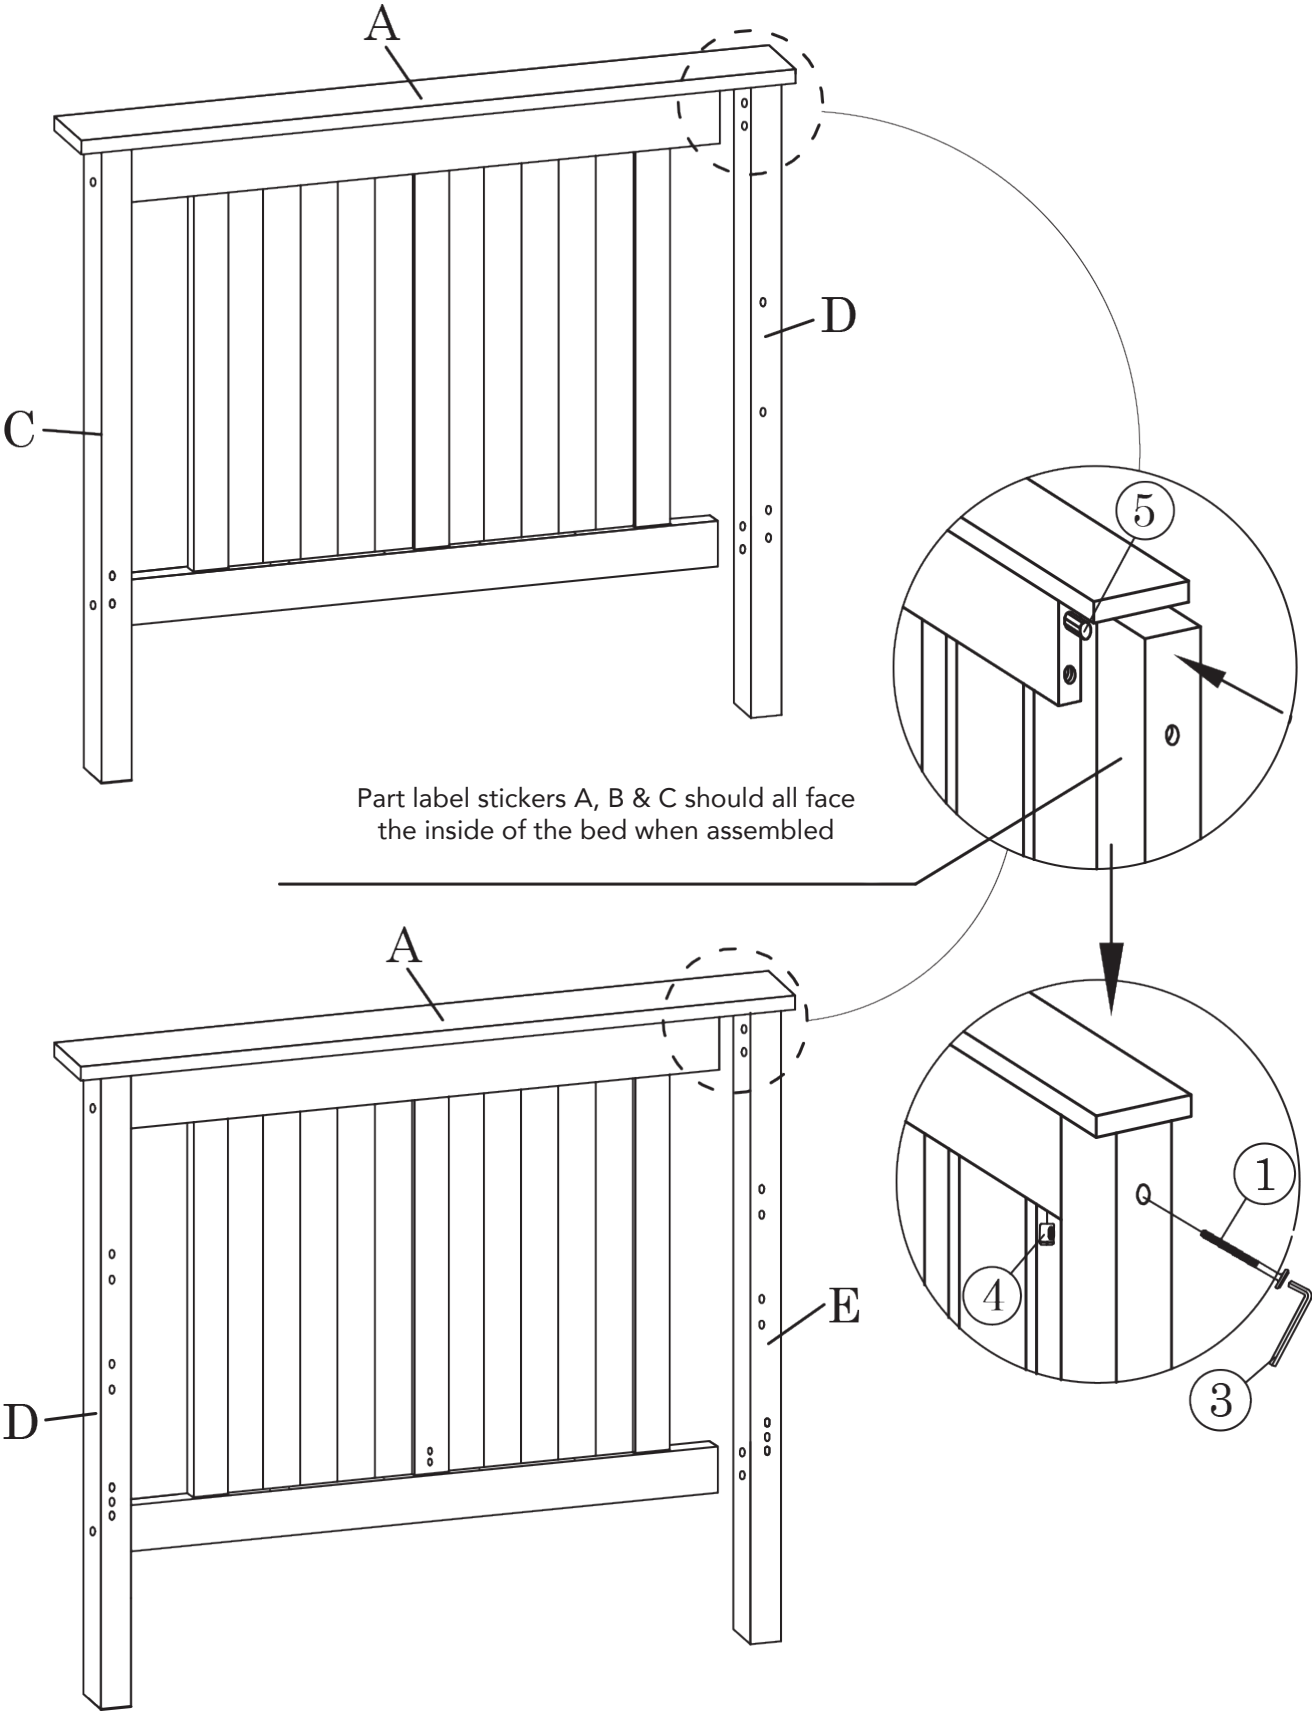

2.


Please ensure you have **Part B** panels facing the correct direction as indicated so that the single bed can be mounted correctly in step 8

Part label stickers A, B & C should all face the inside of the bed when assembled

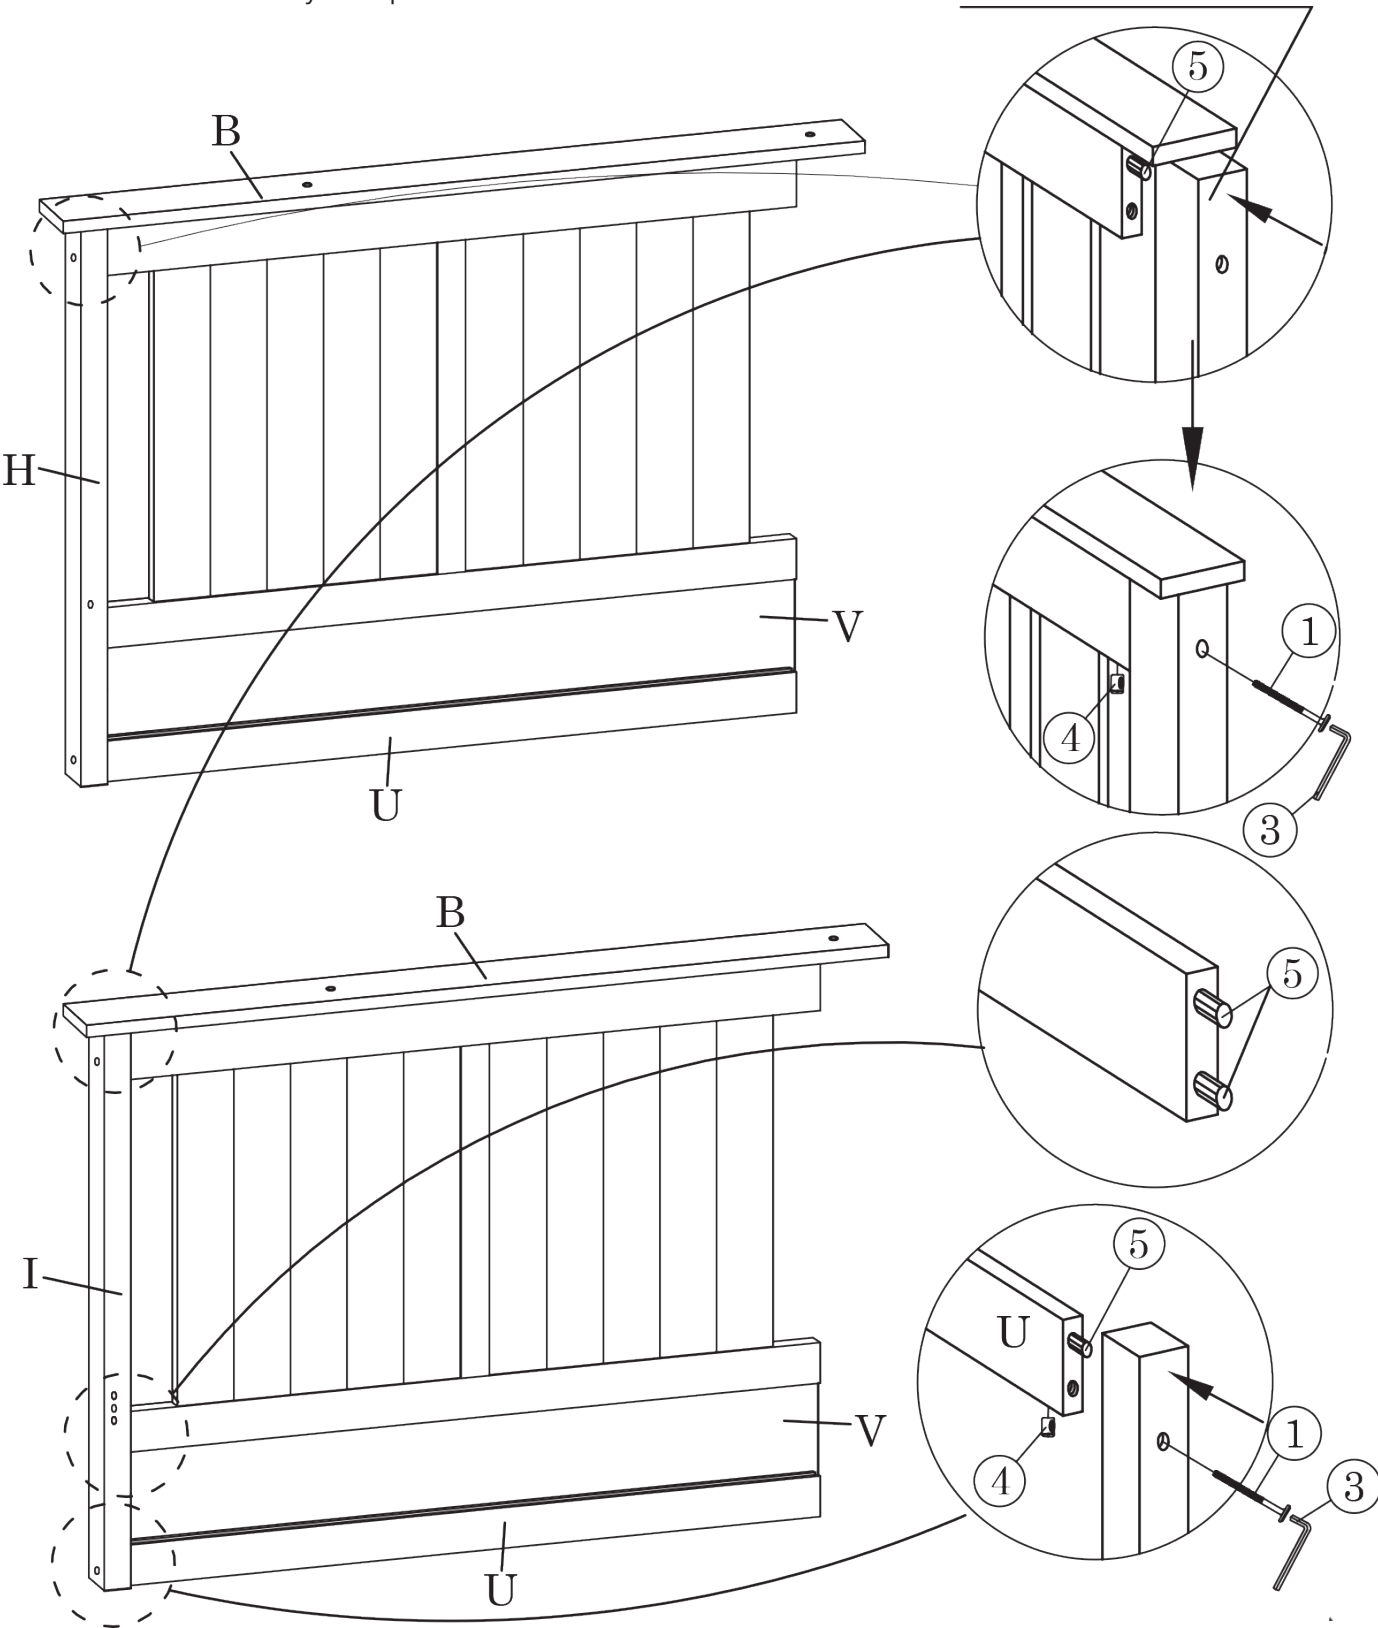


3.


Part label stickers A, B & C
should all face the inside of the
bed when assembled

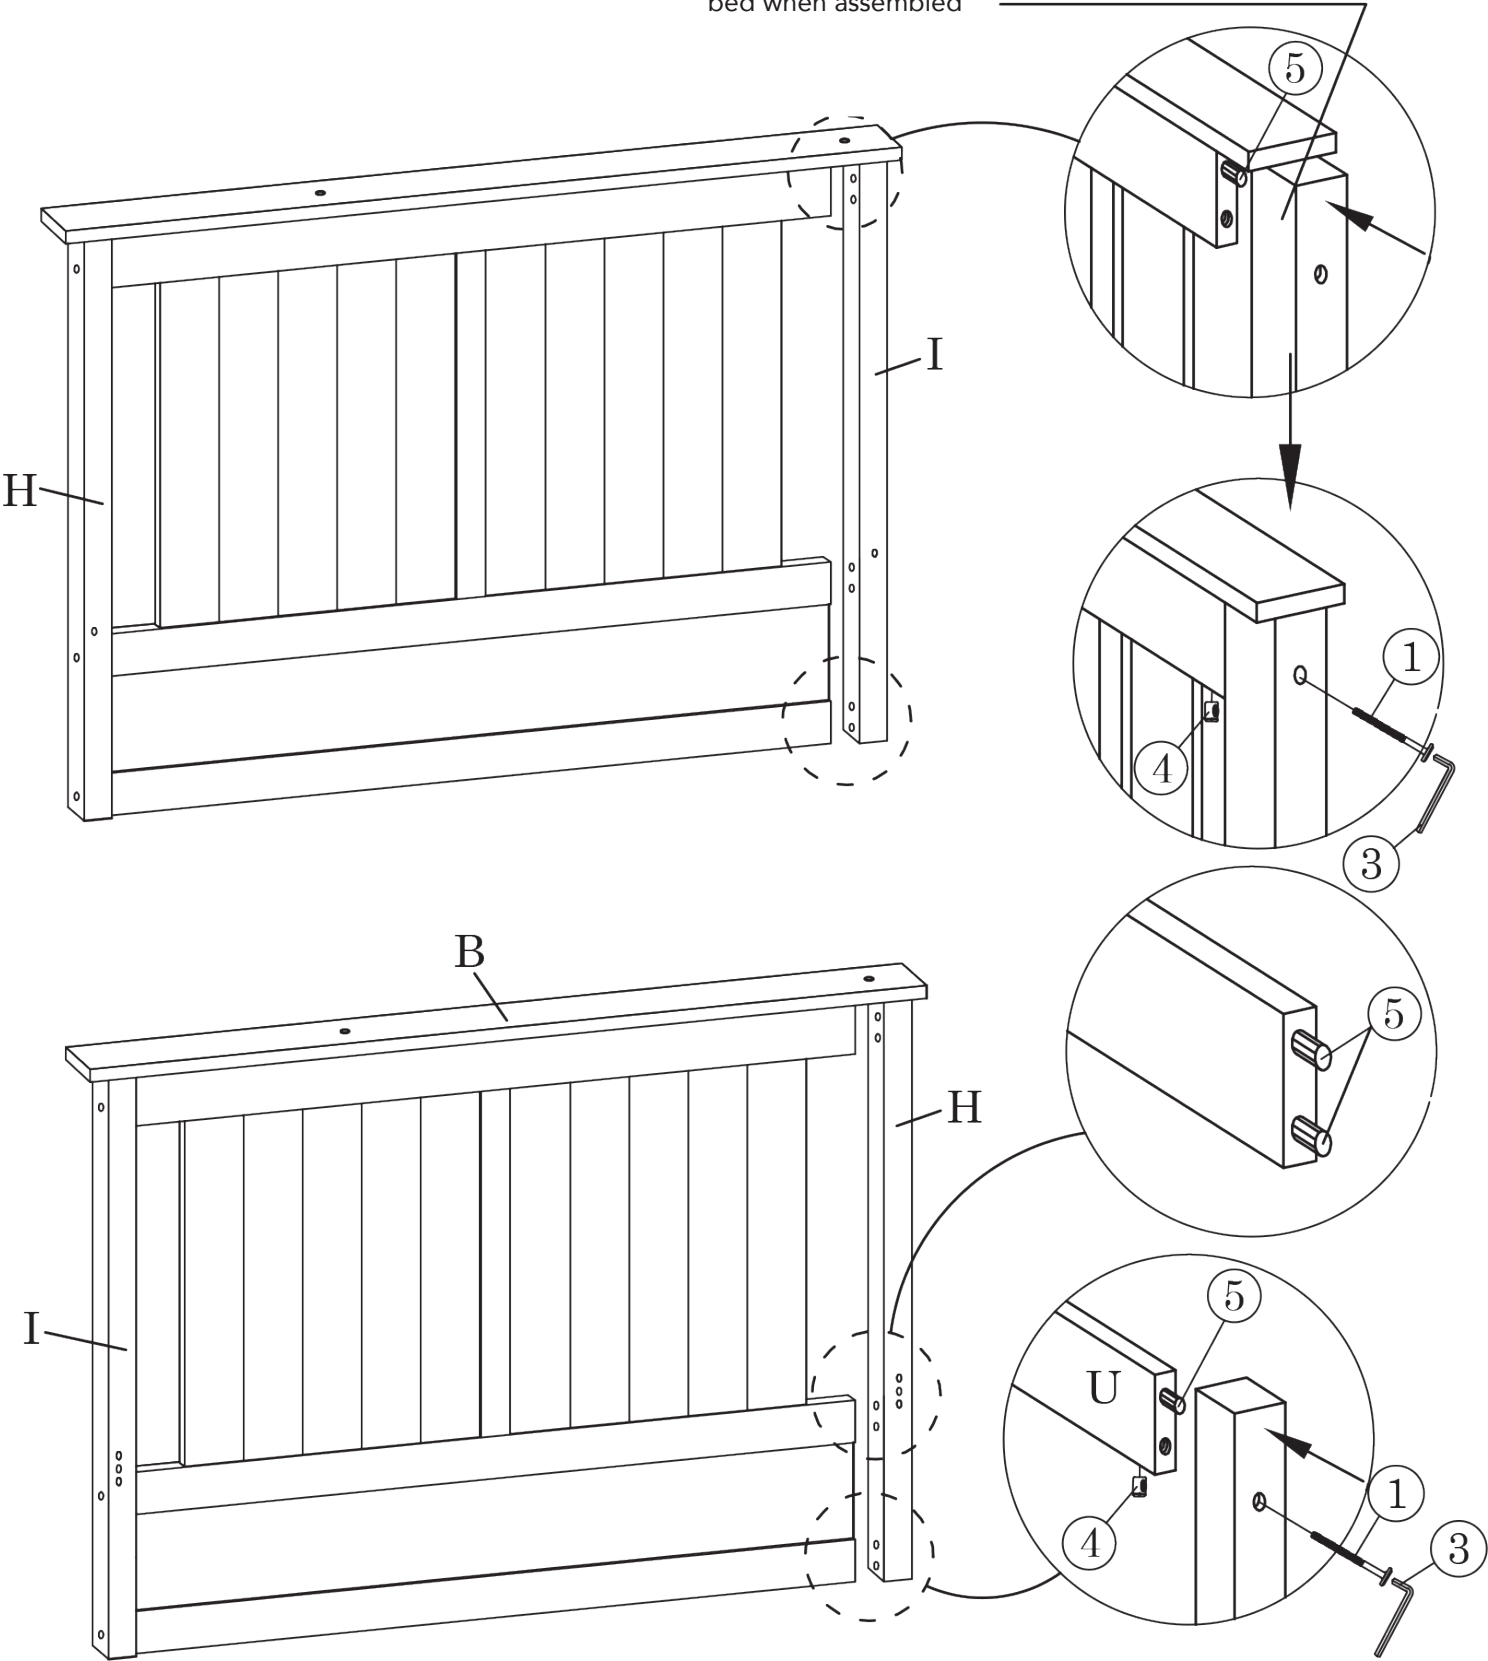


4.

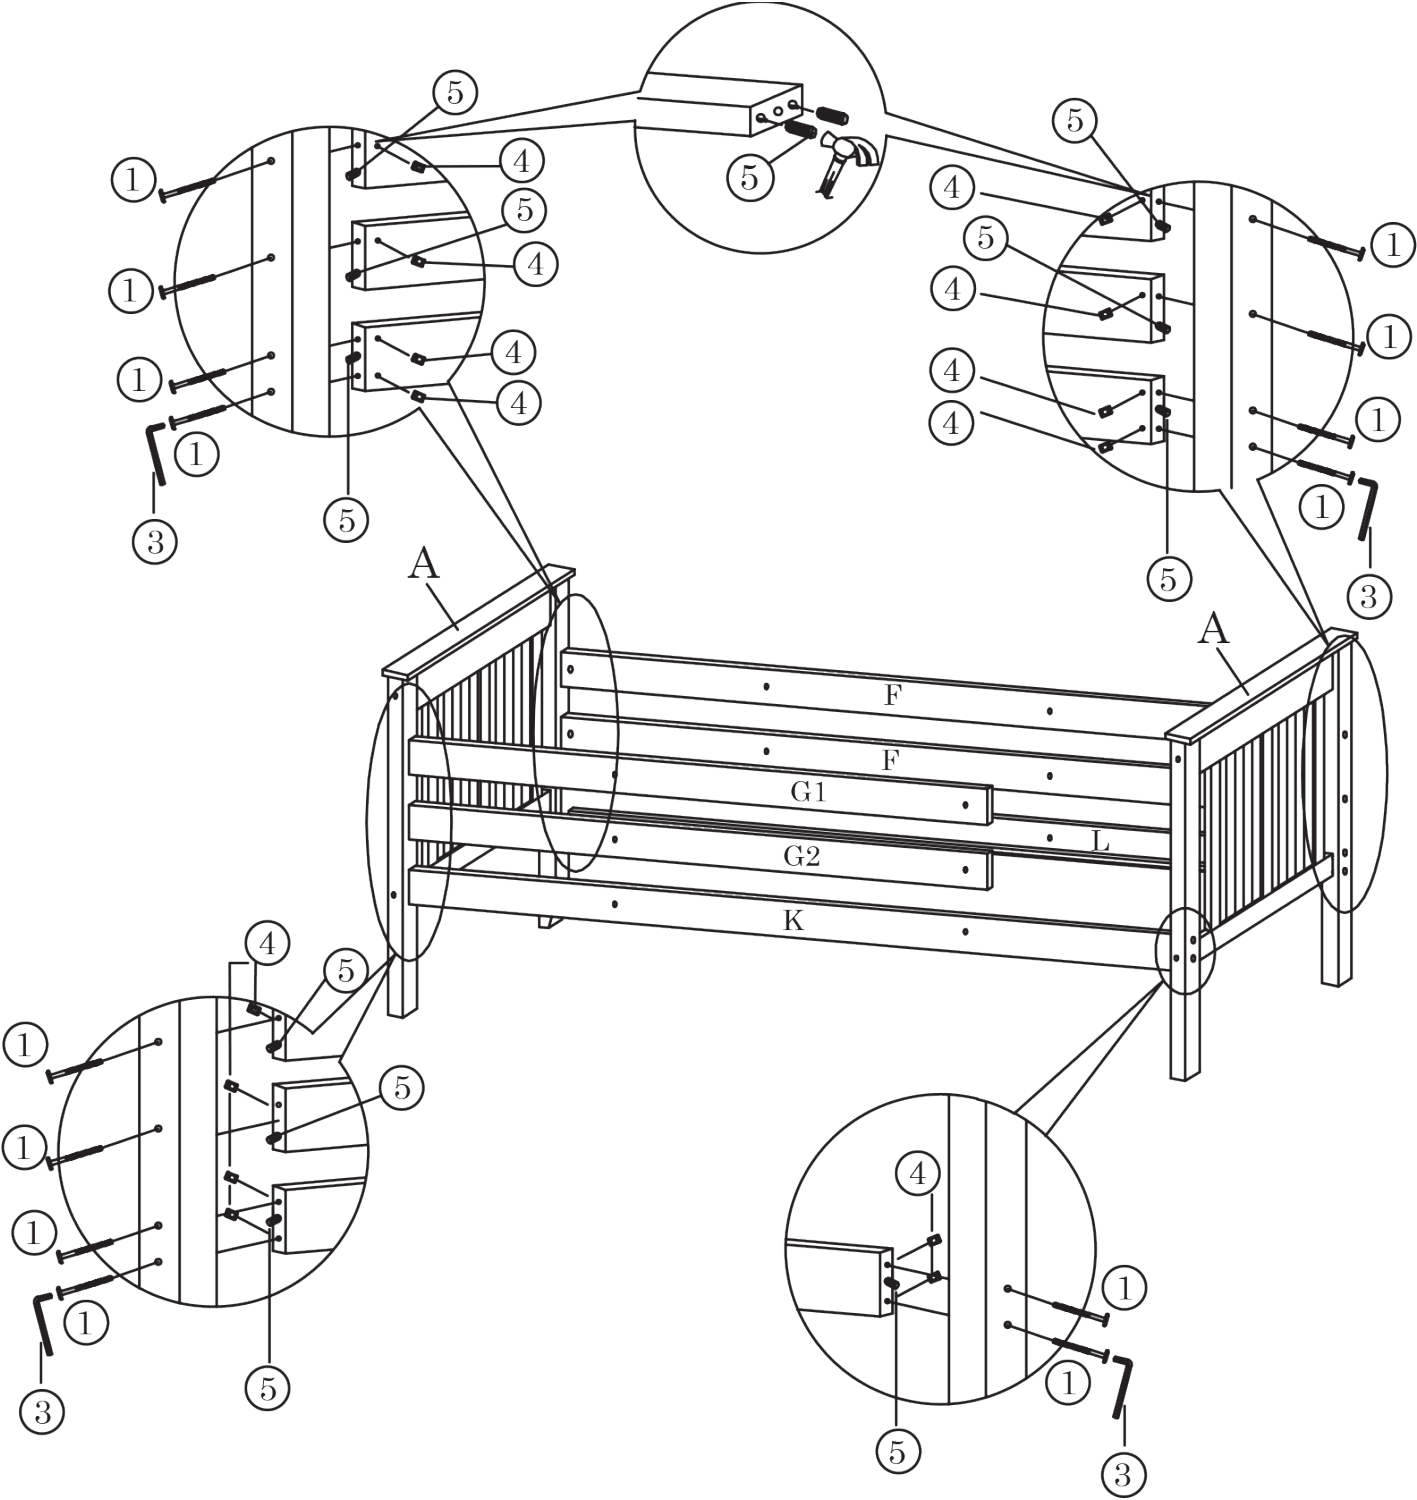

5.

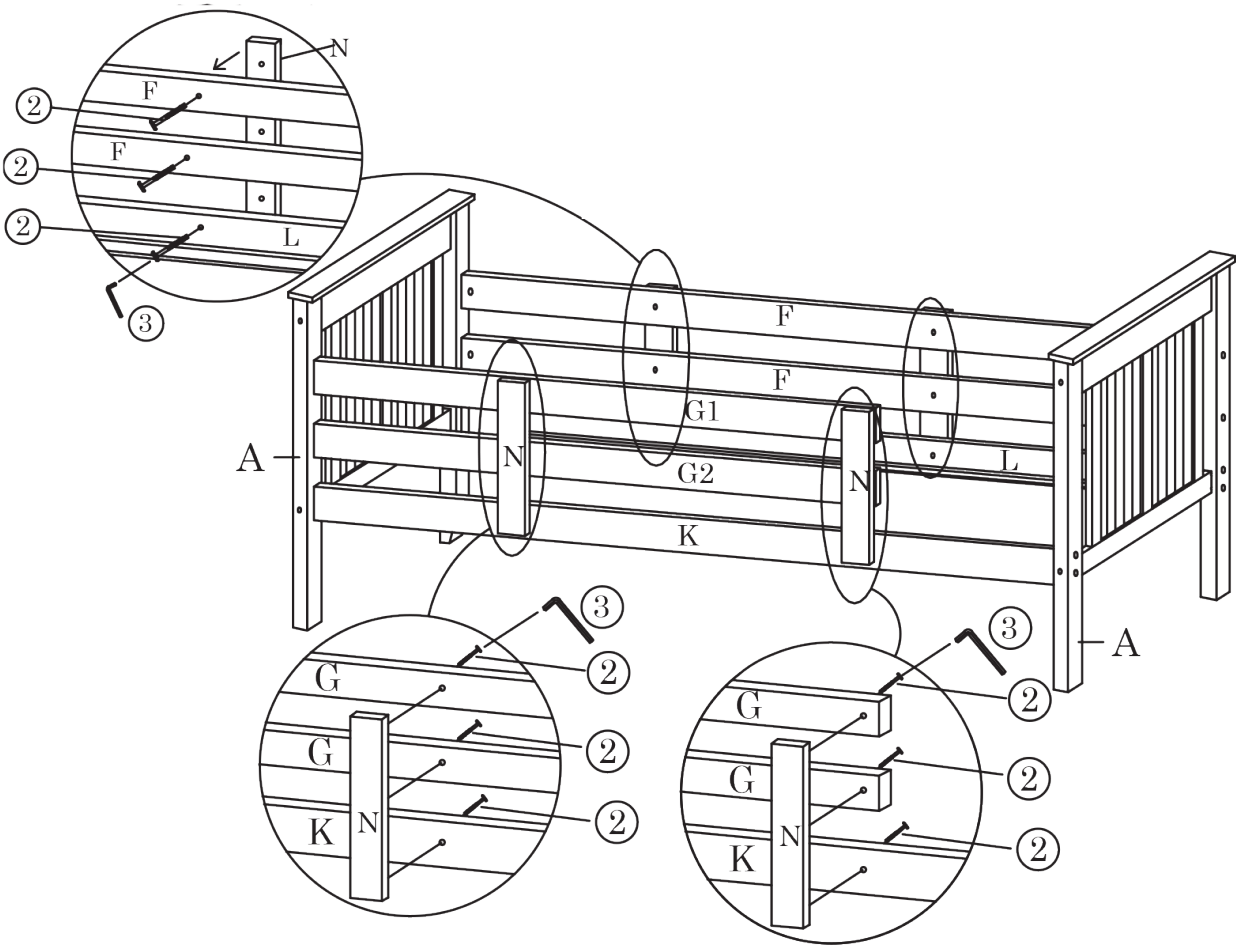


6.

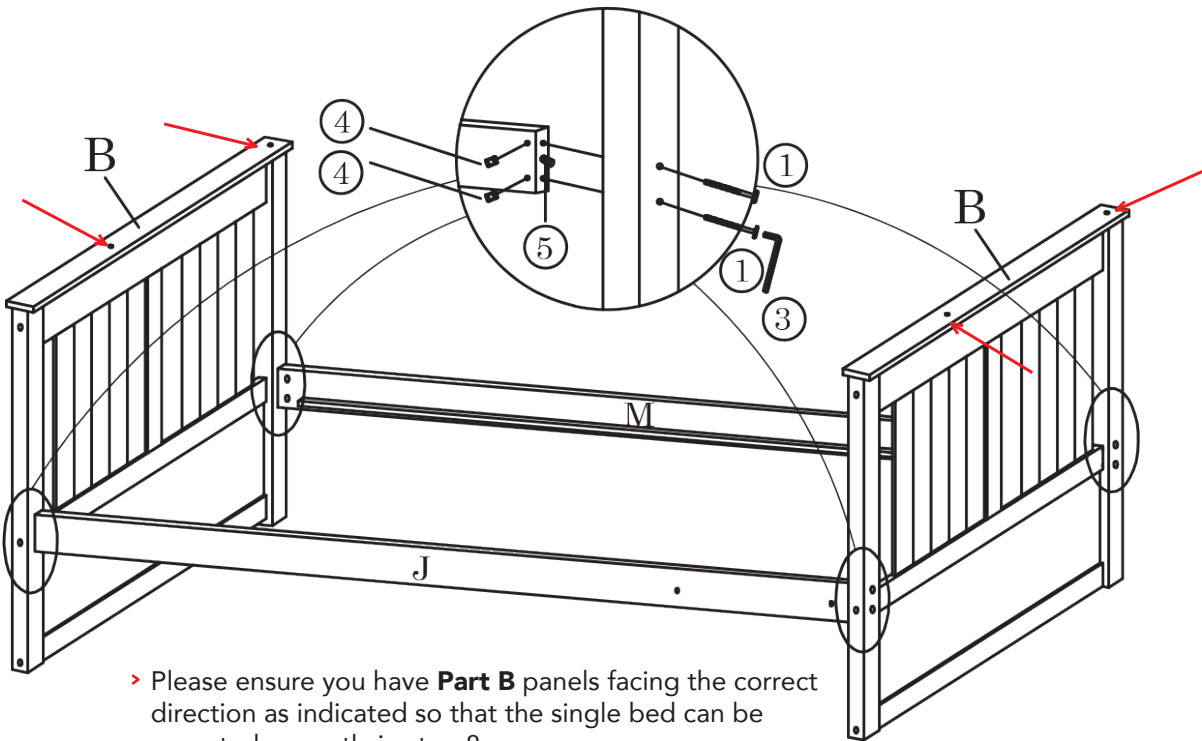


> Please ensure you have **Part B** panels facing the correct direction as indicated so that the single bed can be mounted correctly in step 8


7.

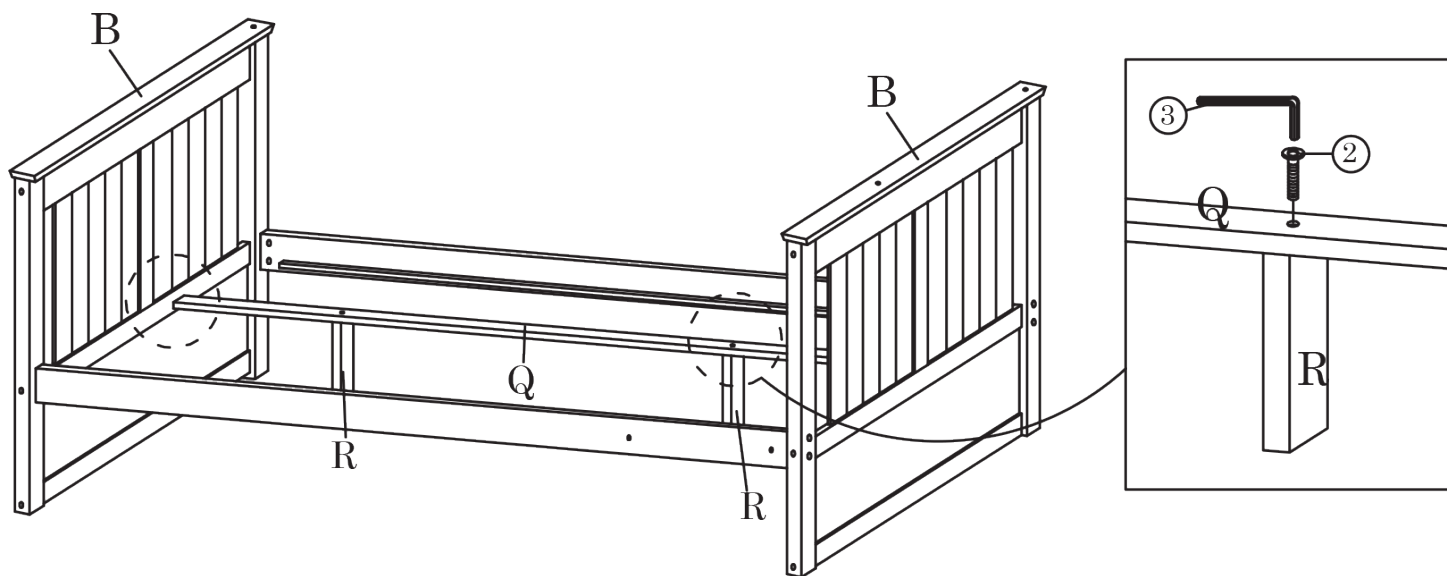


8.

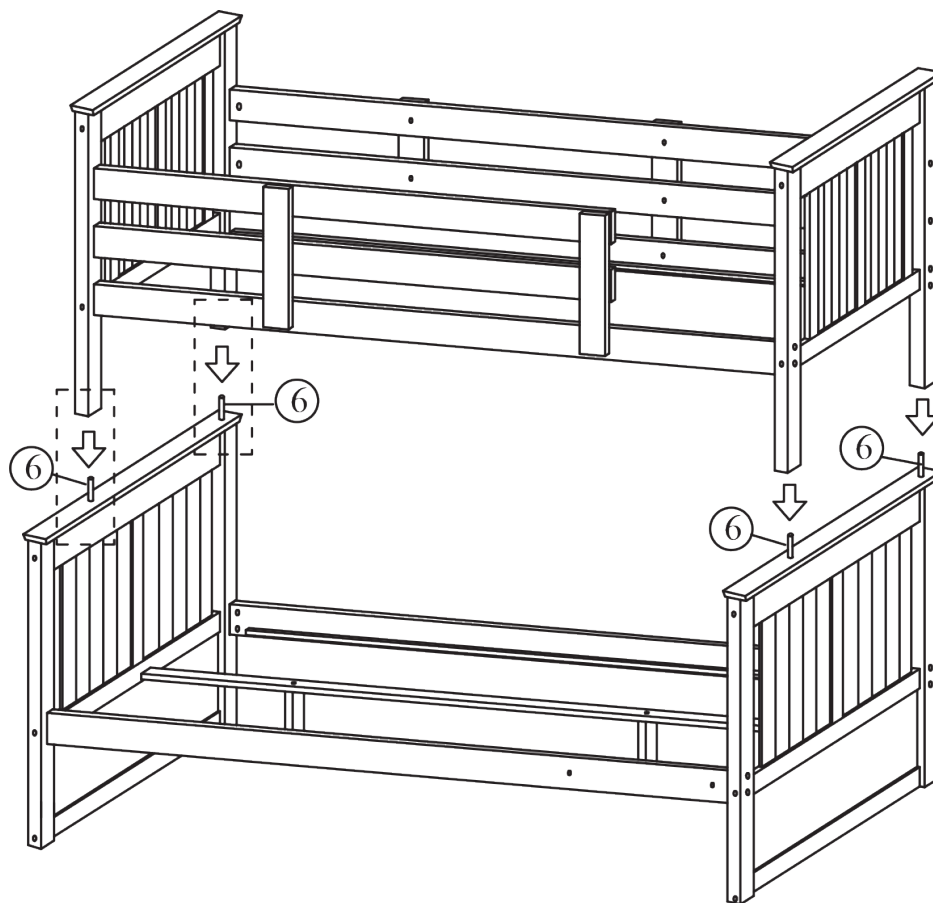


9.

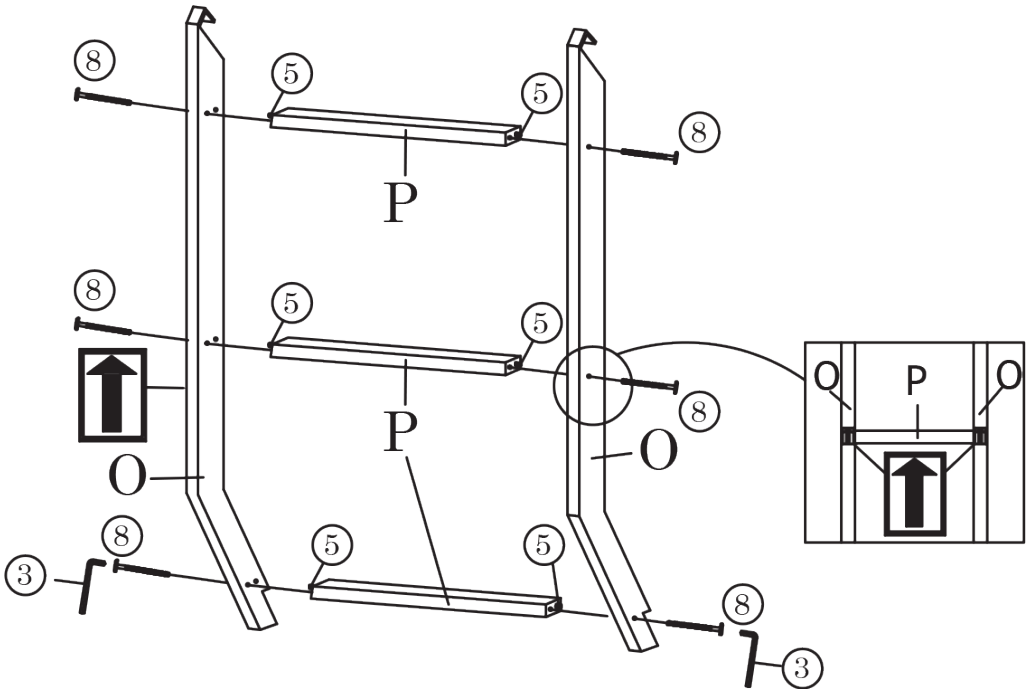


10.

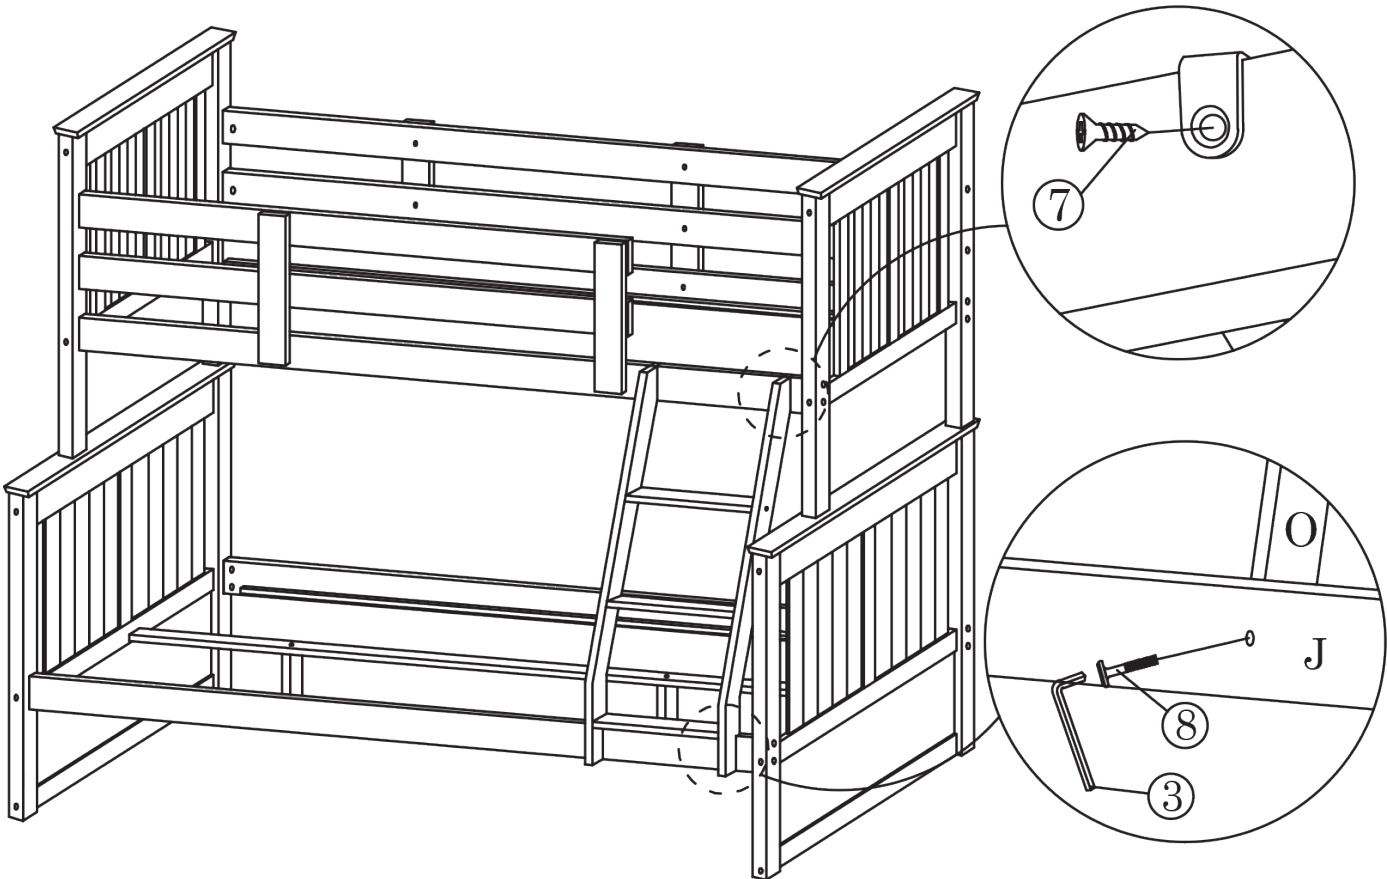

11.

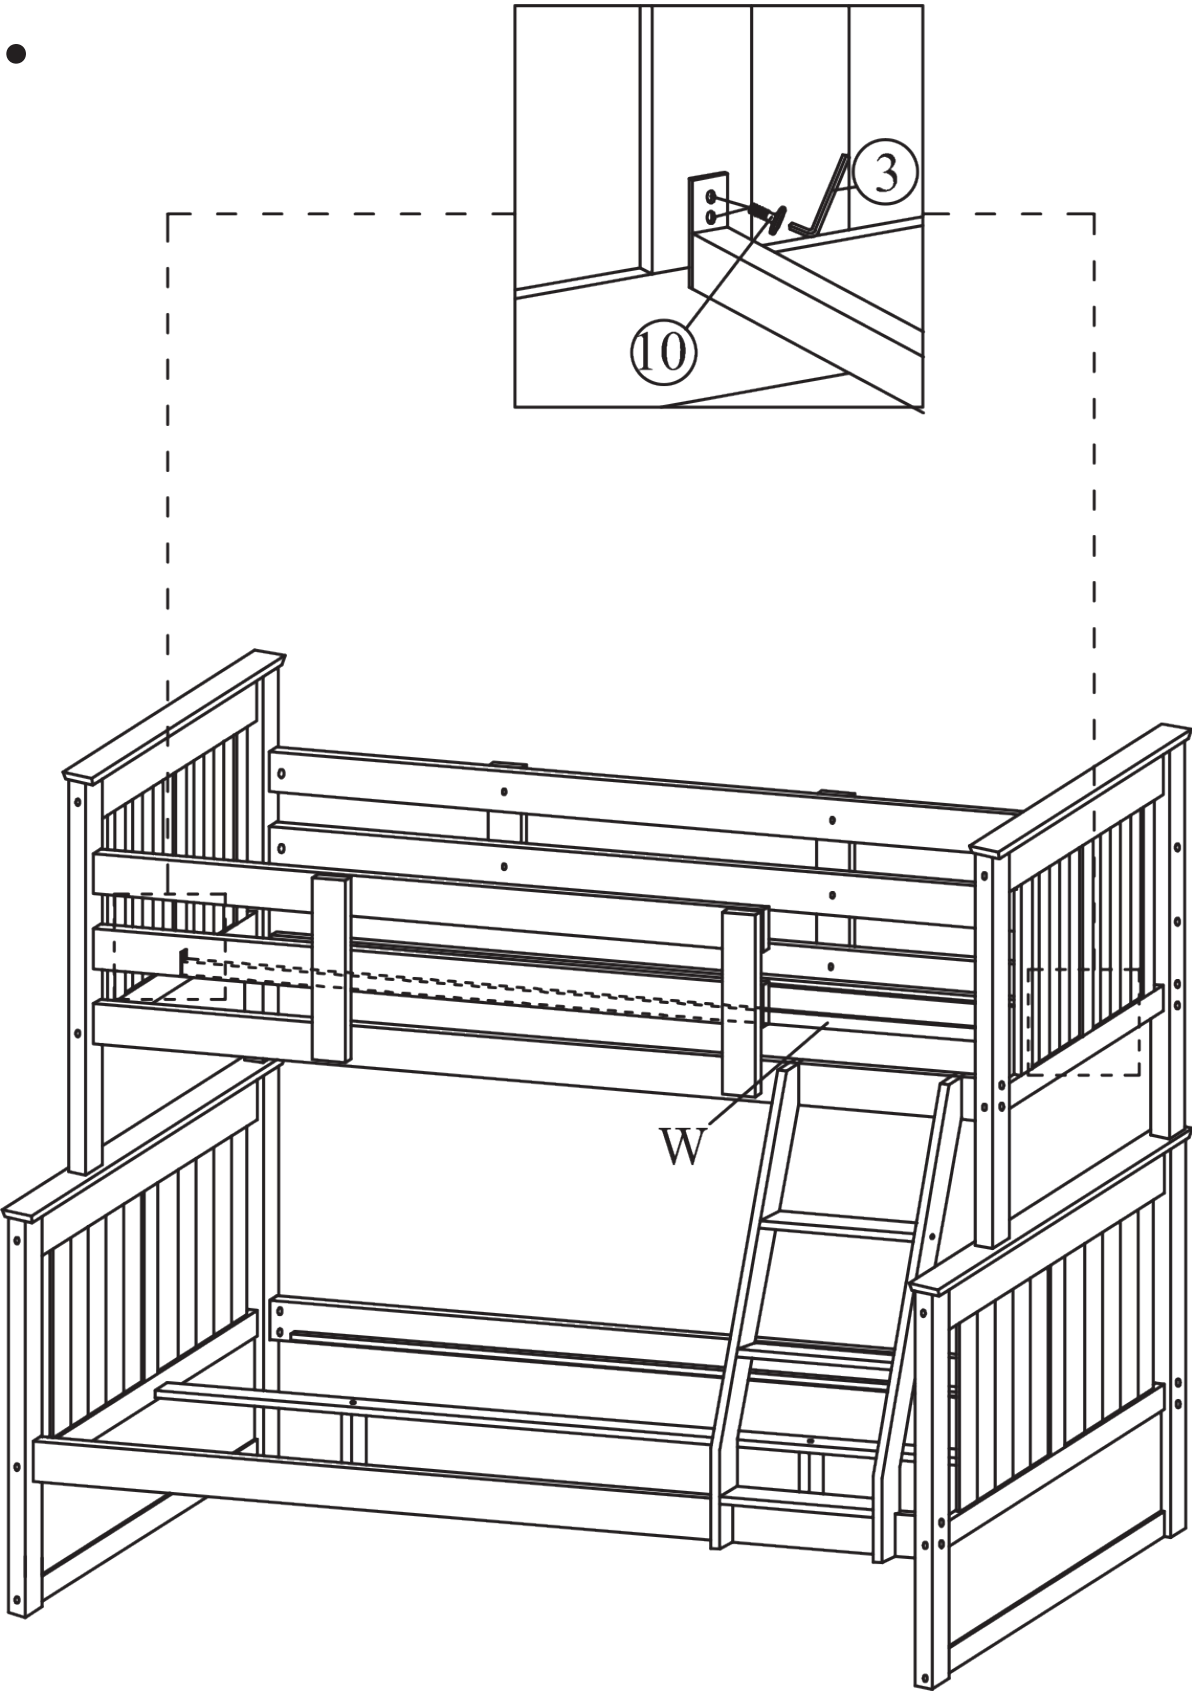


12.

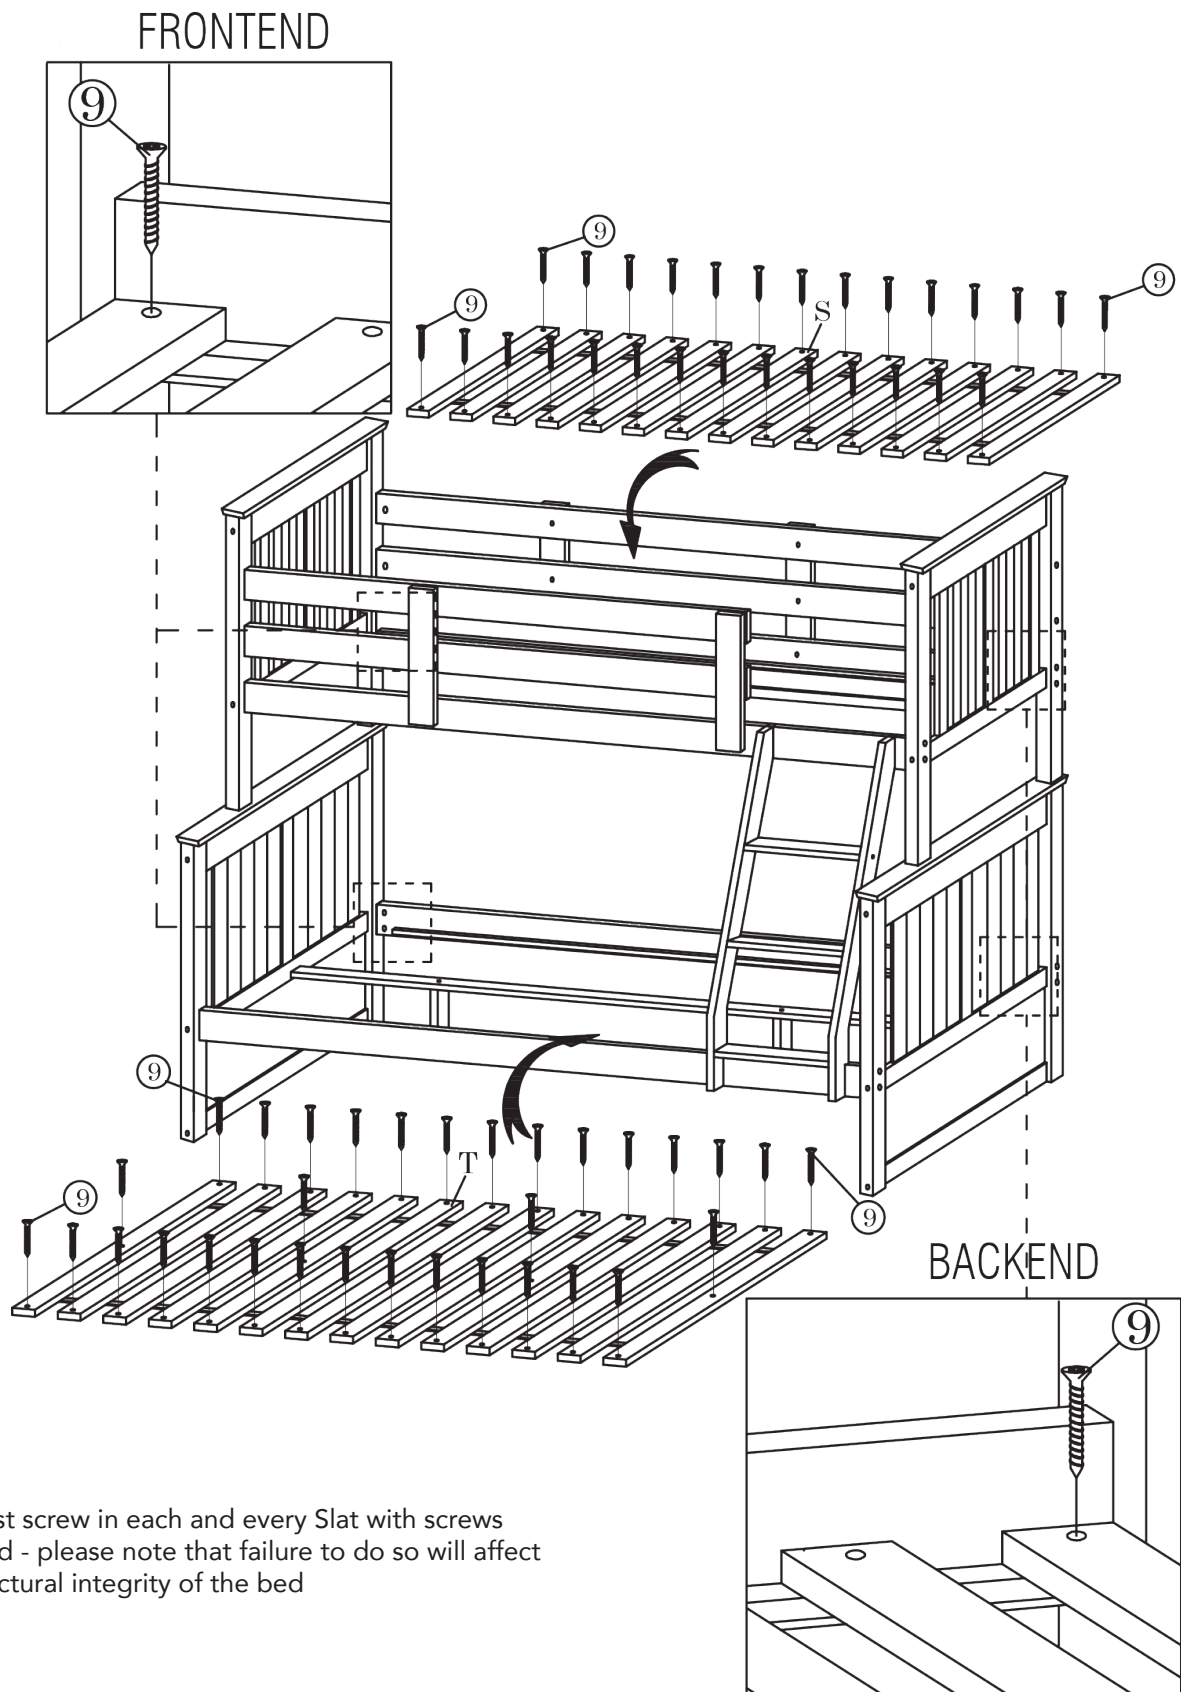

You must screw in each and every Slat with screws provided - please note that failure to do so will affect the structural integrity of the bed

13.

Separated beds set up

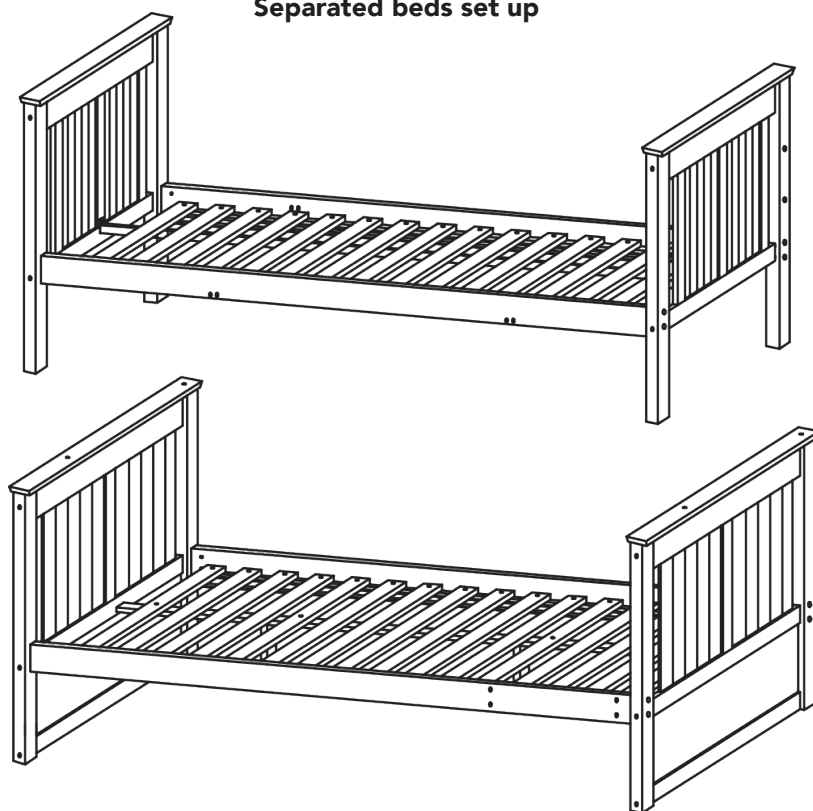

14.

Completed bunk set up

